

# SoMachine

## Modbus and ASCII Read/Write Functions PLCCommunication Library Guide

09/2016

---

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

No part of this document may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without express written permission of Schneider Electric.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

© 2016 Schneider Electric. All rights reserved.

---

# Table of Contents

---



	<b>Safety Information</b> .....	<b>5</b>
	<b>About the Book</b> .....	<b>7</b>
<b>Chapter 1</b>	<b>Communication Principles</b> .....	<b>11</b>
	Communication Functions on Controllers .....	<b>12</b>
	Generic Parameters .....	<b>13</b>
<b>Chapter 2</b>	<b>Data Types</b> .....	<b>17</b>
	CommunicationErrorCodes: Communication Error Codes .....	<b>18</b>
	OperationErrorCodes: Operation Error Codes .....	<b>19</b>
	LinkNumber: Communication Port Number .....	<b>20</b>
	ObjectType: Available Object Types to be Read/Written .....	<b>21</b>
	ADDRESS: External Device Address .....	<b>22</b>
	ADDR_EXT: Address Extension .....	<b>23</b>
	TCP_ADDR_EXT: Address Extension for TCP Devices .....	<b>24</b>
<b>Chapter 3</b>	<b>Function Block Descriptions</b> .....	<b>25</b>
	ADDM: Convert a String into an Address .....	<b>26</b>
	READ_VAR: Read Data from a Modbus Device .....	<b>31</b>
	WRITE_VAR: Write Data to a Modbus Device .....	<b>33</b>
	WRITE_READ_VAR: Read and Write Internal Registers on a Modbus Device .....	<b>35</b>
	SINGLE_WRITE: Write a Single Register to a Modbus Device .....	<b>38</b>
	SEND_RECV_MSG: Send and/or Receive User Defined Messages .....	<b>40</b>
<b>Appendices</b> .....		<b>45</b>
<b>Appendix A</b>	<b>Function and Function Block Representation</b> .....	<b>47</b>
	Differences Between a Function and a Function Block .....	<b>48</b>
	How to Use a Function or a Function Block in IL Language .....	<b>49</b>
	How to Use a Function or a Function Block in ST Language .....	<b>52</b>
<b>Glossary</b> .....		<b>55</b>
<b>Index</b> .....		<b>59</b>



---

# Safety Information

---



## Important Information

### NOTICE

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

## **DANGER**

**DANGER** indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

## **WARNING**

**WARNING** indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

## **CAUTION**

**CAUTION** indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

## **NOTICE**

**NOTICE** is used to address practices not related to physical injury.

---

## PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

---

# About the Book

---



## At a Glance

### Document Scope

This document describes the PLCCommunication library for controllers.

### Validity Note

This document has been updated for the release of SoMachine V4.2.

### Product Related Information

## WARNING

### LOSS OF CONTROL

- The designer of any control scheme must consider the potential failure modes of control paths and, for certain critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop and overtravel stop, power outage and restart.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of unanticipated transmission delays or failures of the link.
- Observe all accident prevention regulations and local safety guidelines.<sup>1</sup>
- Each implementation of this equipment must be individually and thoroughly tested for proper operation before being placed into service.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

<sup>1</sup> For additional information, refer to NEMA ICS 1.1 (latest edition), "Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control" and to NEMA ICS 7.1 (latest edition), "Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems" or their equivalent governing your particular location.

### Terminology Derived from Standards

The technical terms, terminology, symbols and the corresponding descriptions in this manual, or that appear in or on the products themselves, are generally derived from the terms or definitions of international standards.

In the area of functional safety systems, drives and general automation, this may include, but is not limited to, terms such as *safety*, *safety function*, *safe state*, *fault*, *fault reset*, *malfunction*, *failure*, *error*, *error message*, *dangerous*, etc.

Among others, these standards include:

Standard	Description
EN 61131-2:2007	Programmable controllers, part 2: Equipment requirements and tests.
ISO 13849-1:2008	Safety of machinery: Safety related parts of control systems. General principles for design.
EN 61496-1:2013	Safety of machinery: Electro-sensitive protective equipment. Part 1: General requirements and tests.
ISO 12100:2010	Safety of machinery - General principles for design - Risk assessment and risk reduction
EN 60204-1:2006	Safety of machinery - Electrical equipment of machines - Part 1: General requirements
EN 1088:2008 ISO 14119:2013	Safety of machinery - Interlocking devices associated with guards - Principles for design and selection
ISO 13850:2006	Safety of machinery - Emergency stop - Principles for design
EN/IEC 62061:2005	Safety of machinery - Functional safety of safety-related electrical, electronic, and electronic programmable control systems
IEC 61508-1:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems: General requirements.
IEC 61508-2:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems: Requirements for electrical/electronic/programmable electronic safety-related systems.
IEC 61508-3:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems: Software requirements.
IEC 61784-3:2008	Digital data communication for measurement and control: Functional safety field buses.
2006/42/EC	Machinery Directive
2014/30/EU	Electromagnetic Compatibility Directive
2014/35/EU	Low Voltage Directive

In addition, terms used in the present document may tangentially be used as they are derived from other standards such as:

Standard	Description
IEC 60034 series	Rotating electrical machines
IEC 61800 series	Adjustable speed electrical power drive systems
IEC 61158 series	Digital data communications for measurement and control – Fieldbus for use in industrial control systems



---

Finally, the term *zone of operation* may be used in conjunction with the description of specific hazards, and is defined as it is for a *hazard zone* or *danger zone* in the *Machinery Directive (2006/42/EC)* and *ISO 12100:2010*.

**NOTE:** The aforementioned standards may or may not apply to the specific products cited in the present documentation. For more information concerning the individual standards applicable to the products described herein, see the characteristics tables for those product references.



---

# Chapter 1

## Communication Principles

---

### Introduction

The communication function blocks for the controller are located in the PLCCommunication library. This library is automatically added to the library manager when a controller with Ethernet connectivity is added to your project or when a Modbus or ASCII manager is added to a controller's serial line.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Communication Functions on Controllers	12
Generic Parameters	13

## Communication Functions on Controllers

### Introduction

This topic describes management and operations of the controllers' communication functions. The functions facilitate communications between specific devices. Most of the functions are dedicated to Modbus exchanges. One function (`SEND_RECV_MSG`) is used by an ASCII manager to manage the exchange of data between devices operating on other protocols than Modbus.

**NOTE:** Communication functions are processed asynchronously with regard to the application task that called the function.

**NOTE:** This library is not supported by the ATV IMC Drive Controller.

**NOTE:** Do not use function blocks of the PLCCommunication library on a serial line with a Modbus IScanner configured. This disrupts the Modbus IScanner exchange.

**NOTE:** The Ethernet port of the HMI SCU controller is not supported for Modbus communication.

**NOTE:** The HMI SCU controller do not allow adding the **ASCII Manager** node under COM1 node.

### Available Function Blocks

This table describes the communication function blocks available to controllers:

Function	Description
ADDM <i>(see page 26)</i>	This function takes the destination address of an external device and converts its string representation to an ADDRESS structure.
READ_VAR <i>(see page 31)</i>	This function reads standard bits or registers from a Modbus device.
WRITE_VAR <i>(see page 33)</i>	This function writes standard bits or registers to a Modbus device.
WRITE_READ_VAR <i>(see page 35)</i>	This function reads and writes standard bits or registers on Modbus devices.
SINGLE_WRITE <i>(see page 38)</i>	This function writes a single register to an external device.
SEND_RECV_MSG <i>(see page 40)</i>	This function sends and receives user defined messages on selected media for example, a serial line (not supported by XBT GC, XBT GT, XBT GK and HMI SCU).

## Generic Parameters

### Introduction

This topic describes the management and operations of the controllers' communication functions using the `READ_VAR` function block as an example. (The PLCopen standard defines rules for function blocks.)

**NOTE:** These parameters are common to all PLCCommunication function blocks (except ADDM).

### Graphical Representation

The parameters that are common to all function blocks in the PLCCommunication library are highlighted in this graphic:



### Common Parameters

These parameters are shared by several function blocks in the PLCCommunication library:

Input	Type	Comment
Execute	BOOL	The function is executed on the rising edge of this input. <b>NOTE:</b> When <code>xExecute</code> is set to TRUE at the first task cycle in RUN after a cold or warm reset, the rising edge is not detected.
Abort	BOOL	Aborts the ongoing operation at the rising edge
Addr	ADDRESS	Address of the targeted external device (can be the output of the ADDM function block ( <a href="#">see page 26</a> ))
Timeout	WORD	Exchange timeout is a multiple of 100 ms (0 for infinite) <b>NOTE:</b> The Timeout time is fixed at $\approx 1$ s for the HMI SCU and cannot be set for the Modbus communication function blocks.
<b>NOTE:</b> A function block operation may require several exchanges. The timeout applies to each exchange between the controller and the modem, so the global duration of the function block might be longer than the timeout.		

Output	Type	Comment
Done	BOOL	Done is set to TRUE when the function is completed successfully.

Output	Type	Comment
Busy	BOOL	Busy is set to TRUE while the function is ongoing.
Aborted	BOOL	Aborted is set to TRUE when the function is aborted with the Abort input. When the function is aborted, CommError contains the code Canceled - 16#02 (exchange stopped by a user request).
Error	BOOL	Error is set to TRUE when the function stops because of a detected error. When there is a detected error, CommError and OperError contain information about the detected error.
CommError	BYTE	CommError contains communication error codes ( <i>see page 18</i> ).
OperError	DWORD	OperError contains operation error codes ( <i>see page 19</i> ).

**NOTE:**

As soon as the Busy output is reset to 0, one (and only one) of these 3 outputs is set to 1:


- Done
- Error
- Aborted

Function blocks require a rising edge in order to be initiated. The function block needs to first see the Execute input as false in order to detect a subsequent rising edge.

⚠ WARNING
UNINTENDED EQUIPMENT OPERATION
Always make the first call to a function block with its Execute input set to FALSE so that it will detect a subsequent rising edge.
<b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b>

## Function Execution


The function starts at the rising edge of the `Execute` input. The `Busy` output is then set to `TRUE`. This figure shows the function block's behavior when the operation is automatically completed (with or without detected errors):

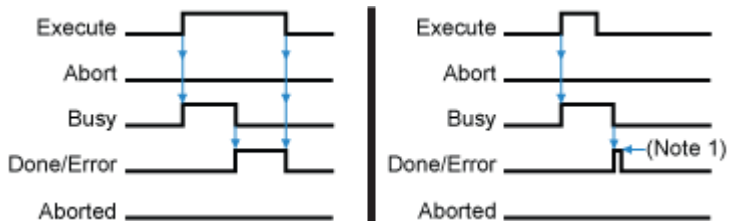

**Note 1:** The `Done` or `Error` bit is set to `TRUE` during a task cycle only if `Execute` has already been reset to `FALSE` when the operation ended.

## Function Aborted

This figure shows the function being aborted by the application. The rising edge of the `Abort` input cancels the ongoing function. In such cases, the aborted output is set to 1 and `CommError` contains the code `Canceled - 16#02` (exchange stopped by a user request):

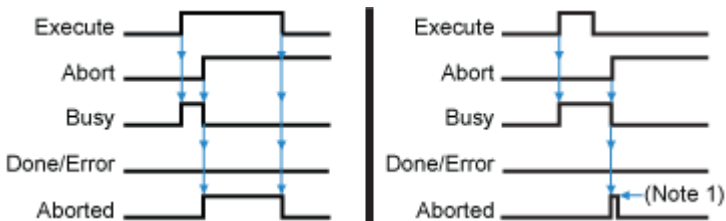

**Note 1:** The `Abort` bit is set to `TRUE` during a task cycle only if `Execute` has already been reset to `FALSE` when the abort request occurred.





---

# Chapter 2

## Data Types

---

### Introduction

This chapter describes the data types used by the PLCCommunication library.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
CommunicationErrorCodes: Communication Error Codes	18
OperationErrorCodes: Operation Error Codes	19
LinkNumber: Communication Port Number	20
ObjectType: Available Object Types to be Read/Written	21
ADDRESS: External Device Address	22
ADDR_EXT: Address Extension	23
TCP_ADDR_EXT: Address Extension for TCP Devices	24

## CommunicationErrorCodes: Communication Error Codes

### Enumerated Type Description

The `CommunicationErrorCodes` enumerated type contains information about communication diagnostics, such as interruptions and detected errors. It contains these values:

Enumerator	Value (hex)	Description
<code>CommunicationOK</code>	00	The exchange is valid.
<code>TimedOut</code>	01	The exchange stopped when the timeout expired.
<code>Canceled</code>	02	The exchange was stopped by a user request (the <code>Abort</code> command).
<code>BadAddress</code>	03	The address format is incorrect.
<code>BadRemoteAddr</code>	04	The remote address is incorrect.
<code>BadMgtTable</code>	05	The management table format is incorrect.
<code>BadParameters</code>	06	Specific parameters are incorrect.
<code>ProblemSendingRq</code>	07	There was a problem while sending the request to the destination.
<code>RecvBufferTooSmall</code>	09	The reception buffer size is too small.
<code>SendBufferTooSmall</code>	0A	The transmission buffer size is too small.
<code>SystemRessourceMissing</code>	0B	A system resource is missing.
<code>BadTransactionNb</code>	0C	The transaction number is incorrect.
<code>BadLength</code>	0E	The length is incorrect.
<code>ProtocolSpecificError</code>	FE	The operation error code contains a protocol-specific code.
<code>Refused</code>	FF	The message was refused.

## OperationErrorCodes: Operation Error Codes

### Enumerated Type Description

The `OperationErrorCodes` enumerated type contains codes that correspond to detected errors.

#### 00

When the communication error code is 00 hex (correct transaction), the `OperationErrorCodes` enumerated type can return these values:

Enumerator	Value (hex)	Description
<code>OperationOK</code>	00	The exchange is valid.
<code>NotProcessed_or_TargetResourceMissing</code>	01	The request has not been processed.
<code>BadResponse</code>	02	The received response is incorrect.

#### FF

When the communication error code is FF hex (message refused), the `OperationErrorCodes` enumerated type can return these values:

Enumerator	Value (hex)	Description
<code>NotProcessed_or_TargetResourceMissing</code>	01	The target system's resource is absent.
<code>BadLength</code>	05	The length is incorrect.
<code>CommChannelErr</code>	06	The communication channel is associated with a detected error.
<code>BadAddr</code>	07	The address is incorrect.
<code>SystemResourceMissing</code>	0B	A system resource is missing.
<code>TargetCommInactive</code>	0C	A target communication function is not active.
<code>TargetMissing</code>	0D	The target is absent.
<code>ChannelNotConfigured</code>	0F	The channel is not configured.

#### FE

When the communication error code is FE hex, the `OperationErrorCodes` enumerated type contains the protocol-specific error detection code. (Refer to your specific protocol's error detection codes.)

## LinkNumber: Communication Port Number

### Enumerated Type Description

The `LinkNumber` enumerated data type is a list of the available communication ports. It contains these values:

Enumerator	Value (hex)	Description
<code>USBConsole</code>	00	USB port not available for communication exchanges
<code>COM1</code>	01	Serial COM 1 (embedded serial link)
<code>COM2</code>	02	Serial COM 2
<code>EthEmbed</code>	03	Embedded Ethernet link
<code>CANEmbed</code>	04	Embedded CANopen link
<code>COM3</code>	05	Serial COM 3

If one serial PCI module is installed then the serial PCI module link is `COM2`, regardless of the physical PCI slots used.

If two serial PCI modules are installed then the serial PCI module plugged on the left side PCI slots is `COM2` and the serial PCI module plugged on the right side PCI slots is `COM3`.

## ObjectType: Available Object Types to be Read/Written

### Enumerated Type Description

The `ObjectType` enumerated data type contains the object types that are available for reading and/or writing.

The table below lists the data type values, the corresponding object types and the Modbus request function codes associated with each function block:

Enumerator	Value (hex)	Object Type)	Read / Write Functions and associated Modbus Request Function Code			
			READ_VAR	WRITE_VAR	SINGLE_WRITE	WRITE_READ_VAR
MW	00	Holding Register (16 bits)	#3 (Read Holding Registers)	#16 (Write Multiple Registers)	#6 (Write Single Register)	#23 (Write-Read Multiple Registers)
I	01	Digital Input (1 bit)	#2 (Read Digital Inputs)	—	—	—
Q	02	Internal bit or Digital output (coil) (1 bit)	#1 (Read Coils)	#15 (Write Multiple Coils)	—	—
IW	03	Input register (16 bits)	#4 (Read Input Registers)	—	—	—

## ADDRESS: External Device Address

### Structure Description

The ADDRESS data structure contains the external device address. It contains these variables:

Variable	Type	Description
_Type	BYTE	Reserved
_CliID	BYTE	Reserved
Rack	BYTE	Rack number (always 0)
Module	BYTE	Module number (always 0)
Link	LinkNumber <i>(see page 20)</i>	Communication port number
_ProtId	BYTE	Reserved (0 for Modbus)
AddrLen	BYTE	Length of UnitId and AddrExt variables (in bytes)
UnitId	BYTE	Equipment number (e.g., Modbus slave address)
AddrExt	ADDR_EXT <i>(see page 23)</i>	Contains an address extension as an array or as a specific structure

## ADDR\_EXT: Address Extension

### Union Description

ADDR\_EXT is a UNION data type that contains an address extension as an array or as a specific structure for the TCP/IP address. It contains these variables:

Variable	Type	Description
as_array	ARRAY [0...7] OF BYTE	Reserved (open for other protocol addressing)
TcpAddr	TCP_ADDR_EXT	The specific structure for TCP remote devices

## TCP\_ADDR\_EXT: Address Extension for TCP Devices

### Structure Description

The TCP\_ADDR\_EXT structure data type contains the address extension for TCP external devices. It contains these variables:

Variable	Type	Description
A	BYTE	First value in IP address A.B.C.D
B	BYTE	Second value in IP address A.B.C.D
C	BYTE	Third value in IP address A.B.C.D
D	BYTE	Last value in IP address A.B.C.D
port	WORD	TCP port number (Modbus default: 502)



---

# Chapter 3

## Function Block Descriptions

---

### Introduction

This chapter describes the function blocks in the PLCCommunication library.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
ADDM: Convert a String into an Address	26
READ_VAR: Read Data from a Modbus Device	31
WRITE_VAR: Write Data to a Modbus Device	33
WRITE_READ_VAR: Read and Write Internal Registers on a Modbus Device	35
SINGLE_WRITE: Write a Single Register to a Modbus Device	38
SEND_RECV_MSG: Send and/or Receive User Defined Messages	40

## ADDM: Convert a String into an Address

### Function Description

The ADDM function block converts a destination address that is represented as a string to an ADDRESS structure. You can use the ADDRESS structure as an entry in a communication function block.

### Graphical Representation



### ADDM - Specific Parameter Description

Input/Output	Type	Comment
AddrTable	ADDRESS	This is the ADDRESS structure to be filled by the function block.

Input	Type	Comment
Execute	BOOL	Executes the function at the rising edge.
Addr	STRING	Address in STRING type to be converted in ADDRESS type (see details below).

Output	Type	Comment
Done	BOOL	Done is set to TRUE when the function is completed successfully. <b>NOTE:</b> When the operation is aborted with the Abort input, Done is not set to 1 (only Aborted).
Error	BOOL	Error is set to TRUE when the function stops due to detection of an error. When there is a detected error, CommError and OperError contain information about the detected error.
CommError	BYTE	CommError contains communication error codes ( <i>see page 18</i> ).

**NOTE:** A rising edge on the Execute input executes the conversion and returns an immediate update of AddrTable. However, AddrTable retains the last value when an error is detected (that is, when the Addr string is not correct).

Function blocks require a rising edge in order to be initiated. The function block needs to first see the Execute input as FALSE in order to detect a subsequent rising edge.

## ⚠ WARNING

### UNINTENDED EQUIPMENT OPERATION

Always make the first call to a function block with its `Execute` input set to `FALSE` so that it may detect a subsequent rising edge.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### Addr STRING for ASCII Address Format

For ASCII addressing, only the communication port number is requested:

'<communication port number>'

For example, to send a user defined message on serial line 2, use the string '2'.

This table defines the fields in the ADDM output for the ASCII address format:

Field	Type	Value	Example
_Type	BYTE	Reserved	not used
_CliID	BYTE	Reserved	not used
Rack	BYTE	Rack number (always 0)	0
Module	BYTE	Module number (always 0)	0
Link	LinkNumber (see page 20)	<communication port number>	2
_ProtId	BYTE	Not used	not used
AddrLen	BYTE	0	0
UnitId	BYTE	Not used	not used
AddrExt	ADDR_EXT	Not used	not used

### Addr STRING for Modbus Serial Address Format

For Modbus serial addressing, use the communication port and the destination slave address (0 to 247), separated by a dot: '<communication port number>.<slave address>'

For example, send a message to slave 8 on serial line 1 with this syntax: '1.8'

The ADDM function fills the `AddrTable` input/output with these values:

Field	Type	Value	Example
_Type	BYTE	Reserved	not used
_CliID	BYTE	Reserved	not used
Rack	BYTE	Rack number (always 0)	0
Module	BYTE	Module number (always 0)	0

Field	Type	Value	Example
Link	LinkNumber (see page 20)	<communication port number>	2
_ProtId	BYTE	0 for Modbus	0
AddrLen	BYTE	1	1
UnitID	BYTE	<slave address>	8
AddrExt	ADDR_EXT	Not used	not used

### Addr STRING for Modbus TCP Address Format

#### Address of a Modbus TCP Standard Slave

For the Modbus TCP standard slave address format, the communication port number (3 for the embedded Ethernet port) and the destination IP address {A.B.C.D} (offset with brackets) are requested:

```
'<communication port number>{<IP address A.B.C.D>}'
```

**NOTE:** A Modbus TCP standard slave uses Modbus address 255 (the UnitId default value). However, a Modbus TCP device may have different value (for example, a Tesys has Modbus address 1). In this case, add the UnitId value.

TCP port 502 is used by default. It's possible to use a non-standard port by adding the requested port number to the IP address:

```
'<communication port number A.B.C.D>{<IP address>:<port>}'
```

For example, to send a message at Modbus TCP slave IP address 192.168.1.2 using standard TCP port 502, use this string: '3{192.168.1.2}'


The ADDM function fills the AddrTable input/output with these values:

Field	Type	Value	Example
_Type	BYTE	Reserved	not used
_CliID	BYTE	Reserved	not used
Rack	BYTE	Rack number	0
Module	BYTE	Module number	0
Link	LinkNumber (see page 20)	<communication port number>	3
_ProtId	BYTE	0 for Modbus	0
AddrLen	BYTE	UnitID + AddrExt length in bytes	7
UnitId	BYTE	Modbus address (255 by default)	255

Field	Type	Value	Example
AddrExt	TCP_ADDR_EXT	A	192
		B	168
		C	1
		D	2
		<port> (default = 502)	502

### Address of a Modbus Serial Slave Through Ethernet/Serial Line Gateway

It's also possible to address a Modbus slave through an Ethernet/serial line gateway:

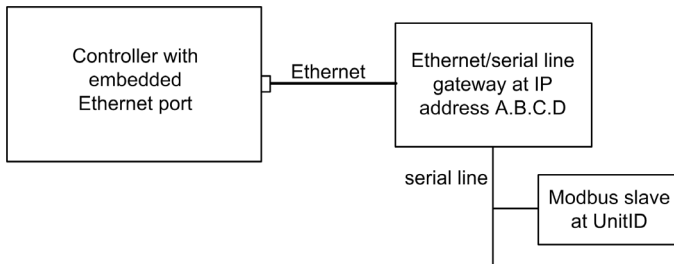

The request includes the communication port number, gateway IP address {A.B.C.D} (offset with brackets with or without TCP port), and the Modbus serial slave address (UnitID parameter):

```
'<communication port number>{<IP address A.B.C.D>}<slave address>'
```

For example, to send a message at Modbus Serial slave address 5 through a Ethernet/serial line gateway at IP address 192.168.1.2 using standard TCP port 502, use this string:

```
'3{192.168.1.2}5'
```


The ADDM function fills the AddrTable input/output with these values:

Field	Size	Value	Example
_Type	BYTE	Reserved	not used
_CliID	BYTE	Reserved	not used
Rack	BYTE	Rack number	0
Module	BYTE	Module number	0
Link	LinkNumber (see page 20)	<communication port number>	3
_ProtId	BYTE	0 for Modbus	0
AddrLen	BYTE	UnitID + AddrExt length in bytes	7
UnitId	BYTE	<Slave address>	5

Field	Size	Value	Example
AddrExt	TCP_ADDR_EX T	A	192
		B	168
		C	1
		D	2
		TCP port number (default = 502)	502

### Example

This example shows the declaration and use of ADDM as an input to the READ\_VAR function block. ADDM converts the address of slave 8 on serial line 1 from the string '1.8' to an ADDRESS type:

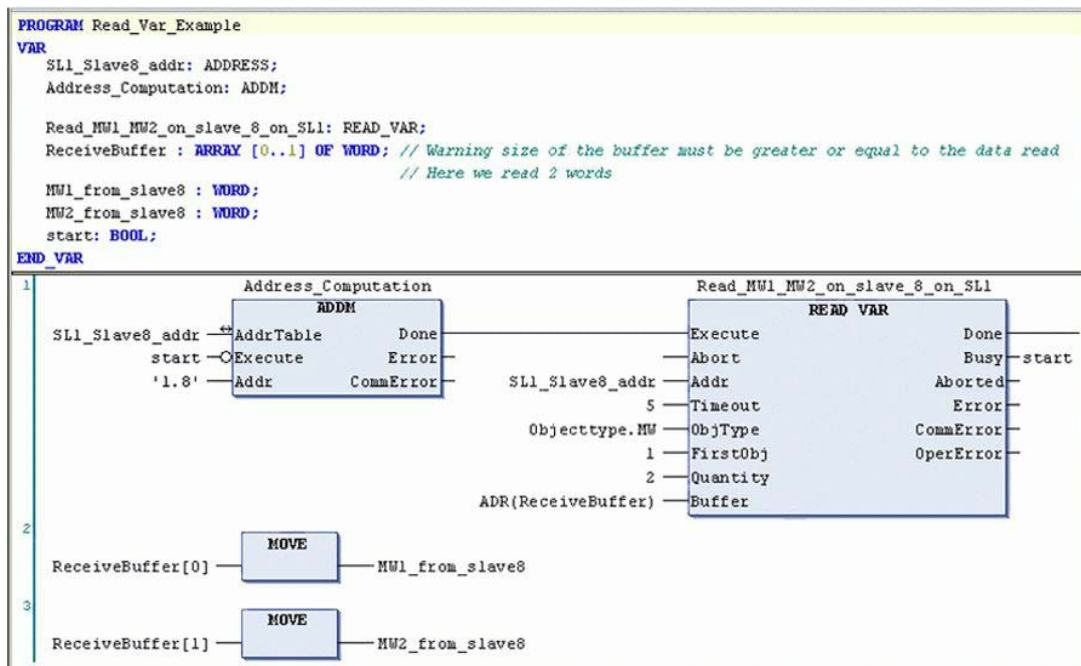

**NOTE:** The Busy output assigned to start allows for the continuous execution of READ\_VAR. The start variable must be set to TRUE (by the user online or the application) after the first cycle to initiate continuous reading. This example does not show the management of any detected communication errors.

## READ\_VAR: Read Data from a Modbus Device

### Function Description

The READ\_VAR function block reads data from an external device in the Modbus protocol.

### Graphical Representation



### READ\_VAR - Specific Parameter Description

Input	Type	Comment
ObjType	ObjectType	ObjType is the type of object to be read (MW, I, IW, Q) <i>(see page 21)</i> .
FirstObj	DINT	FirstObj is the index of the first object to be read.
Quantity	UINT	Quantity is the number of objects to be read: <ul style="list-style-type: none"> <li>● 1...125: registers (MW and IW types)</li> <li>● 1...2000: bits (I and Q types)</li> </ul>
Buffer	POINTER TO BYTE	Buffer is the address of the buffer in which object values are stored. The Addr standard function must be used to define the associated pointer. (See the example below.) The buffer is a table that receives the values that are read in the device. For example, the reading of 4 registers is stored in a table of 4 words and the reading of 32 bits requires a table of 2 words or 4 bytes, each bit of which is set to the corresponding value of the remote device.


**NOTE:** If you execute a multiple download to HMI controllers, and if the WRITE\_VAR or READ\_VAR function blocks are included in the controller application, they may not operate correctly on startup after the download is completed. The HMI may stop functioning, and SoMachine may lose connection with the device for 2 to 3 minutes. For HMI controllers, whenever the READ\_VAR or WRITE\_VAR function blocks are used, if the conditions above occur, restart the HMI controller or wait for the HMI to recover.

The input and output parameters that are common to all PLCCommunication library function blocks are described elsewhere ([see page 13](#)).

### Example

This POU ([see page 56](#)) allows the reading of internal registers 1 and 2 (MW1 and MW2) of the Modbus slave with address 8 on serial line 1.

This figure shows the declaration and use of the READ\_VAR function:

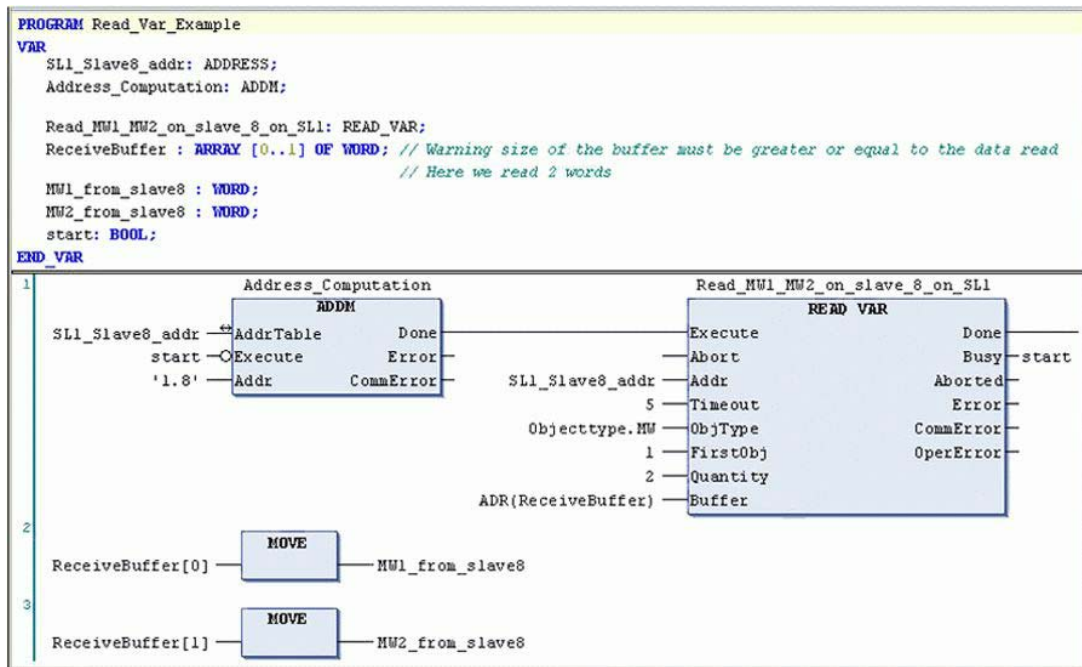

**NOTE:** The **Busy** output assigned to **start** allows for the continuous execution of **ADDM** and **READ\_VAR**. The **start** variable must be set to **TRUE** (online by the user or by the application) after the first cycle to initiate continuous reading. This example does not show the management of exchange errors.



## WRITE\_VAR: Write Data to a Modbus Device

### Function Description

The WRITE\_VAR function block writes data to an external device in the Modbus protocol.

### Graphical Representation



### WRITE\_VAR - Specific Parameter Description

Input	Type	Comment
ObjType	ObjectType	ObjType describes the type of object(s) to write (MW, Q) ( <i>see page 21</i> ).
FirstObj	DINT	FirstObj is the index of the first object to write.
Quantity	UINT	Quantity is the number of objects to be read: <ul style="list-style-type: none"> <li>• 1...123: registers (MW type)</li> <li>• 1...1968: bits (Q type)</li> </ul>
Buffer	POINTER TO BYTE	Buffer is the address of the buffer in which object values are stored. Use the Addr standard function to define the associated pointer. (See the example below.) The buffer is a table that receives the values that have to be written in the device. For example, the written values of 4 registers are stored in a table of 4 words and the written values of 32 bits require a table of 2 words or 4 bytes, each bit of which is set to the corresponding value.

**NOTE:** If you execute a multiple download to HMI controllers, and if the WRITE\_VAR or READ\_VAR function blocks are included in the controller application, they may not operate correctly on startup after the download is completed. The HMI may stop functioning, and SoMachine may lose connection with the device for 2 to 3 minutes. For HMI controllers, whenever the READ\_VAR or WRITE\_VAR function blocks are used, if the conditions above occur, restart the HMI controller or wait for the HMI to recover.

The input and output parameters that are common to all PLCCommunication library function blocks are described elsewhere (*see page 13*).

## ⚠ WARNING


### EXCHANGED DATA INCOMPATIBILITY

Verify that the exchanged data are compatible because data structure alignments are not the same for all devices.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### Example

This POU allows the writing to digital outputs/internal bits 0 to 9 (Q0 to Q9) of a Modbus slave at address 8 on serial line 1:

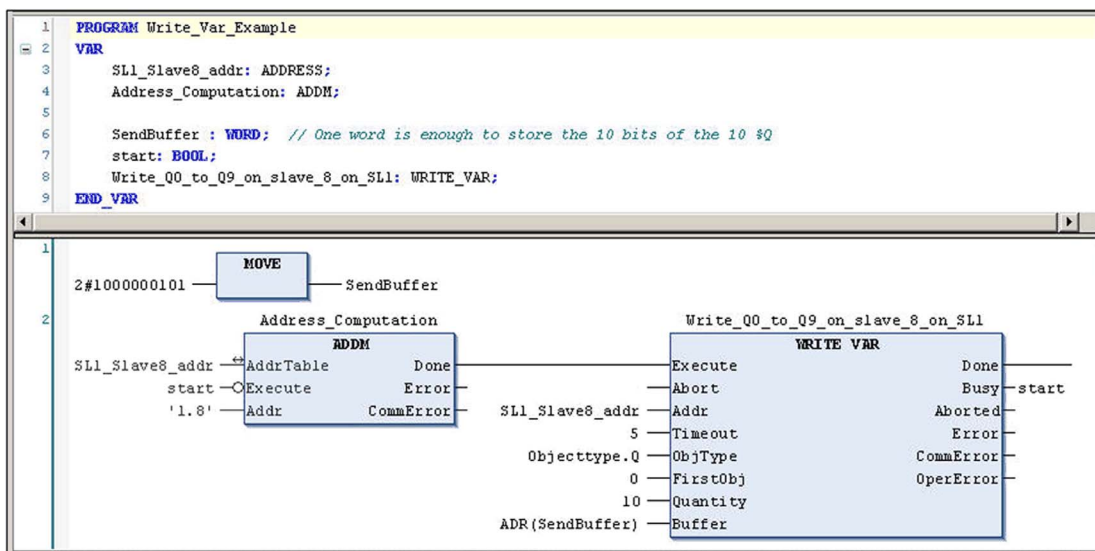

**NOTE:** The `Busy` output assigned to `start` allows for the continuous execution of `ADDM` and `WRITE_VAR`. The `start` variable must be set to `TRUE` (online by the user or by the application) after the first cycle to initiate continuous reading/writing. This example does not show the management of exchange errors.

## WRITE\_READ\_VAR: Read and Write Internal Registers on a Modbus Device


### Function Description

This function reads and writes internal registers (MW type only) to an external device in the Modbus protocol. The read and write operations are contained in a single transaction.

The write operation is performed first. The WRITE\_READ\_VAR function can then:

- write consecutive internal registers and immediately read back their values for verification
- write some consecutive internal registers and read others in a single unique request

### Graphical Representation

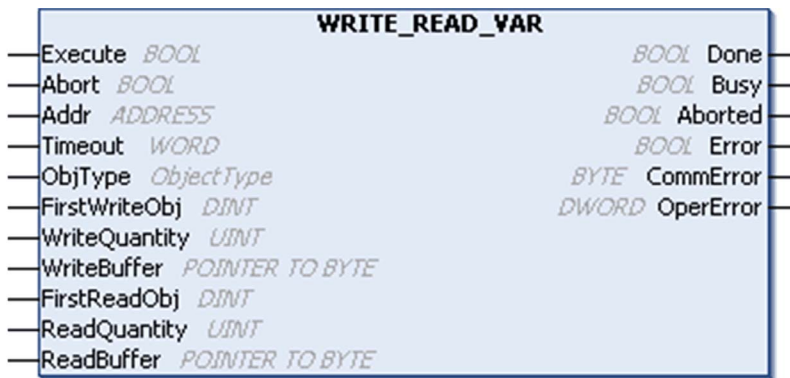

### WRITE\_READ\_VAR - Specific Parameter Description


Input	Type	Comment
ObjType	ObjectType (see page 21)	ObjType is the object type to be written and read (MW only).
FirstWriteObj	DINT	FirstWriteObj is the index of the first object to write.
WriteQuantity	UINT	WriteQuantity is the number of objects to write: <ul style="list-style-type: none"> <li>• 1...121: registers (MW type)</li> </ul>
WriteBuffer	POINTER TO BYTE	WriteBuffer is the address of the buffer in which objects values are stored. Use the Addr standard function to define the associated pointer. (See the example below.) The buffer is a table that receives the values that are written in the device.
FirstReadObj	DINT	ReadFirstObj is the index of the first object to be read.
ReadQuantity	UINT	ReadQuantity represents the number of objects to be read: <ul style="list-style-type: none"> <li>• 1...125: registers (MW type)</li> </ul>

Input	Type	Comment
ReadBuffer	POINTER TO BYTE	ReadBuffer is the address of the buffer in which objects values are stored. Use the Addr standard function must be used to define the associated pointer. (See the example below.) The buffer is a table that receives the values that are read in the device.

The input and output parameters that are common to all PLCCommunication library function blocks are described elsewhere ([see page 13](#)).

### Example

This POU allows the writing to internal registers 1 and 2 (MW1 and MW2) and the reading of internal registers 3 and 4 (MW3 and MW4) of a Modbus slave at address 8 on serial line 1:

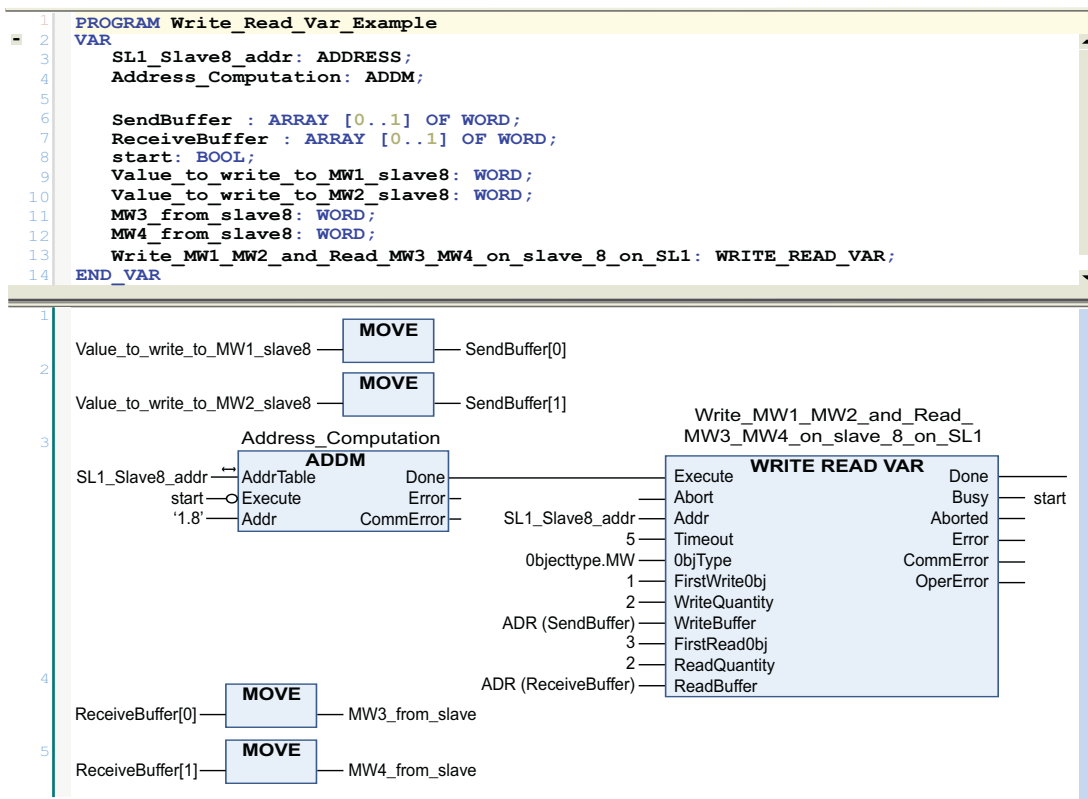


**NOTE:** The `Busy` output assigned to `start` allows for the continuous execution of `ADDM` and `WRITE_READ_VAR`. The `start` variable must be set to `TRUE` (online by the user or by the application) after the first cycle to initiate continuous writing/reading. This example does not show the management of exchange errors.

## SINGLE\_WRITE: Write a Single Register to a Modbus Device

### Function Description

The SINGLE\_WRITE function block writes a single internal register to an external Modbus device.

### Graphical Representation

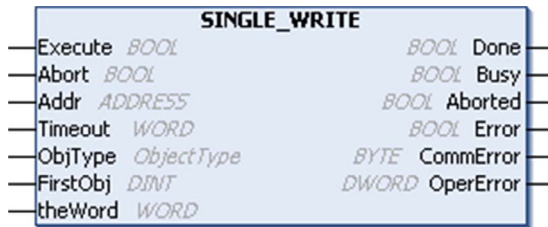


### SINGLE\_WRITE - Specific Parameter Description

Input	Type	Comment
ObjType	ObjectType	ObjType describes the type of object(s) to write (MW only) ( <a href="#">see page 21</a> ).
FirstObject	DINT	FirstObject is the index of the object to write.
theWord	WORD	This input contains the value to write.

The input and output parameters that are common to all PLCCommunication library function blocks are described elsewhere ([see page 13](#)).

## Example

This POU allows the writing of value 12 to internal register 1 (MW1) of a Modbus slave at address 8 on serial line 1:

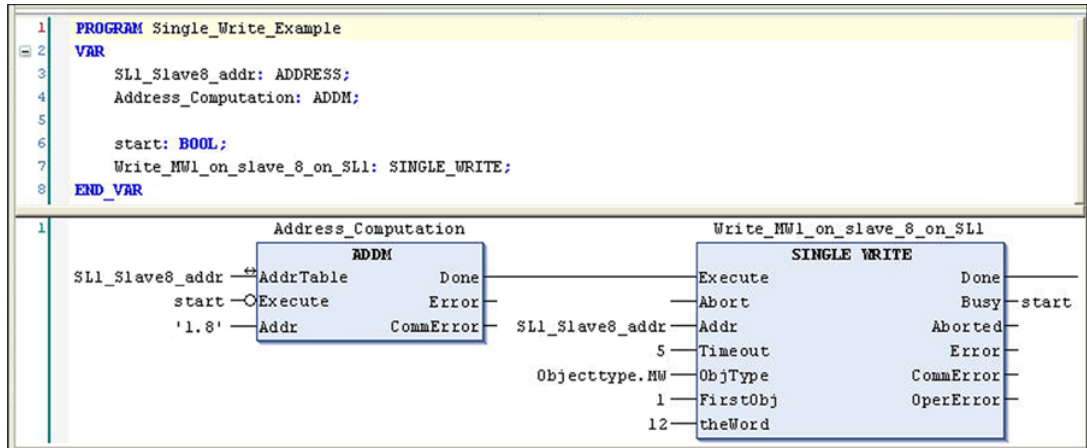

**NOTE:** The `Busy` output assigned to `start` allows for the continuous execution of `ADDM` and `SINGLE_WRITE`. The `start` variable must be set to `TRUE` (by the user online or the application) after the first cycle to initiate continuous reading/writing. This example does not show the management of exchange errors.

## SEND\_RECV\_MSG: Send and/or Receive User Defined Messages


### Function Description

The `SEND_RECV_MSG` function block sends and receives user defined messages. It sends a message on the selected media (for example, a serial line) and then waits for a response. It is also possible to either send without waiting for a response or to receive a message without sending one.

This function should be used with an ASCII manager. It could also be used with a Modbus manager if you want to send a request that is not implemented in the communication library. In this case, you have to build the request yourself.

The `SEND_RECV_MSG` function block is not supported by XBT GC, XBT GT, XBT GK and HMI SCU

### Graphical Representation

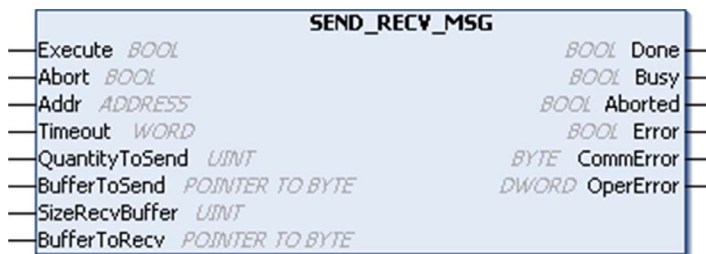

### SEND\_RECV\_MSG-Specific Parameter Descriptions

Input	Type	Comment
QuantityToSend	UINT	QuantityToSend is the number of bytes to send. Controller limitation: <ul style="list-style-type: none"> <li>● M238/LMC078: 252 bytes</li> <li>● M258/LMC058: 1050 bytes</li> <li>● M241/M251: 252 bytes</li> </ul>
BufferToSend	POINTER TO BYTE	BufferToSend is the address of the buffer (array of bytes) in which the message to send is stored. The <code>ADR</code> standard function must be used to define the associated pointer. (See the example below.) If 0, the function makes a receive-only.




Input	Type	Comment
SizeRecvBuffer	UINT	<p>SizeRecvBuffer is the available size (in bytes) of the receive buffer. The size of the received data (in bytes) is available in the function block instance internal property (internal variable): &lt;Instance Name&gt;.NbRecvBytes.</p> <p>Controller limitation:</p> <ul style="list-style-type: none"> <li>● M238/LMC078: 252 bytes</li> <li>● M258/LMC058: 1050 bytes</li> <li>● M241/M251: 252 bytes</li> </ul>
BufferToRecv	POINTER TO BYTE	<p>BufferToRecv is the address of the buffer (array of SizeRecvBuffer bytes) in which the received message will be stored. The <code>ADR</code> standard function must be used to define the associated pointer. (See the example below.) If 0, the function makes a send-only.</p>

For send only operations, the exchange is complete (`Busy` reset to 0) when all data (including eventual start and stop characters) have been sent to the line.

For a send/receive or receive only operation, the system receives characters until the ending condition. When the ending condition is reached, the exchange is complete (`Busy` reset to 0). Received characters are then copied into the receive buffer up to `sizeRecvBuffer` characters and the size of the received data (in bytes) is available in function block instance property (internal variable): <Instance Name>.NbRecvBytes. The `sizeRecvBuffer` input does not represent an ending condition.

The input and output parameters that are common to all PLCCommunication library function blocks are described elsewhere ([see page 13](#)).


The starting and ending conditions of user defined messages are configured in the ASCII manager's configuration dialog box:

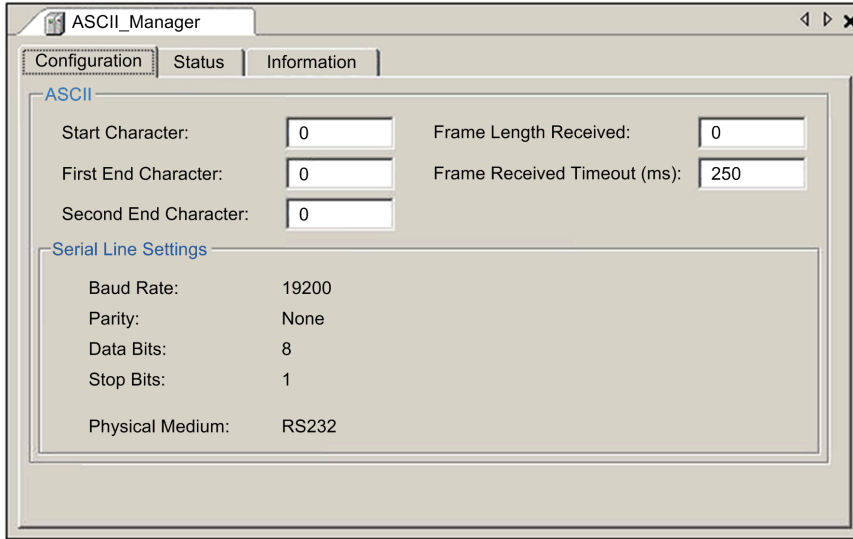

**NOTE:** There are no start and end characters in this example. The received frame ending condition is a 250 ms Timeout.

**Example**

This POU allows the send-only of the user defined message "hello" on serial line 1:

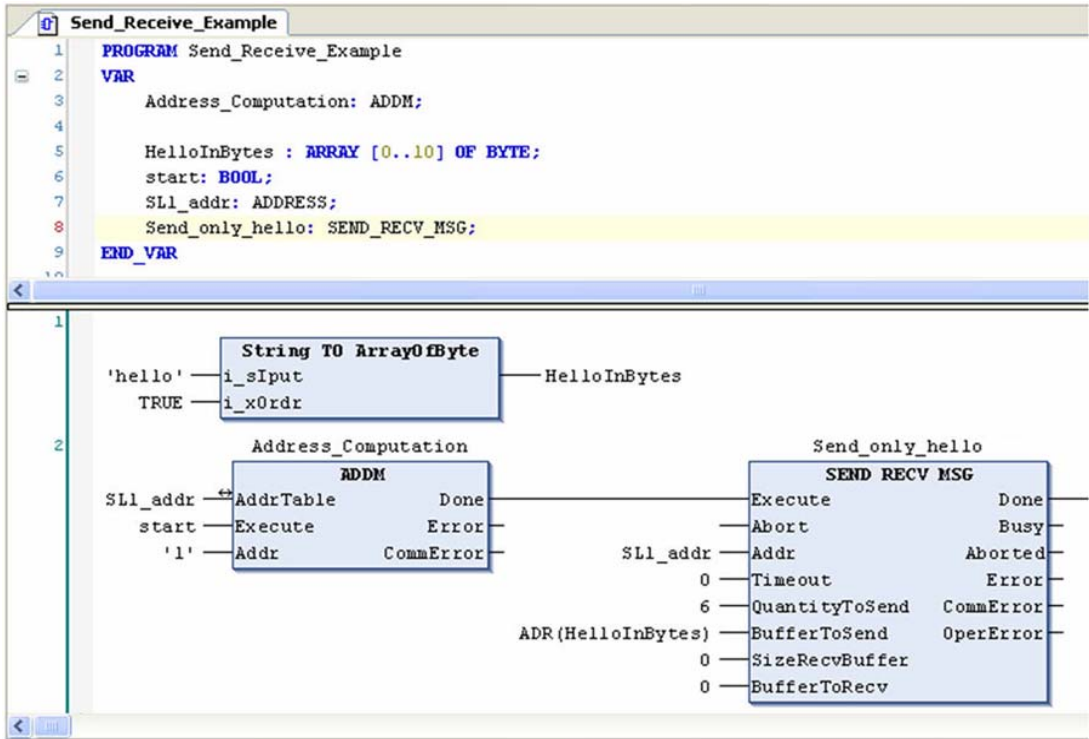

**NOTE:** A rising edge on the start variable launches the conversion of an address and the sending of the message.



---

# Appendices

---





---

# Appendix A

## Function and Function Block Representation

---

### Overview

Each function can be represented in the following languages:

- IL: Instruction List
- ST: Structured Text
- LD: Ladder Diagram
- FBD: Function Block Diagram
- CFC: Continuous Function Chart

This chapter provides functions and function blocks representation examples and explains how to use them for IL and ST languages.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Differences Between a Function and a Function Block	48
How to Use a Function or a Function Block in IL Language	49
How to Use a Function or a Function Block in ST Language	52

## Differences Between a Function and a Function Block

### Function

A function:

- is a POU (Program Organization Unit) that returns one immediate result.
- is directly called with its name (not through an instance).
- has no persistent state from one call to the other.
- can be used as an operand in other expressions.

**Examples:** boolean operators (AND), calculations, conversion (BYTE\_TO\_INT)

### Function Block

A function block:

- is a POU (Program Organization Unit) that returns one or more outputs.
- needs to be called by an instance (function block copy with dedicated name and variables).
- each instance has a persistent state (outputs and internal variables) from one call to the other from a function block or a program.

**Examples:** timers, counters

In the example, Timer\_ON is an instance of the function block TON:

```
1  PROGRAM MyProgram_ST
2  VAR
3      Timer_ON: TON; // Function Block Instance
4      Timer_RunCd: BOOL;
5      Timer_PresetValue: TIME := T#5S;
6      Timer_Output: BOOL;
7      Timer_ElapsedTime: TIME;
8  END_VAR

1  Timer_ON(
2      IN:=Timer_RunCd,
3      PT:=Timer_PresetValue,
4      Q=>Timer_Output,
5      ET=>Timer_ElapsedTime);
```



## How to Use a Function or a Function Block in IL Language

### General Information

This part explains how to implement a function and a function block in IL language.

Functions `IsFirstMastCycle` and `SetRTCDrift` and Function Block `TON` are used as examples to show implementations.

### Using a Function in IL Language



This procedure describes how to insert a function in IL language:

Step	Action
1	Open or create a new POU in Instruction List language. <b>NOTE:</b> The procedure to create a POU is not detailed here. For more information, refer to Adding and Calling POU's ( <i>see SoMachine, Programming Guide</i> ).
2	Create the variables that the function requires.
3	If the function has 1 or more inputs, start loading the first input using LD instruction.
4	Insert a new line below and: <ul style="list-style-type: none"> <li>type the name of the function in the operator column (left field), or</li> <li>use the <b>Input Assistant</b> to select the function (select <b>Insert Box</b> in the context menu).</li> </ul>
5	If the function has more than 1 input and when Input Assistant is used, the necessary number of lines is automatically created with ??? in the fields on the right. Replace the ??? with the appropriate value or variable that corresponds to the order of inputs.
6	Insert a new line to store the result of the function into the appropriate variable: type ST instruction in the operator column (left field) and the variable name in the field on the right.

To illustrate the procedure, consider the Functions `IsFirstMastCycle` (without input parameter) and `SetRTCDrift` (with input parameters) graphically presented below:

Function	Graphical Representation
without input parameter: <code>IsFirstMastCycle</code>	
with input parameters: <code>SetRTCDrift</code>	

In IL language, the function name is used directly in the operator column:

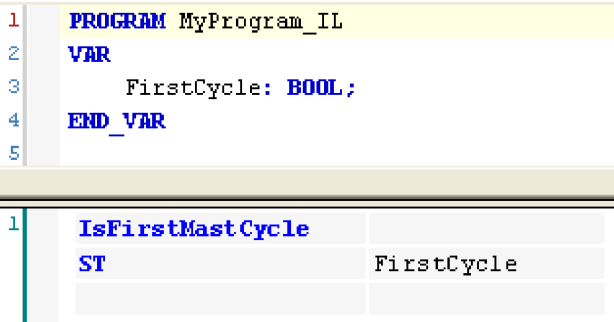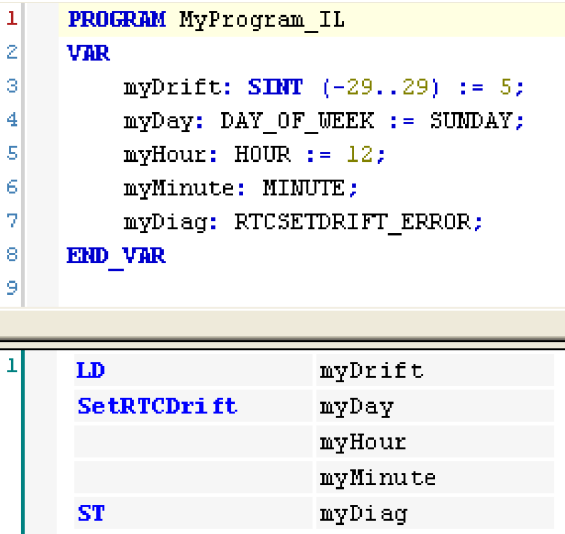Function	Representation in SoMachine POU IL Editor
IL example of a function without input parameter: IsFirstMastCycle	<pre> 1  PROGRAM MyProgram_IL 2  VAR 3      FirstCycle: BOOL; 4  END_VAR 5 </pre> 
IL example of a function with input parameters: SetRTCDrift	<pre> 1  PROGRAM MyProgram_IL 2  VAR 3      myDrift: SINT (-29..29) := 5; 4      myDay: DAY_OF_WEEK := SUNDAY; 5      myHour: HOUR := 12; 6      myMinute: MINUTE; 7      myDiag: RTCSETDRIFT_ERROR; 8  END_VAR 9 </pre> 


### Using a Function Block in IL Language

This procedure describes how to insert a function block in IL language:

Step	Action
1	Open or create a new POU in Instruction List language.  <b>NOTE:</b> The procedure to create a POU is not detailed here. For more information, refer to Adding and Calling POU's (see <i>SoMachine, Programming Guide</i> ).

Step	Action
2	Create the variables that the function block requires, including the instance name.
3	Function Blocks are called using a CAL instruction: <ul style="list-style-type: none"> <li>• Use the <b>Input Assistant</b> to select the FB (right-click and select <b>Insert Box</b> in the context menu).</li> <li>• Automatically, the CAL instruction and the necessary I/O are created.</li> </ul> Each parameter (I/O) is an instruction: <ul style="list-style-type: none"> <li>• Values to inputs are set by ":=".</li> <li>• Values to outputs are set by "&gt;".</li> </ul>
4	In the CAL right-side field, replace ??? with the instance name.
5	Replace other ??? with an appropriate variable or immediate value.

To illustrate the procedure, consider this example with the TON Function Block graphically presented below:

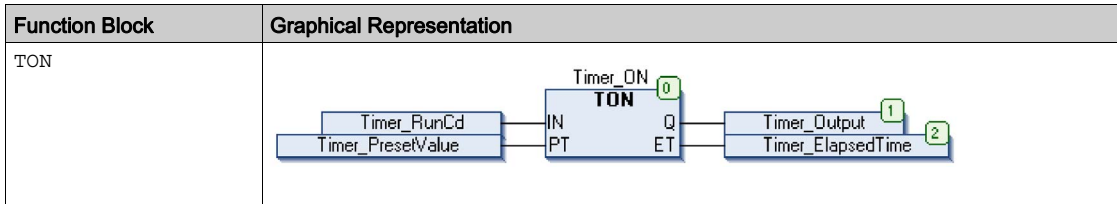

In IL language, the function block name is used directly in the operator column:

Function Block	Representation in SoMachine POU IL Editor
TON	<pre> 1  PROGRAM MyProgram_IL 2  VAR 3      Timer_ON: TON; // Function Block instance declaration 4      Timer_RunCd: BOOL; 5      Timer_PresetValue: TIME := T#5S; 6      Timer_Output: BOOL; 7      Timer_ElapsedTime: TIME; 8  END_VAR 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142 143 144 145 146 147 148 149 150 151 152 153 154 155 156 157 158 159 160 161 162 163 164 165 166 167 168 169 170 171 172 173 174 175 176 177 178 179 180 181 182 183 184 185 186 187 188 189 190 191 192 193 194 195 196 197 198 199 200 201 202 203 204 205 206 207 208 209 210 211 212 213 214 215 216 217 218 219 220 221 222 223 224 225 226 227 228 229 230 231 232 233 234 235 236 237 238 239 240 241 242 243 244 245 246 247 248 249 250 251 252 253 254 255 256 257 258 259 260 261 262 263 264 265 266 267 268 269 270 271 272 273 274 275 276 277 278 279 280 281 282 283 284 285 286 287 288 289 290 291 292 293 294 295 296 297 298 299 300 301 302 303 304 305 306 307 308 309 310 311 312 313 314 315 316 317 318 319 320 321 322 323 324 325 326 327 328 329 330 331 332 333 334 335 336 337 338 339 340 341 342 343 344 345 346 347 348 349 350 351 352 353 354 355 356 357 358 359 360 361 362 363 364 365 366 367 368 369 370 371 372 373 374 375 376 377 378 379 380 381 382 383 384 385 386 387 388 389 390 391 392 393 394 395 396 397 398 399 400 401 402 403 404 405 406 407 408 409 410 411 412 413 414 415 416 417 418 419 420 421 422 423 424 425 426 427 428 429 430 431 432 433 434 435 436 437 438 439 440 441 442 443 444 445 446 447 448 449 450 451 452 453 454 455 456 457 458 459 460 461 462 463 464 465 466 467 468 469 470 471 472 473 474 475 476 477 478 479 480 481 482 483 484 485 486 487 488 489 490 491 492 493 494 495 496 497 498 499 500 501 502 503 504 505 506 507 508 509 510 511 512 513 514 515 516 517 518 519 520 521 522 523 524 525 526 527 528 529 530 531 532 533 534 535 536 537 538 539 540 541 542 543 544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559 560 561 562 563 564 565 566 567 568 569 570 571 572 573 574 575 576 577 578 579 580 581 582 583 584 585 586 587 588 589 590 591 592 593 594 595 596 597 598 599 600 601 602 603 604 605 606 607 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622 623 624 625 626 627 628 629 630 631 632 633 634 635 636 637 638 639 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655 656 657 658 659 660 661 662 663 664 665 666 667 668 669 670 671 672 673 674 675 676 677 678 679 680 681 682 683 684 685 686 687 688 689 690 691 692 693 694 695 696 697 698 699 700 701 702 703 704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722 723 724 725 726 727 728 729 730 731 732 733 734 735 736 737 738 739 740 741 742 743 744 745 746 747 748 749 750 751 752 753 754 755 756 757 758 759 760 761 762 763 764 765 766 767 768 769 770 771 772 773 774 775 776 777 778 779 780 781 782 783 784 785 786 787 788 789 790 791 792 793 794 795 796 797 798 799 800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818 819 820 821 822 823 824 825 826 827 828 829 830 831 832 833 834 835 836 837 838 839 840 841 842 843 844 845 846 847 848 849 850 851 852 853 854 855 856 857 858 859 860 861 862 863 864 865 866 867 868 869 870 871 872 873 874 875 876 877 878 879 880 881 882 883 884 885 886 887 888 889 890 891 892 893 894 895 896 897 898 899 900 901 902 903 904 905 906 907 908 909 910 911 912 913 914 915 916 917 918 919 920 921 922 923 924 925 926 927 928 929 930 931 932 933 934 935 936 937 938 939 940 941 942 943 944 945 946 947 948 949 950 951 952 953 954 955 956 957 958 959 960 961 962 963 964 965 966 967 968 969 970 971 972 973 974 975 976 977 978 979 980 981 982 983 984 985 986 987 988 989 990 991 992 993 994 995 996 997 998 999 1000 </pre>

## How to Use a Function or a Function Block in ST Language

### General Information

This part explains how to implement a Function and a Function Block in ST language.


Function `SetRTCDrift` and Function Block `TON` are used as examples to show implementations.

### Using a Function in ST Language

This procedure describes how to insert a function in ST language:

Step	Action
1	Open or create a new POU in Structured Text language. <b>NOTE:</b> The procedure to create a POU is not detailed here. For more information, refer to Adding and Calling POU's (see <i>SoMachine, Programming Guide</i> ).
2	Create the variables that the function requires.
3	Use the general syntax in the <b>POU ST Editor</b> for the ST language of a function. The general syntax is: <code>FunctionResult:= FunctionName (VarInput1, VarInput2,.. VarInputx);</code>

To illustrate the procedure, consider the function `SetRTCDrift` graphically presented below:

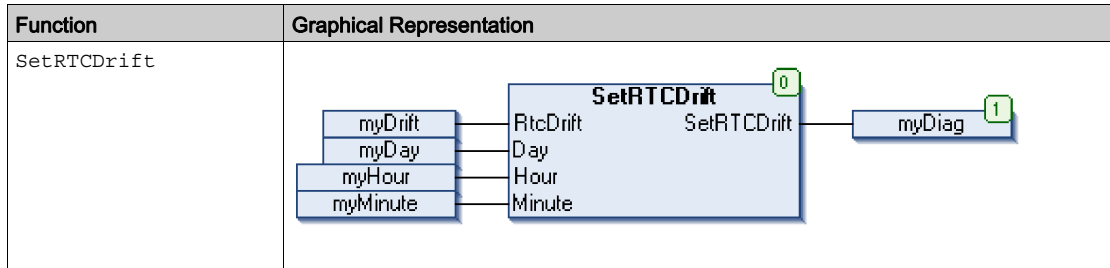

The ST language of this function is the following:


Function	Representation in SoMachine POU ST Editor
SetRTCDrift	<pre>PROGRAM MyProgram_ST VAR myDrift: SINT(-29..29) := 5; myDay: DAY_OF_WEEK := SUNDAY; myHour: HOUR := 12; myMinute: MINUTE; myRTCAadjust: RTCDRIFT_ERROR; END_VAR myRTCAadjust:= SetRTCDrift(myDrift, myDay, myHour, myMinute);</pre>

## Using a Function Block in ST Language

This procedure describes how to insert a function block in ST language:

Step	Action
1	Open or create a new POU in Structured Text language. <b>NOTE:</b> The procedure to create a POU is not detailed here. For more information on adding, declaring and calling POUs, refer to the related documentation ( <i>see SoMachine, Programming Guide</i> ).
2	Create the input and output variables and the instance required for the function block: <ul style="list-style-type: none"> <li>• Input variables are the input parameters required by the function block</li> <li>• Output variables receive the value returned by the function block</li> </ul>
3	Use the general syntax in the <b>POU ST Editor</b> for the ST language of a Function Block. The general syntax is: FunctionBlock_InstanceName (Input1:=VarInput1, Input2:=VarInput2, ... Output1=>VarOutput1, Output2=>VarOutput2, ...);

To illustrate the procedure, consider this example with the TON function block graphically presented below:

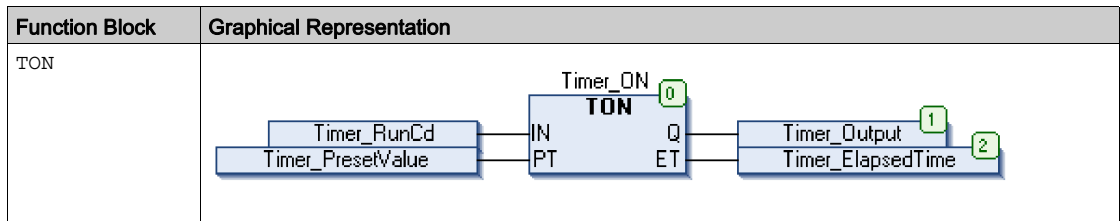

This table shows examples of a function block call in ST language:

Function Block	Representation in SoMachine POU ST Editor
TON	<pre>1  PROGRAM MyProgram_ST 2  VAR 3      Timer_ON: TON; // Function Block Instance 4      Timer_RunCd: BOOL; 5      Timer_PresetValue: TIME := T#5S; 6      Timer_Output: BOOL; 7      Timer_ElapsedTime: TIME; 8  END_VAR  1  Timer_ON( 2      IN:=Timer_RunCd, 3      PT:=Timer_PresetValue, 4      Q=&gt;Timer_Output, 5      ET=&gt;Timer_ElapsedTime);</pre>

---

# Glossary

---



## A

### application

A program including configuration data, symbols, and documentation.

## B

### byte

A type that is encoded in an 8-bit format, ranging from 00 hex to FF hex.

## C

### CFC

*(continuous function chart)* A graphical programming language (an extension of the IEC 61131-3 standard) based on the function block diagram language that works like a flowchart. However, no networks are used and free positioning of graphic elements is possible, which allows feedback loops. For each block, the inputs are on the left and the outputs on the right. You can link the block outputs to the inputs of other blocks to create complex expressions.

### configuration

The arrangement and interconnection of hardware components within a system and the hardware and software parameters that determine the operating characteristics of the system.

### controller

Automates industrial processes (also known as programmable logic controller or programmable controller).

## E

### expansion bus

An electronic communication bus between expansion I/O modules and a controller.

## F

### FB

*(function block)* A convenient programming mechanism that consolidates a group of programming instructions to perform a specific and normalized action, such as speed control, interval control, or counting. A function block may comprise configuration data, a set of internal or external operating parameters and usually 1 or more data inputs and outputs.

**function block**

A programming unit that has 1 or more inputs and returns 1 or more outputs. FBs are called through an instance (function block copy with dedicated name and variables) and each instance has a persistent state (outputs and internal variables) from 1 call to the other.

Examples: timers, counters

**function block diagram**

One of the 5 languages for logic or control supported by the standard IEC 61131-3 for control systems. Function block diagram is a graphically oriented programming language. It works with a list of networks where each network contains a graphical structure of boxes and connection lines representing either a logical or arithmetic expression, the call of a function block, a jump, or a return instruction.

I

**I/O**

(*input/output*)

**IL**

(*instruction list*) A program written in the language that is composed of a series of text-based instructions executed sequentially by the controller. Each instruction includes a line number, an instruction code, and an operand (refer to IEC 61131-3).

**INT**

(*integer*) A whole number encoded in 16 bits.

L

**LD**

(*ladder diagram*) A graphical representation of the instructions of a controller program with symbols for contacts, coils, and blocks in a series of rungs executed sequentially by a controller (refer to IEC 61131-3).

P

**PLCopen**

For more information, refer to <http://www.plcopen.org/>.

**POU**

(*program organization unit*) A variable declaration in source code and a corresponding instruction set. POU's facilitate the modular re-use of software programs, functions, and function blocks. Once declared, POU's are available to one another.



**program**

The component of an application that consists of compiled source code capable of being installed in the memory of a logic controller.

**S****ST**

(*structured text*) A language that includes complex statements and nested instructions (such as iteration loops, conditional executions, or functions). ST is compliant with IEC 61131-3.

**V****variable**

A memory unit that is addressed and modified by a program.





## A

ADDM  
    Function Block, *26*  
ADDR\_EXT  
    Data Types, *23*  
ADDRESS  
    Data Types, *22*

## C

CommunicationErrorCodes  
    Data Types, *18*

## D

Data Types  
    ADDR\_EXT, *23*  
    ADDRESS, *22*  
    CommunicationErrorCodes, *18*  
    LinkNumber, *20*  
    ObjectType, *21*  
    OperationErrorCodes, *19*  
    TCP\_ADDR\_EXT, *24*

## F

Function Block  
    ADDM, *26*  
    READ\_VAR, *31*  
    SEND\_RECV\_MSG, *40*  
    SINGLE\_WRITE, *38*  
    WRITE\_READ\_VAR, *35*  
    WRITE\_VAR, *33*  
functions  
    differences between a function and a  
    function block, *48*  
    how to use a function or a function block  
    in IL language, *49*  
    how to use a function or a function block  
    in ST language, *52*

## L

LinkNumber  
    Data Types, *20*

## O

ObjectType  
    Data Types, *21*  
OperationErrorCodes  
    Data Types, *19*

## R

READ\_VAR  
    Function Block, *31*

## S

SEND\_RECV\_MSG  
    Function Block, *40*  
SINGLE\_WRITE  
    Function Block, *38*

## T

TCP\_ADDR\_EXT  
    Data Types, *24*

## W

WRITE\_READ\_VAR  
    Function Block, *35*  
WRITE\_VAR  
    Function Block, *33*