

Front USB Cover (With Screw) Installation Guide

<http://www.pro-face.com>

Installing the front USB cover with screw on the display unit increases its water resistance. Before using the product, be sure to read this guide carefully and follow the instructions.

Package Contents

Enhanced Front USB Cover (With Screw) x 5 (Model Number: PFXZCDCVUS1)

Installation screw x 5

Installation Guide x 1 <this guide>

This product has been carefully packed, with special attention to quality. However, should you find anything damaged or missing, please contact your local distributor immediately.

Specifications

	When the front USB cover is closed	When the front USB cover is open
Structure (on the front panel when properly installed in an enclosure)	IP66F ^{*1} , IP67F ^{*1} , Type 1/4X(Indoor Use Only)/13	Type 1

*1 IP66F and IP67F are not part of the UL certification.

Installation


CAUTION

RISK OF INJURY

When opening the front USB cover, be careful not to injure your fingers.


Failure to follow these instructions can result in injury or equipment damage.

- Place your finger or a tool such as a screwdriver in the gap on the top of the front USB cover and pull down.

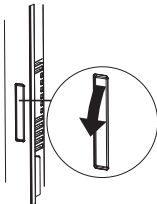

- Unscrew the upper screw (B) and remove the fixed black resin cover (A).
- Unscrew the lower screw (C) and remove the existing front USB cover (D).

- Fasten the lower hole in the new front USB cover to the lower installation hole on the display unit using screw (C).
- Close the cover and fasten it to the display unit using screw (E) of the product.

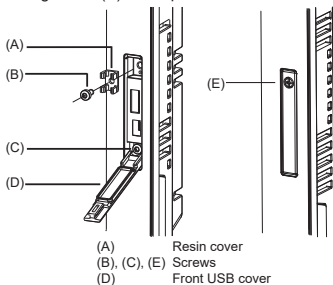

NOTE: The necessary torque is 0.5 N•m (4.4 lb•in).

Note

Be aware that Schneider Electric shall not be held liable for any real or estimated damages or losses, or third party claims resulting from the use of this product.

The information in this document is subject to change without notice.

Copyright © 2020.03 Schneider Electric Japan Holdings Ltd.

All Rights Reserved.

EAV35584 01 Printed in



Pro-face

by Schneider Electric