

# System Monitor

<b>Title</b>	System Monitor API
<b>Supported OS</b>	Windows 10 64bit (Build version is 21H2 or more.)
<b>Description</b>	This API can operate sensor, WDT, and Error LED. Sensor: PFXPHMIP6_SysMonApi_Ver.x.x.x.x.zip WDT: PFXPHMIP6_RAS_API_WDT_Ver.x.x.x.x.zip Error LED: PFXPHMIP6_ERROR_LED_API_Ver.x.x.x.x.zip

## How to install

1. Right-Click on "PFXPHMIP6\_ERROR\_LED\_API\_Ver.1.0.0.0\Driver\VSensor.inf".
2. Click "Install".
3. Click [Win + Alt] key.
4. Input "services.msc".
5. Right-Click on SysMonSrv, and then Click "Stop"
6. Copy "DLL\ErrorLedApi.dll" and "DLL\VSensorApi.dll" to "C:\Windows\System32" with administrators account.
7. Restart.

## Detail Information

[https://www.proface.com/en/node/49216#system\\_monitor\\_api](https://www.proface.com/en/node/49216#system_monitor_api)