

Sample Templates Document: GPC_Sound01.blu

Please select the first letter of a Voice Message				Voice Message	File Name	Sound Check
A	B	C	D	A customer is here.	EA_00010.wav	<input type="checkbox"/>
				Absolute Encoder reset failed.	EA_00020.wav	<input type="checkbox"/>
				AC robot controller failure	EA_00030.wav	<input type="checkbox"/>
				AC servo driver failure	EA_00040.wav	<input type="checkbox"/>
E	F	G	H	Accepted	EA_00050.wav	<input type="checkbox"/>
				Add material to hopper.	EA_00060.wav	<input type="checkbox"/>
				Add oil.	EA_00070.wav	<input type="checkbox"/>
				Add raw materials.	EA_00080.wav	<input type="checkbox"/>
				Adjust component mixture.	EA_00090.wav	<input type="checkbox"/>
O	P	R	S	Air alarm	EA_00100.wav	<input type="checkbox"/>
				Air pressure has fallen.	EA_00110.wav	<input type="checkbox"/>
				Air pressure has risen.	EA_00120.wav	<input type="checkbox"/>
				Air supply fan thermal relay has tripped.	EA_00130.wav	<input type="checkbox"/>
T	U	V	W	Air supply pressure is low.	EA_00140.wav	<input type="checkbox"/>

Document copyright policy:

You agree not to reproduce, other than for your own personal, noncommercial use, all or part of this document on any medium whatsoever without permission of Schneider Electric, given in writing. You also agree not to establish any hypertext links to this document or its content.

Schneider Electric does not grant any right or license for the personal and noncommercial use of the document or its content, except for a non-exclusive license to consult it on an "as is" basis, at your own risk. All other rights are reserved.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

Safety Information



Important Information

NOTICE




Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

 DANGER
DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING
WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION
CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
NOTICE
NOTICE is used to address practices not related to physical injury.

PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation and has received safety training to recognize and avoid the hazards involved.

About the Book



At a Glance

Document Scope

This manual describes how to use this product.

Validity Note

This documentation is valid for this product.

The technical characteristics of the device(s) described in this manual also appear online at <https://www.proface.com>.

The characteristics presented in the present document should be the same as those that appear online. In line with our policy of constant improvement we may revise content over time to improve clarity and accuracy. In the event that you see a difference between the document and online information, use the online information as your reference.

Registered Trademarks

Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Product names used in this manual may be the registered trademarks owned by the respective proprietors.

Related Documents

You can download the manuals related to this product, such as the software manual, from our support site at <https://www.proface.com/trans/en/manual/1001.html>.

Product Related Information

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In the event this product does not run properly due to whatever reason, it may be difficult or impossible to identify a function. Functions that may present a hazard if not immediately executed, such as a fuel shut-off, must be provided independently of this product. The machine's control system design must take into account the operator being unable to control the machine or making mistakes in the control of the machine.

WARNING

UNINTENDED EQUIPMENT OPERATION

The application of this product requires expertise in the design and programming of control systems. Only persons with such expertise should be allowed to program, install, alter, and apply this product.

- Follow all local and national safety standards.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

For additional information, refer to NEMA ICS 1.1 (latest edition), "Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control" and to NEMA ICS 7.1 (latest edition), "Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems" or their equivalent governing your particular location.

Table of Content

Safety Information	3
About the Book	4
Template Overview	6
Project structure	6
Run Time Behavior	8
How to copy the objects to your project file	9
How to Configure Language Table	17

Target: ST-6500WAD

Driver: None

BLUE version 3.4.100 or later

Template Overview

This template has Voice Messages list in Alphabetical Order.

Project structure

On Simple_GPC_Sound01_Guide, 1 content displays are placed.

600 to 619 contents is called in Simple_GPC_Sound01_Guide screen.

Screen		
GPC_Sound01_Guide	ContentsDisplay1 (Content ID:600)	GPC_Sound01_A
	ContentsDisplay1 (Content ID: 601)	GPC_Sound01_B
	ContentsDisplay1 (Content ID: 602)	GPC_Sound01_C
	ContentsDisplay1 (Content ID: 603)	GPC_Sound01_D
	ContentsDisplay1 (Content ID: 604)	GPC_Sound01_E
	ContentsDisplay1 (Content ID: 605)	GPC_Sound01_F
	ContentsDisplay1 (Content ID: 606)	GPC_Sound01_G
	ContentsDisplay1 (Content ID: 607)	GPC_Sound01_H
	ContentsDisplay1 (Content ID: 608)	GPC_Sound01_I
	ContentsDisplay1 (Content ID: 609)	GPC_Sound01_L
	ContentsDisplay1 (Content ID: 610)	GPC_Sound01_M

ContentsDisplay1 (Content ID: 611)	GPC_Sound01_N
ContentsDisplay1 (Content ID: 612)	GPC_Sound01_O
ContentsDisplay1 (Content ID: 613)	GPC_Sound01_P
ContentsDisplay1 (Content ID: 614)	GPC_Sound01_R
ContentsDisplay1 (Content ID: 615)	GPC_Sound01_S
ContentsDisplay1 (Content ID: 616)	GPC_Sound01_T
ContentsDisplay1 (Content ID: 617)	GPC_Sound01_U
ContentsDisplay1 (Content ID: 618)	GPC_Sound01_V
ContentsDisplay1 (Content ID: 619)	GPC_Sound01_W

Content Display

 
Please select the first letter of a Voice Message				Voice Message	File Name	Sound Check
A	B	C	D	A customer is here.	EA_00010.wav	<input type="checkbox"/>
				Absolute Encoder reset failed.	EA_00020.wav	<input type="checkbox"/>
				AC robot controller failure	EA_00030.wav	<input type="checkbox"/>
				AC servo driver failure	EA_00040.wav	<input type="checkbox"/>
E	F	G	H	Accepted	EA_00050.wav	<input type="checkbox"/>
				Add material to hopper.	EA_00060.wav	<input type="checkbox"/>
				Add oil.	EA_00070.wav	<input type="checkbox"/>
				Add raw materials.	EA_00080.wav	<input type="checkbox"/>
				Adjust component mixture.	EA_00090.wav	<input type="checkbox"/>
O	P	R	S	Air alarm	EA_00100.wav	<input type="checkbox"/>
				Air pressure has fallen.	EA_00110.wav	<input type="checkbox"/>
				Air pressure has risen.	EA_00120.wav	<input type="checkbox"/>
				Air supply fan thermal relay has tripped.	EA_00130.wav	<input type="checkbox"/>
T	U	V	W	Air supply pressure is low.	EA_00140.wav	<input type="checkbox"/>


Run Time Behavior


Runtime/Simulation of this template displays a Voice Message list for each Alphabets with Sound Check Button. Click on any Alphabet and check the Message list on the same.

How to copy the objects to your project file


1. Open your project file and downloaded project file simultaneously.

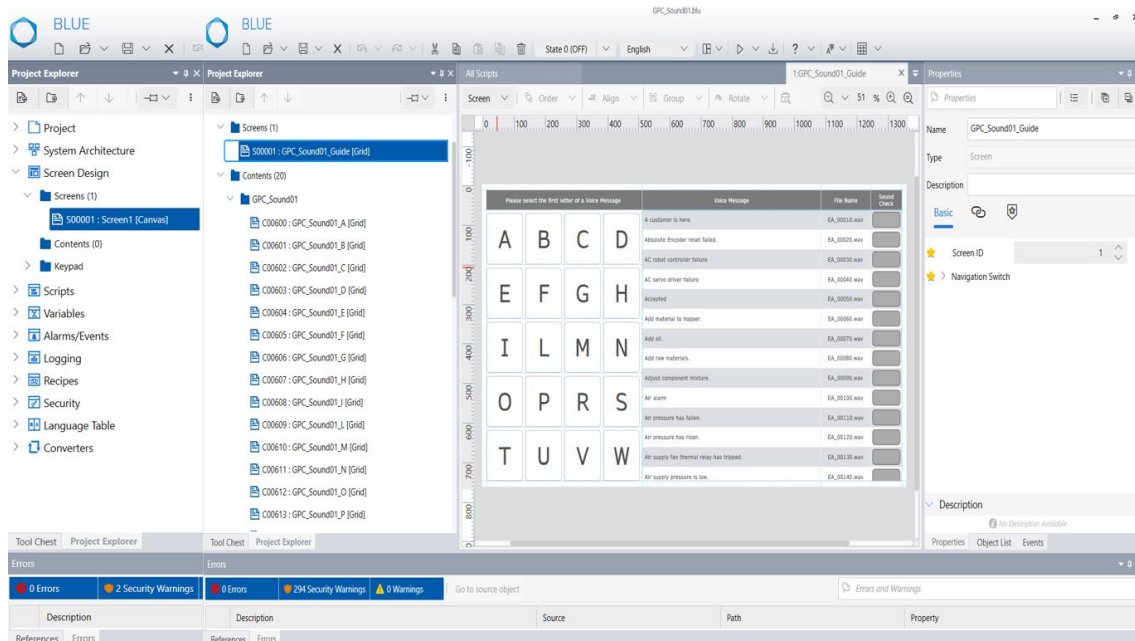


 2. Open the downloaded project file.
Click the GPC_Sound01 Content folder from "Contents" and copy the content using  copy icon in global Toolbar.

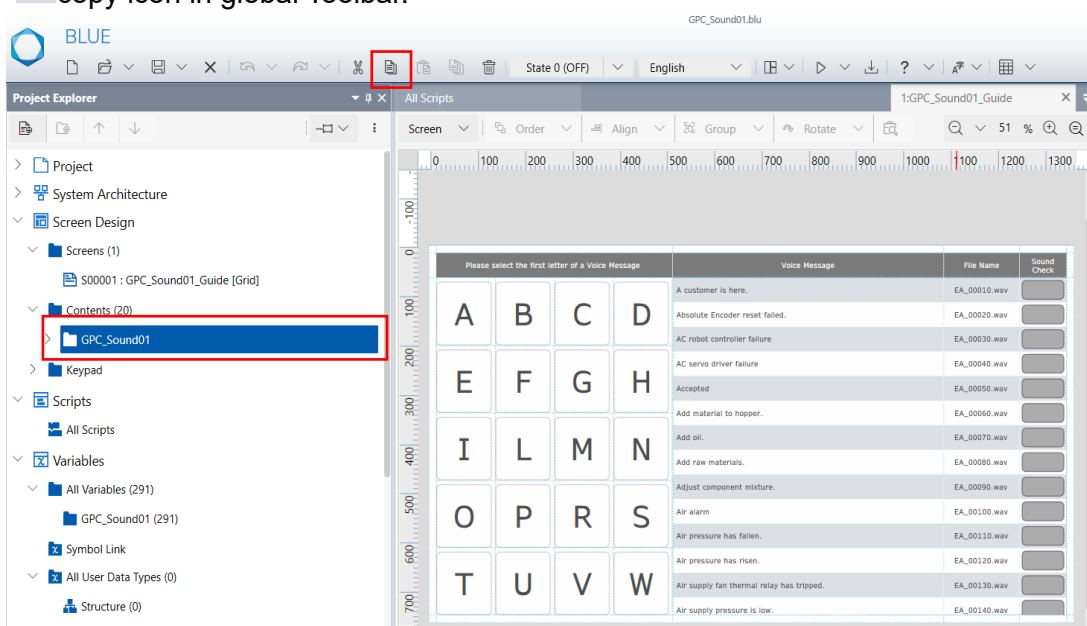


3. Open your project file.

 Click “Contents” and then click on the paste  icon from the global Toolbar.

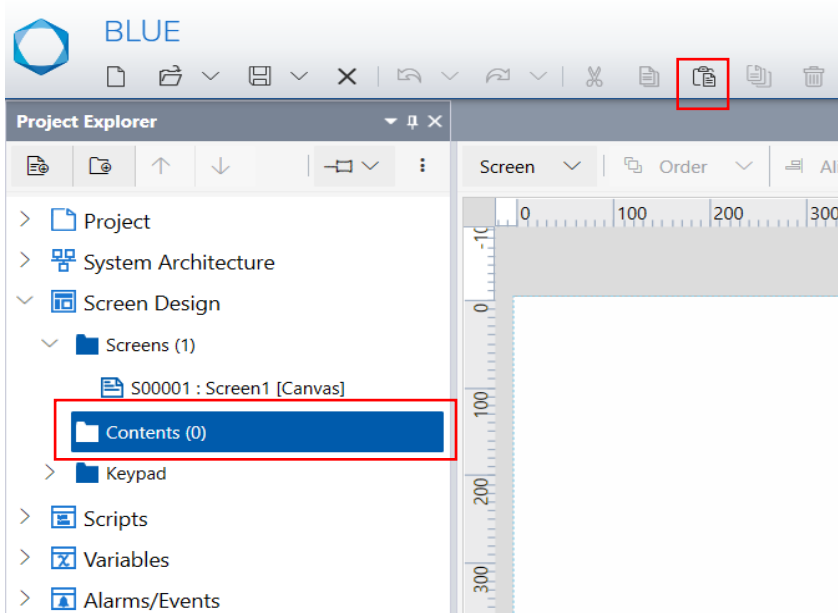


4. Select desired content ID and click “OK”.

 
Result: Copied content is successfully pasted in your project.

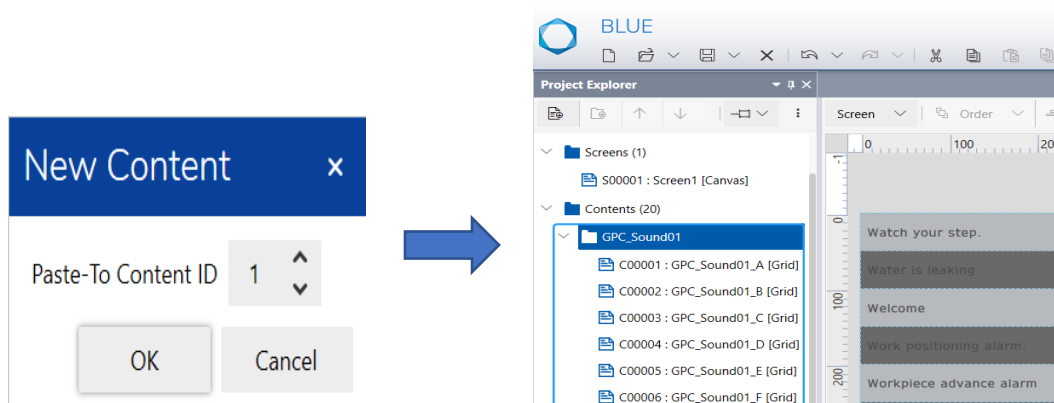

 
5. Select the Pasted content in your project and change the Content ID as per downloaded project.

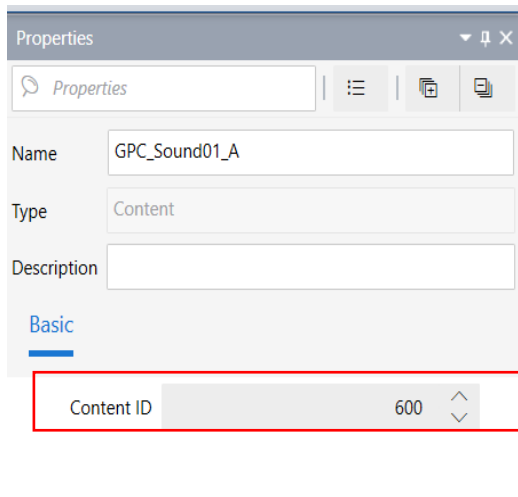

 
6. Open the downloaded project file and select the GPC_Sound01_Guide Screen and click on Copy.

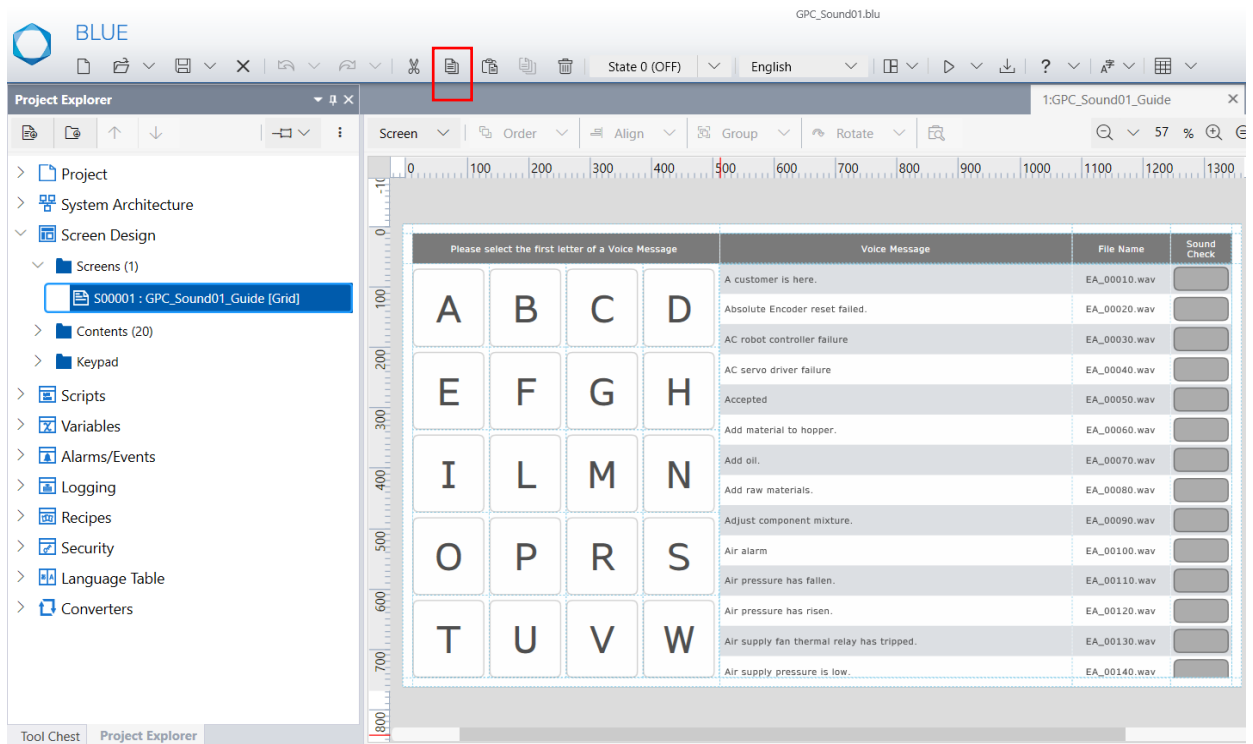

 
- Open your project file, Select the screen that you want to paste it.
Click on the screen area and then paste it using the paste icon from the global Toolbar.

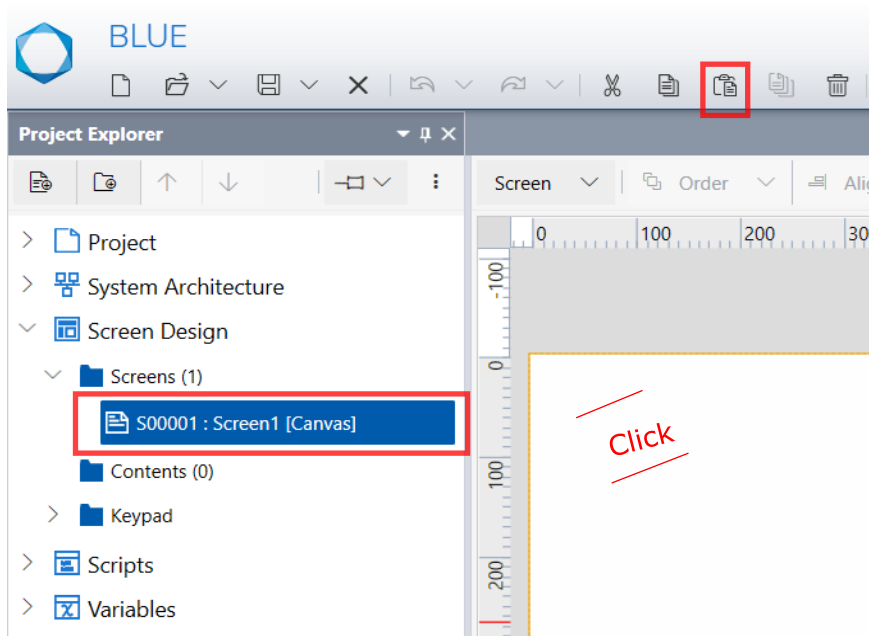

 - Open the downloaded project file and select "All variables". Select the displayed variables folder and click the copy icon from global Toolbar.

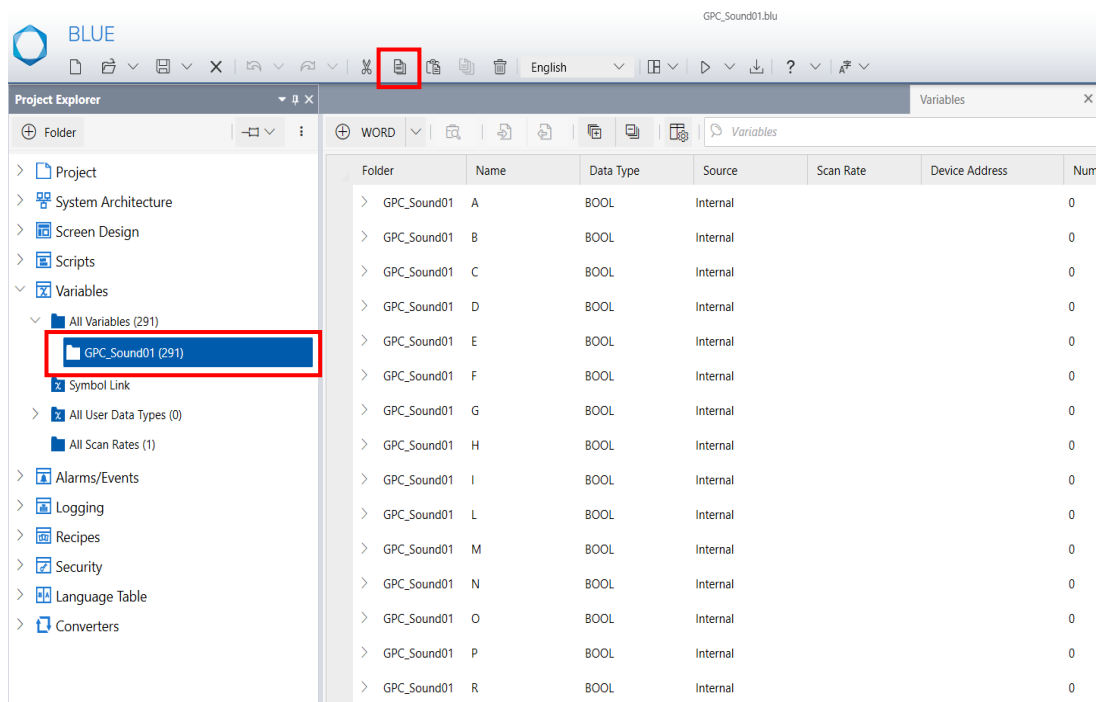


 - Open your project file and select "All Variables".
Click an existing variable or a blank Variable and click paste icon in global toolbar.

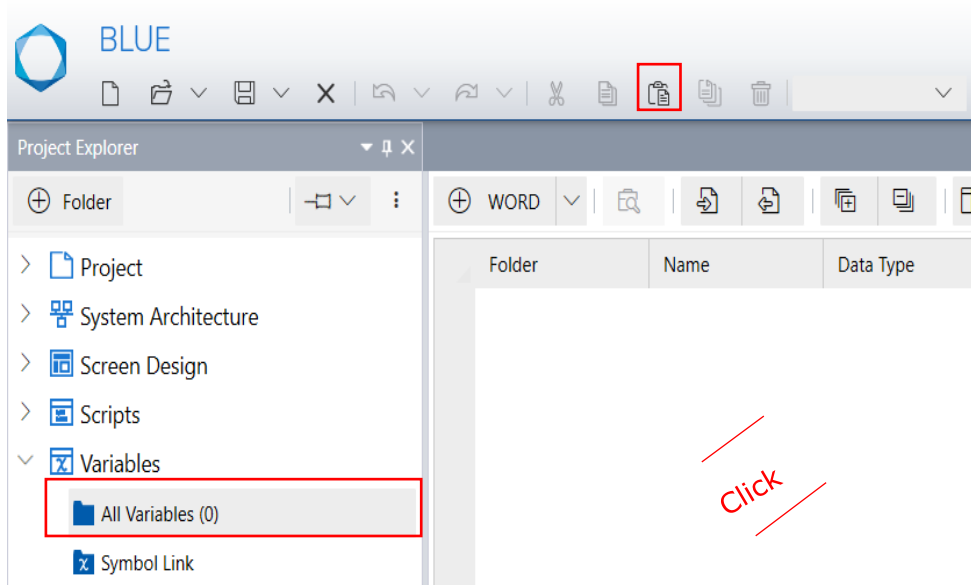


The copied variable is pasted in your project.

 - Open your Project, Click on Folder in All Variables and Change Folder Name According to Downloaded Project, if required.

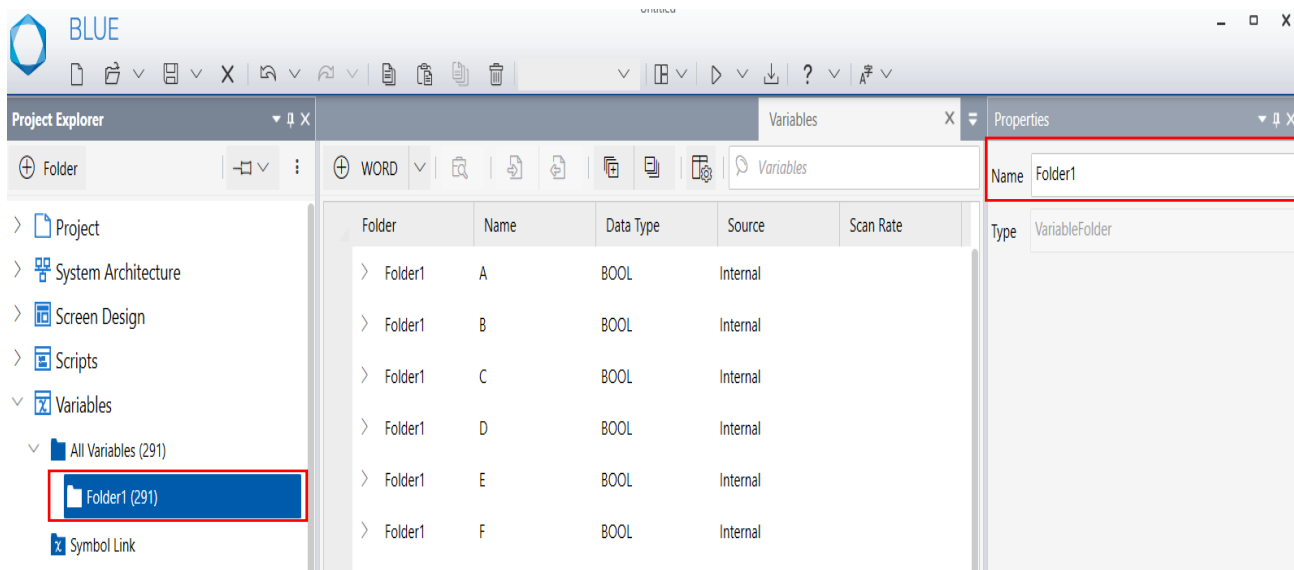


 11. Open All Scripts and Select All Scripts in Editor and Click on Copy in Global Tool Bar.

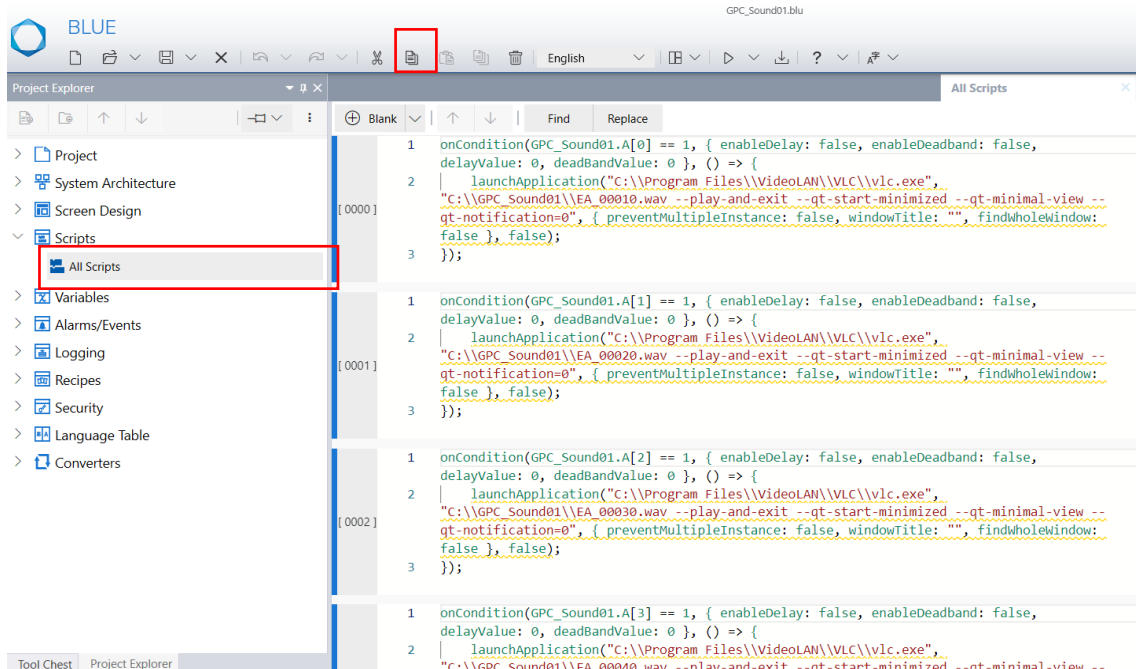


Note: All Scripts Can't be copy if user project is in Block Script mode.

 
12. Open your project file, Convert Text mode in project settings and Select All Script and click on Paste in Global Tool bar.

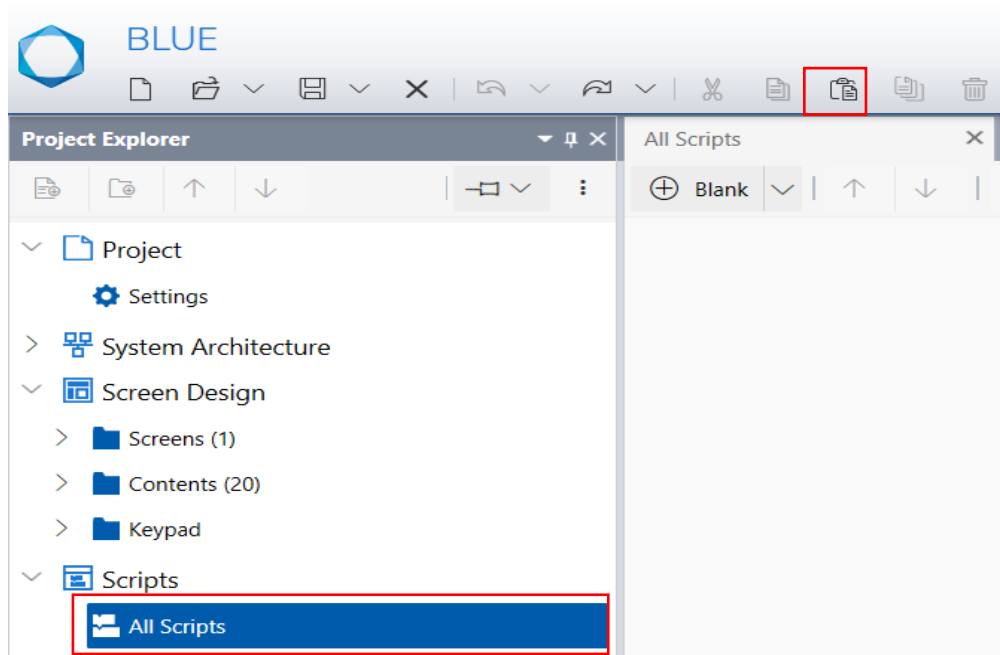

 
13. Open the downloaded project file, select “All Languages”. Click the export icon from the local Toolbar and save in desired path.

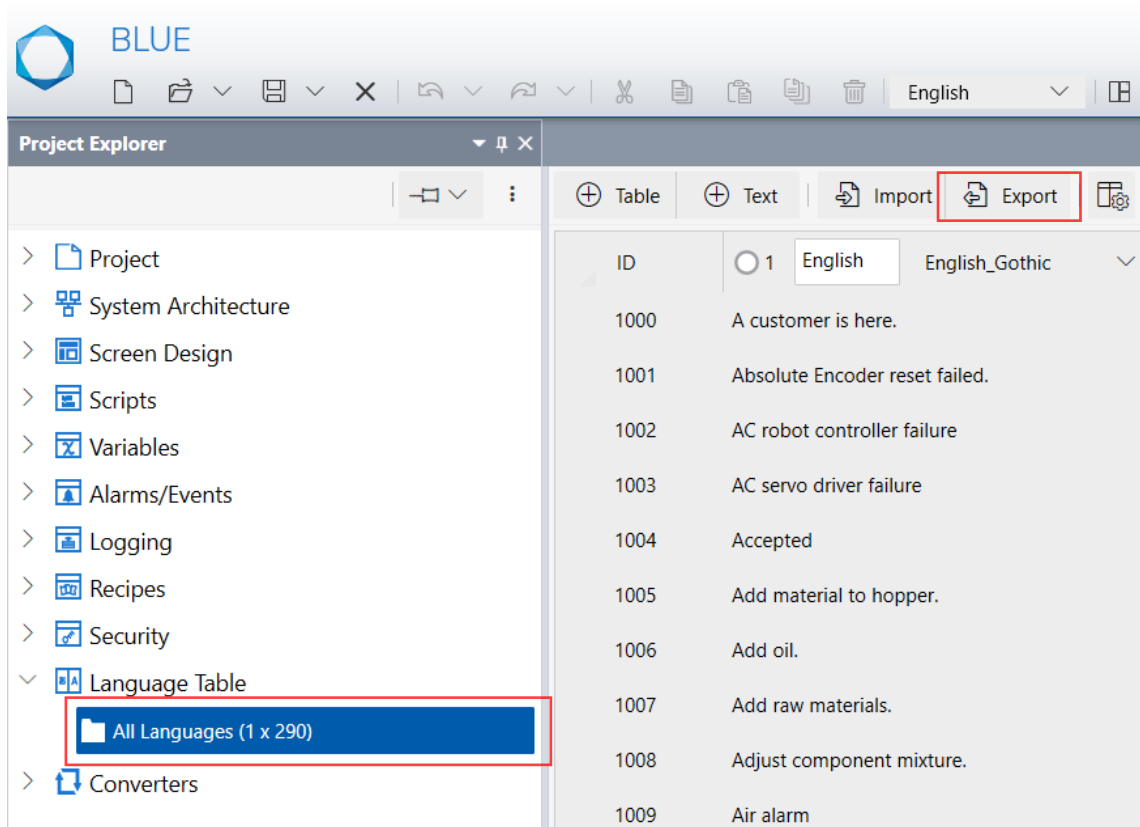

 14. Open your project file, select “All Languages”. Click the import icon from the local Toolbar.

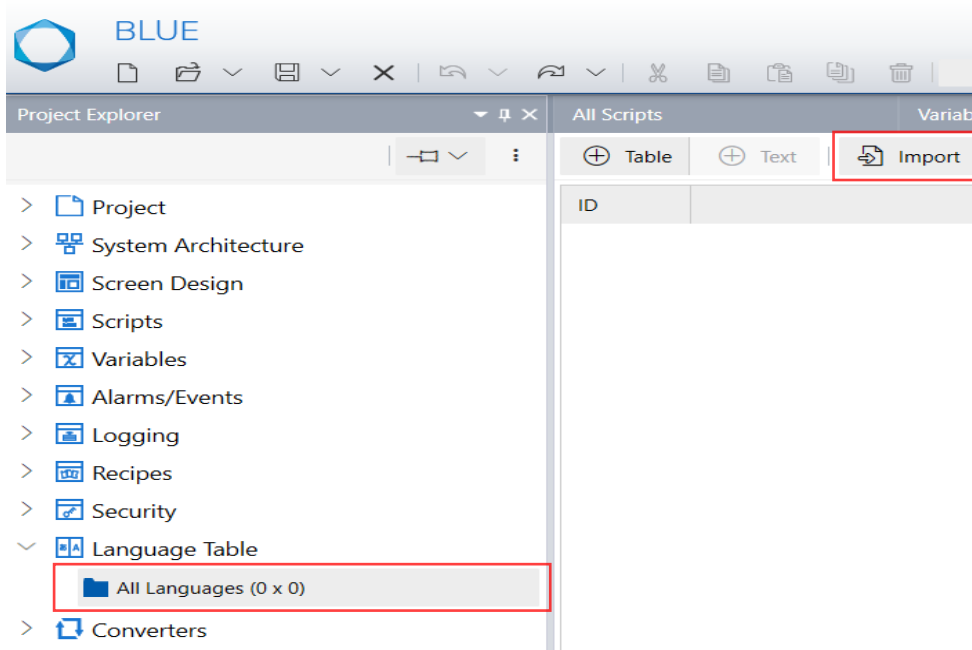

 15. Select the path (where it is exported), File name, File Type and Add/Replace existing from the dialog and Click Open.

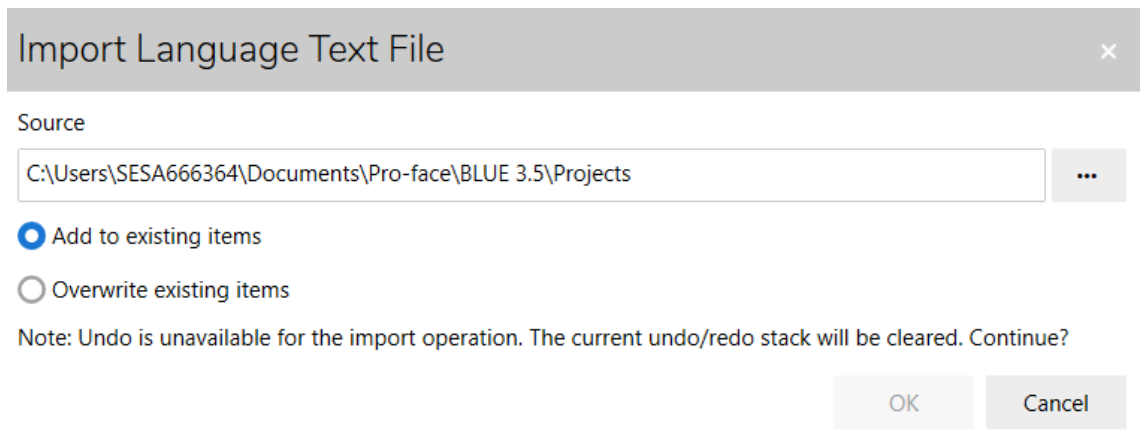


Result: All language text will be imported to your project.

Note: You can also use your desired language text. For more details, refer [How to Configure Language Table](#).

How to Configure Language Table


To add any new languages for the existing text, follow below steps:

 1. Select “All Languages” and in grid editor click Add Table icon in local toolbar.

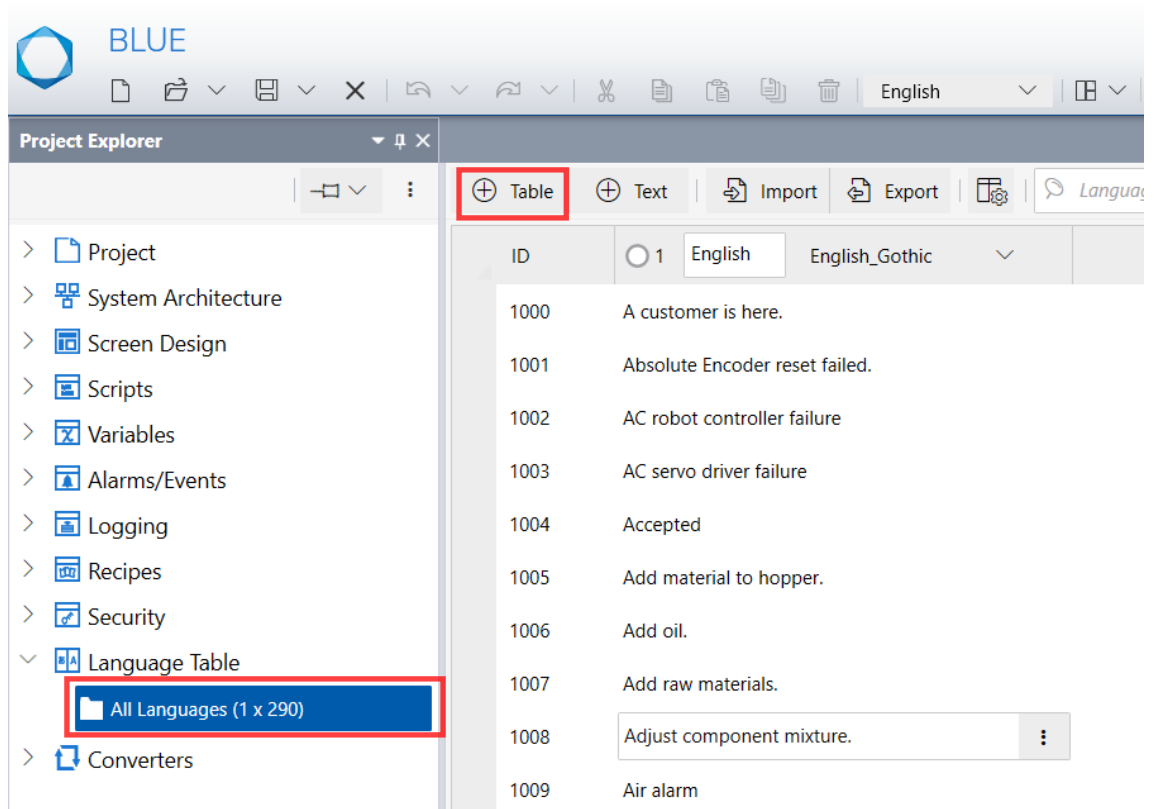


Result: New language table will be added Click on drop-down of newly added

 2. table and select your desired language.

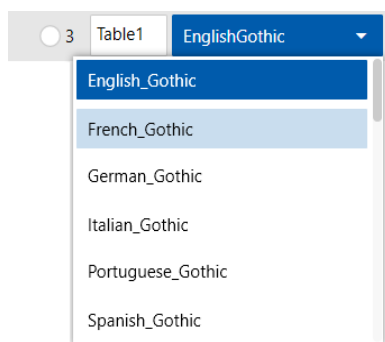


 3. Select Language text in Grid editor. Edit the value as per your requirement.

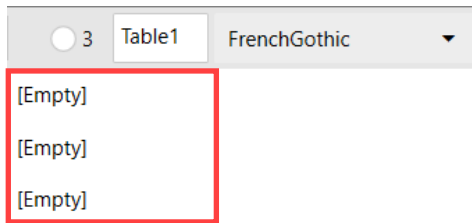


To delete any existing language table,

 1. Select “All Languages” then select the table which you want to delete.

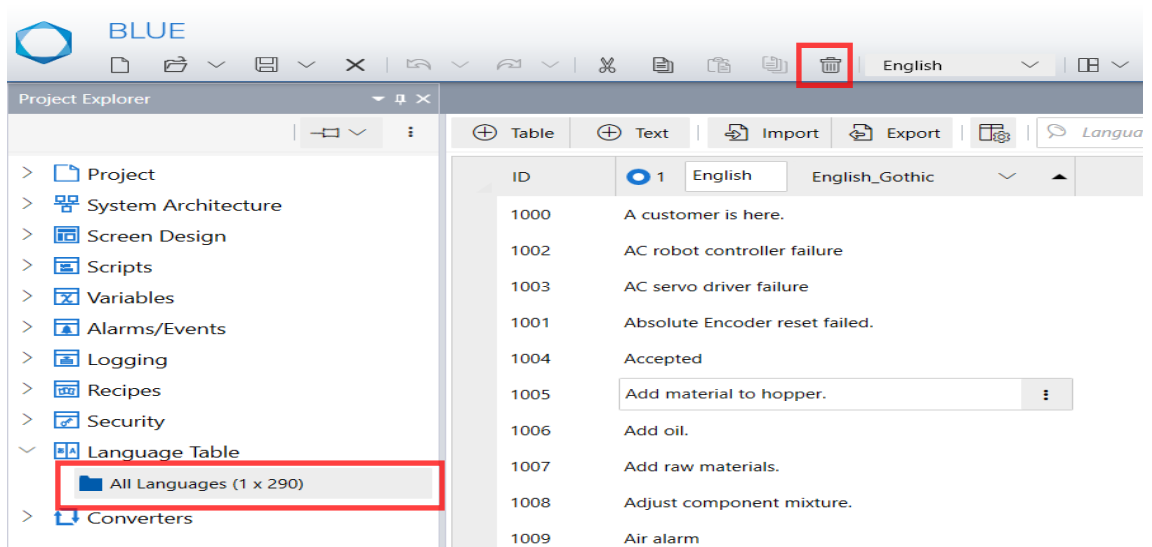

 
2. Click on delete icon in global toolbar.
3. Select the language to be deleted in popup and click ok.

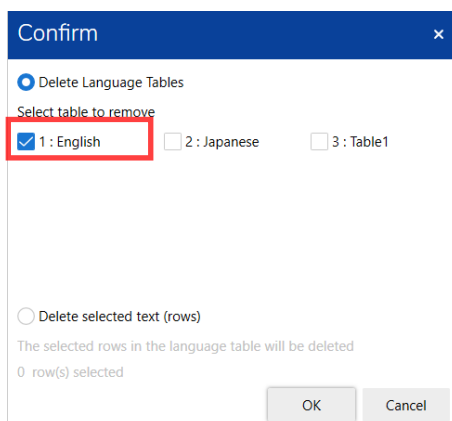

Result: selected language table will be deleted.

To add any language text, follow below steps:

 1. Select "All Languages" and in grid editor, click Add Text icon in local toolbar.

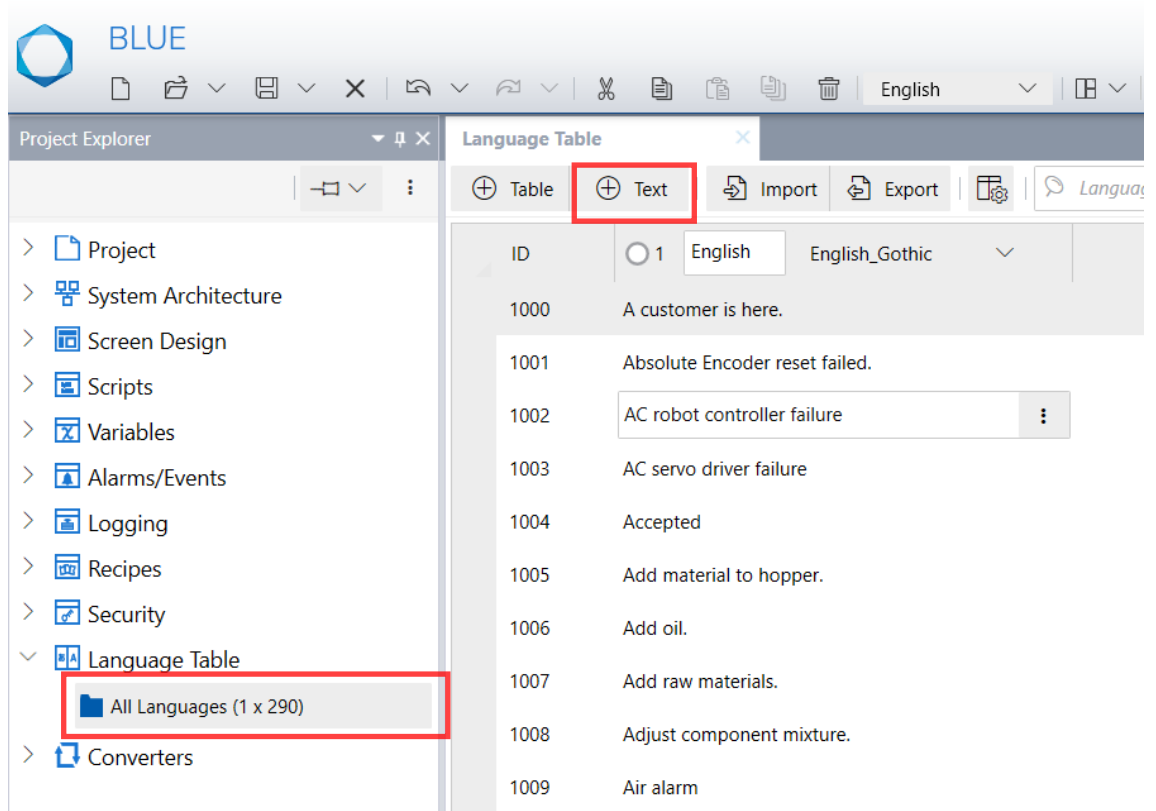

Result: New text will be added in the editor

2. Select the text and edit the value as per your requirement for all languages.

