



# OPERATOR INTERFACE PRODUCTS APPLICATION NOTE

Subject: How to set Date/Time in a 48XX terminal.

AN#1079

Date: 5/13/98

Name: Steve Vargo

Page: 1 of 1

Description: This is how to set the date and the time in a 48XX terminal with OIL.

---

Note: This applications note applies only if you have an Expansion module 4800-E3 or higher. If you have a 4800-E1 or E2 then this applications note does not apply to you, because these two modules do not have date/time enabled. Only OIL modules have this feature.

1. The 48XX terminals are not 2000 compliant and will need to be manually adjusted as soon as January 1st, 2000 rolls around.
2. Enter the Main Configuration on your 48XX by pressing the Upper left hand key and the lower right hand key at the same time. For example if you have a 4810 terminal you would press the "F1" key and the "---->" (right arrow) key at the same time. If you have a keyboard attached to the front DIN connector press the "F10" key twice to enter setup.
3. Once you are in the Main Menu choose the first selection "1. Configuration". Press the letter "C" to change to the Miscellaneous section. You then can use your up and down arrow keys to highlight the date and time and proceed to change the time and date by typing it in manually.