

9485 Kyocera STN Flat-Panel Display Bulb Replacement Instruction Sheet

Note

We recommend you send the flat-panel display to Xycom for bulb replacement. However, if you would like to replace the bulbs on site, refer to the following instructions.

Perform the following steps to replace the bulbs in the Kyocera STN Flat-panel display (model # KCS6448HSTT-X21):

1. Turn off the power source.
2. Remove the slide-out computer module (refer to Chapter 3 in the 9485/9487 manual).
3. Disconnect the bulb connectors (with the pink and white wires) from the inverter.

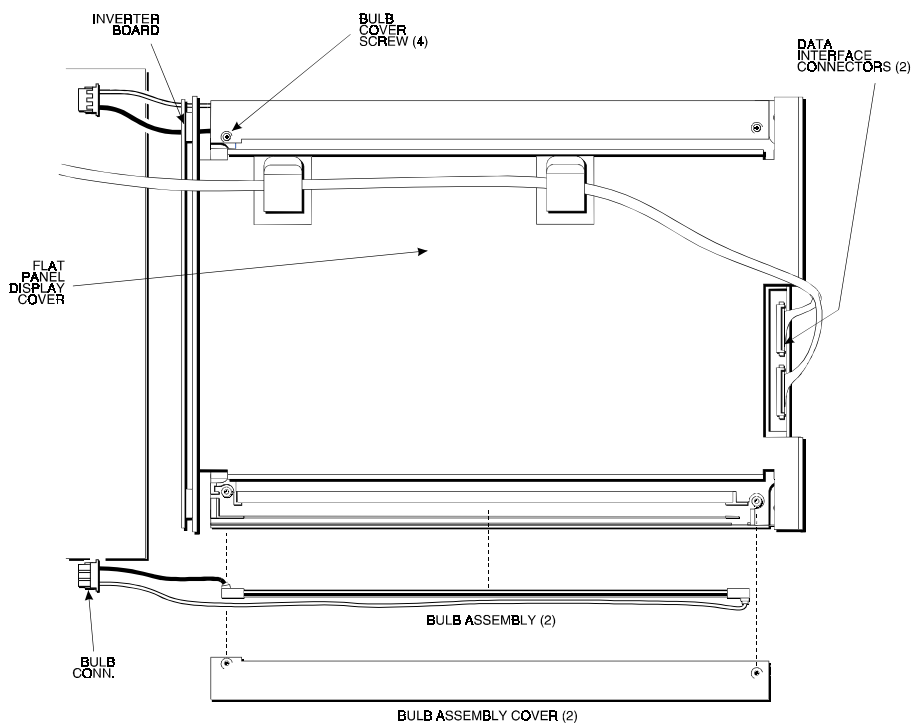


Figure 1. Bulb Assembly

4. Using a small Phillips-head screwdriver, remove the bulb cover screws. Each bulb cover has two screws.
5. Lift the bulb cover. Note how the wiring on the bulb assembly is routed.
6. Pop the wires out of the wire guides and remove the bulb assembly.
7. Insert the new bulb assembly. Use care as the bulbs are very fragile.
8. Replace the bulb covers, and re-insert the bulb cover screws you removed in Step 4.

9. Repeat steps 4 through 8 to replace the other bulb assembly.

Note

Xycom recommends replacing both bulbs at the same time.

10. Reconnect the bulb connectors (with the pink and white wires) to the inverter.
11. Re-insert the slide-out computer module (refer to Chapter 3 in the 9485/9487 manual).
12. Turn on the power source.