



How to install "Setting Tool"

1. Download the tool onto the host.
2. Double [DMT-DDSetup.msi].
3. Setup wizard will start. Click [Next] for install.


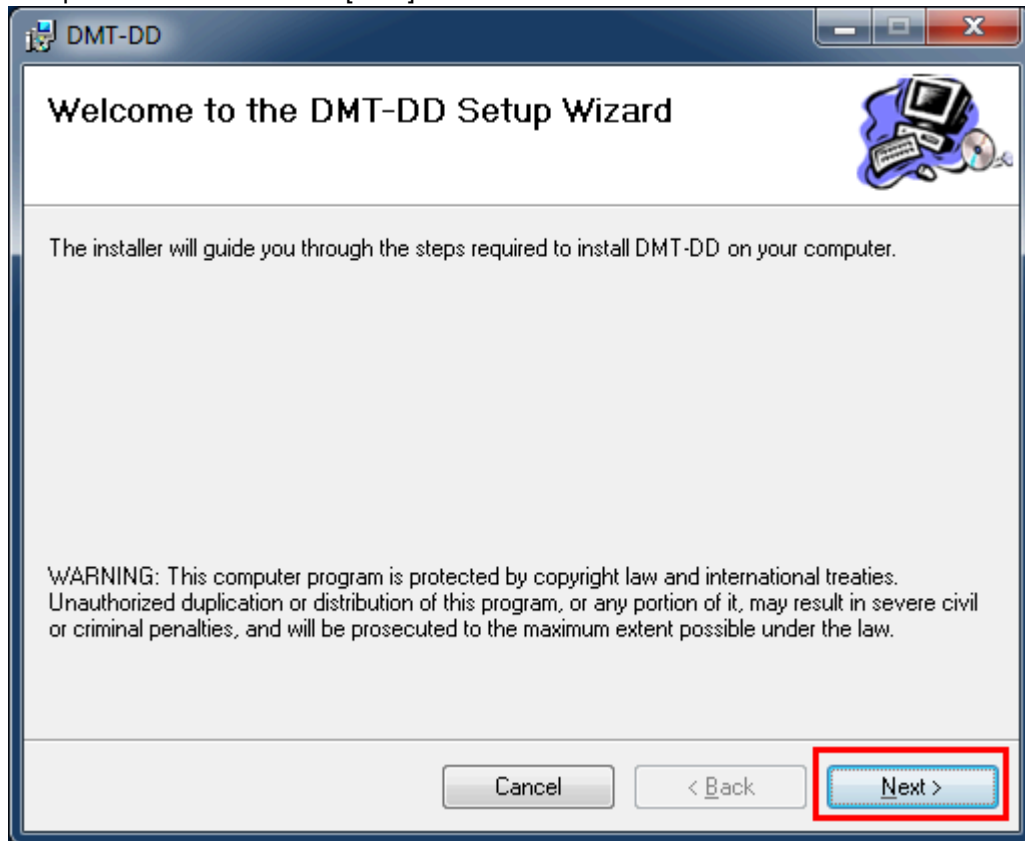


4. Click [Close] to complete the installation.

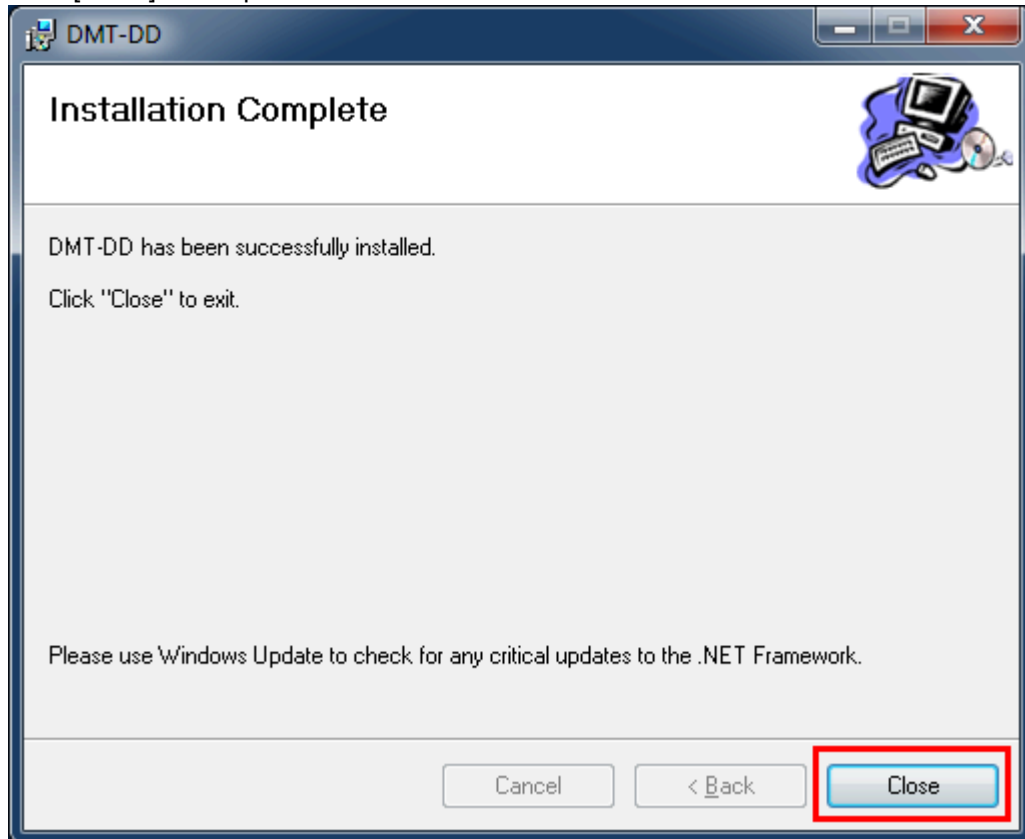

How to set a driver


1. Install "Touch Panel Controller"
[Device Addition] → [USB Port] → [Install]

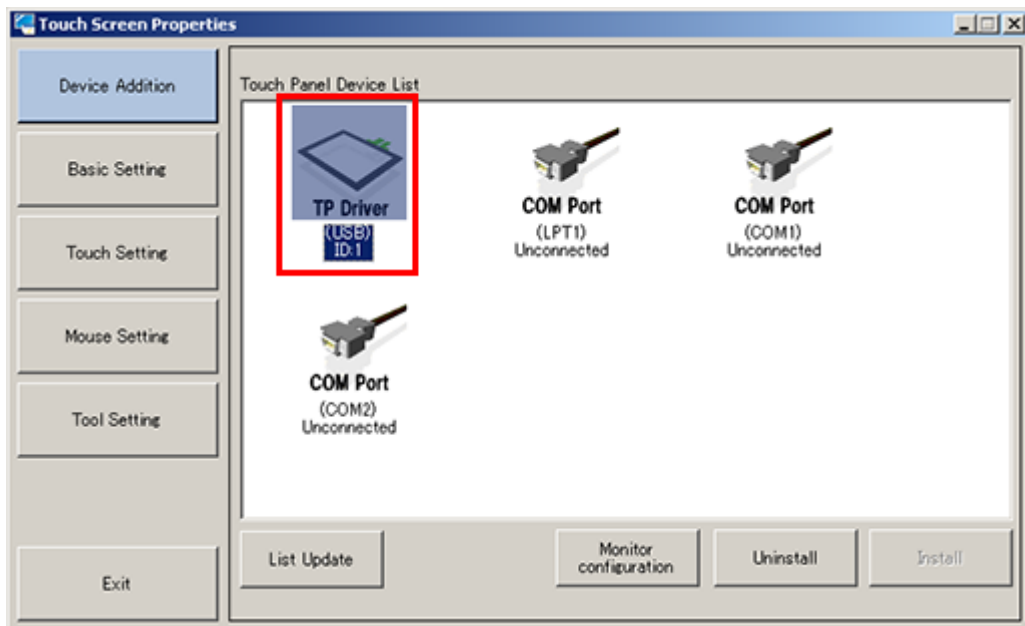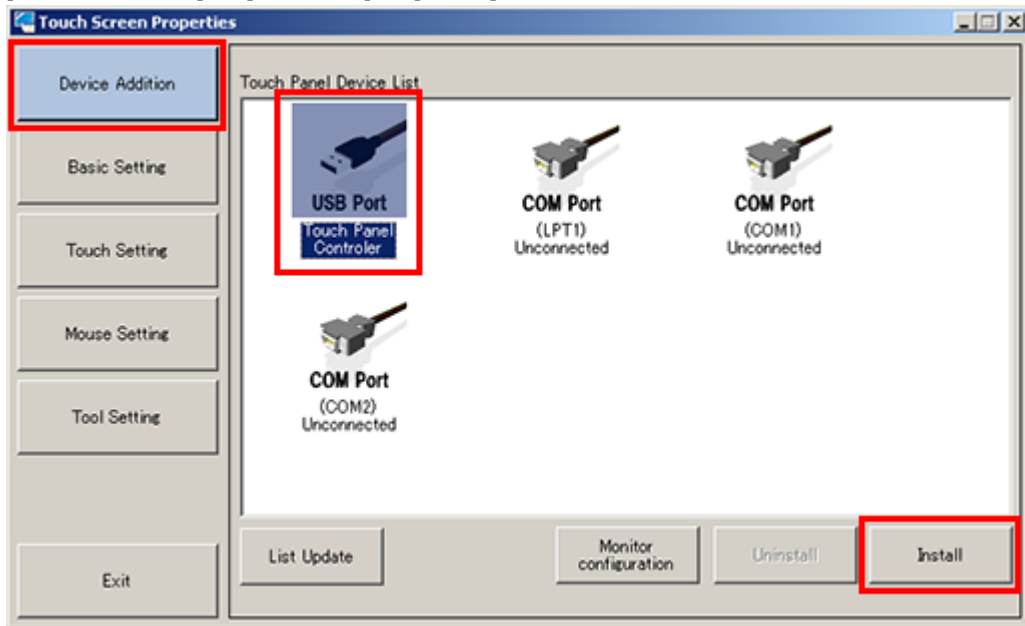

2. Register Configuration File → “Mouse.mfd”


Press and Hold function can be set disable by setting Configuration File to “Mouse.mfd”.

[Basic Setting] → [Configuration File]

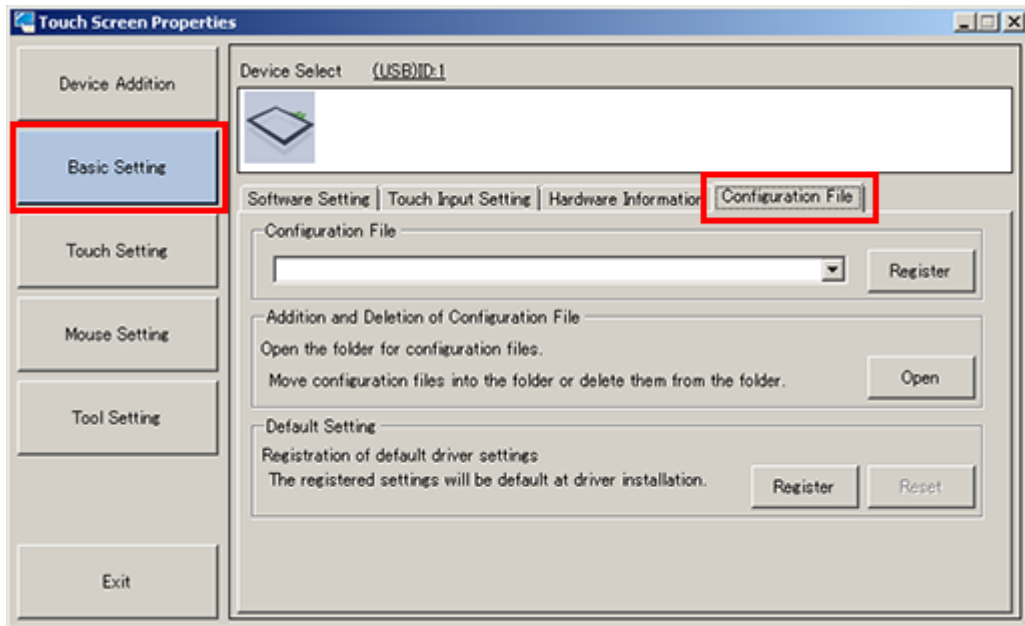

Select [Mouse.mfd] in Configuration File → [Register]


* When the other configuration file is selected, mouse emulation mode will not work correctly.

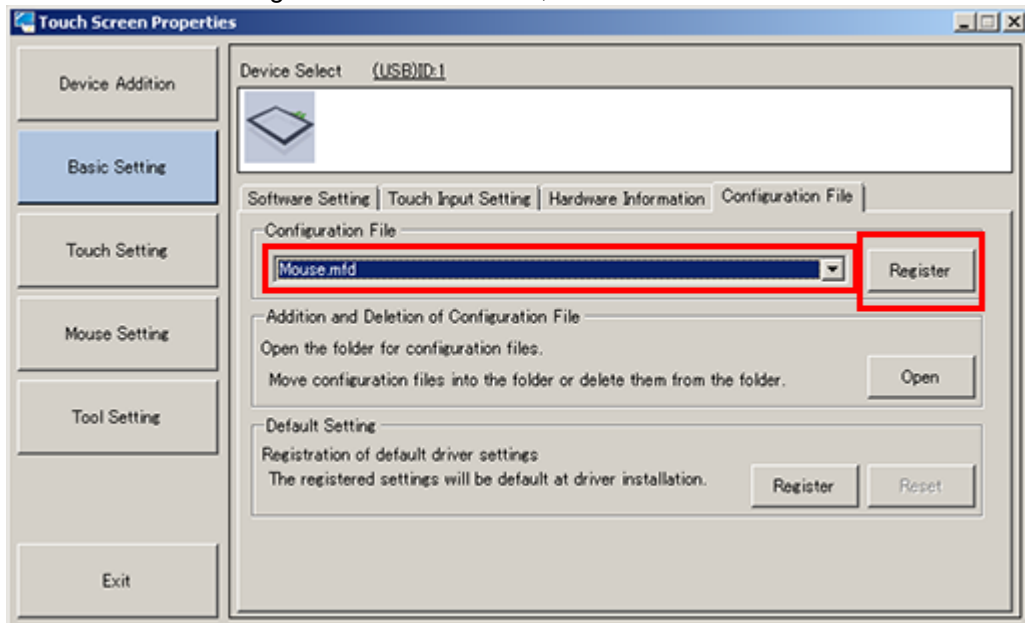


3. Monitor Configuration

This function needs to be executed if mouse operation under multi-monitor environment is needed.

(1) Click the [Monitor configuration] button in the Device Addition screen.

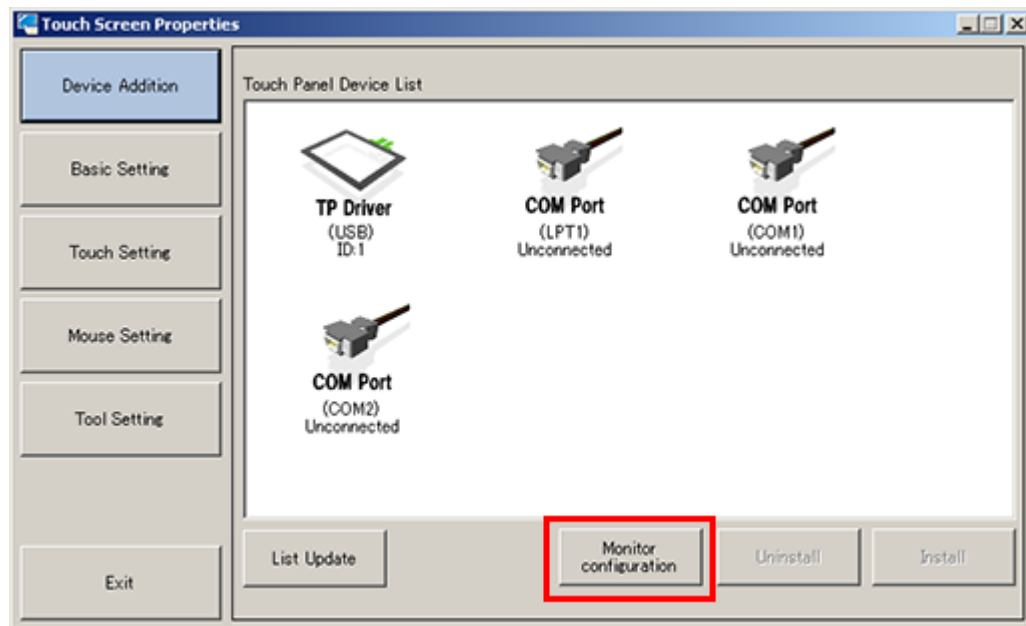


(2) The screen like below will appear, starting on the leftmost monitor to another.

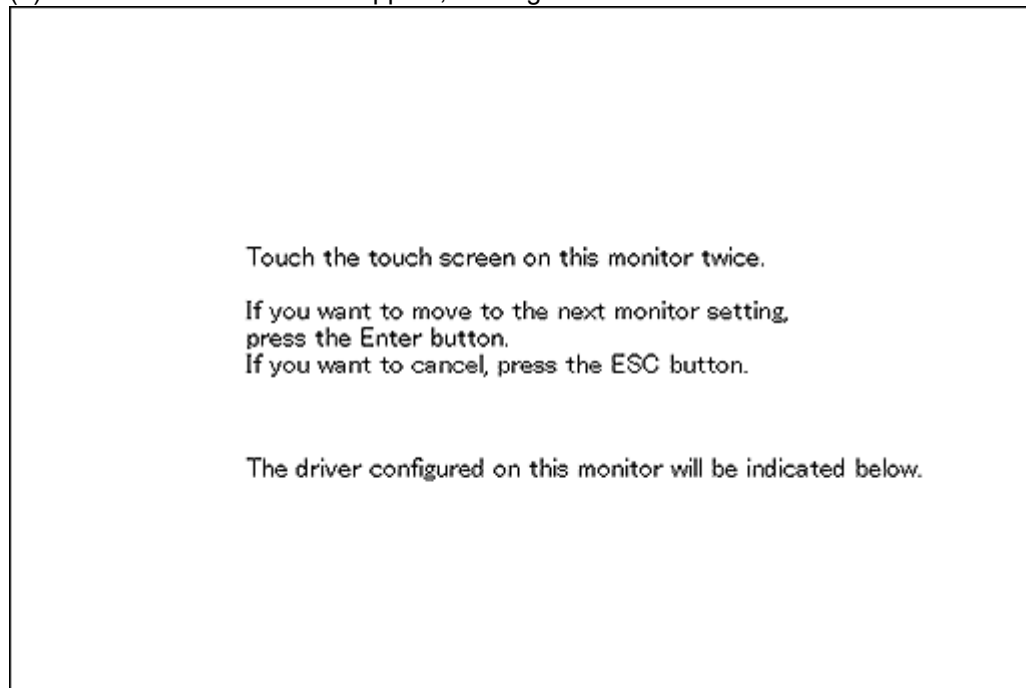

(3) Tap the touch screen on this screen twice.

4) The touched touch screen will be indicated on the screen

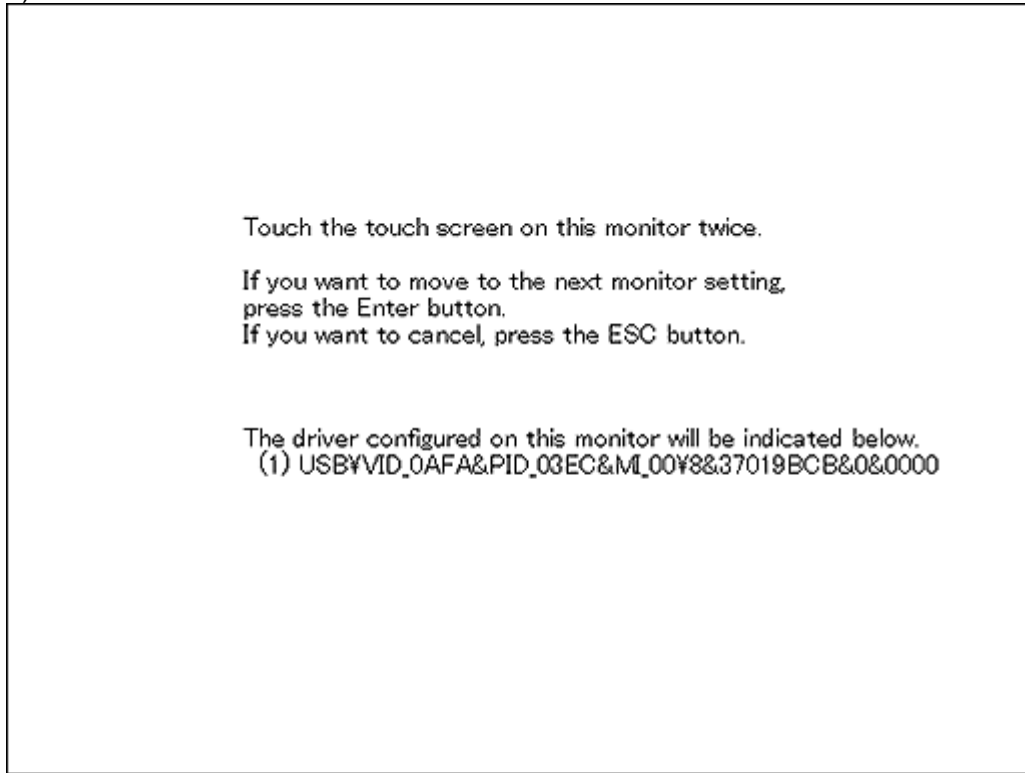


(5) Once the setting for the current monitor is completed, press [Enter].
If there are multiple monitors, the screen on the procedure 2 will appear on the next monitor.

(6) Once pressing [Enter] on the last monitor, the setting is completed.
Press [ESC] if you want to cancel in the middle.


4. Entry Right-click → “2-point touch”

User can use 2-point touch as Right click by this setting

After setting Configuration File, [Right-click] tab is added in [Basic Setting].

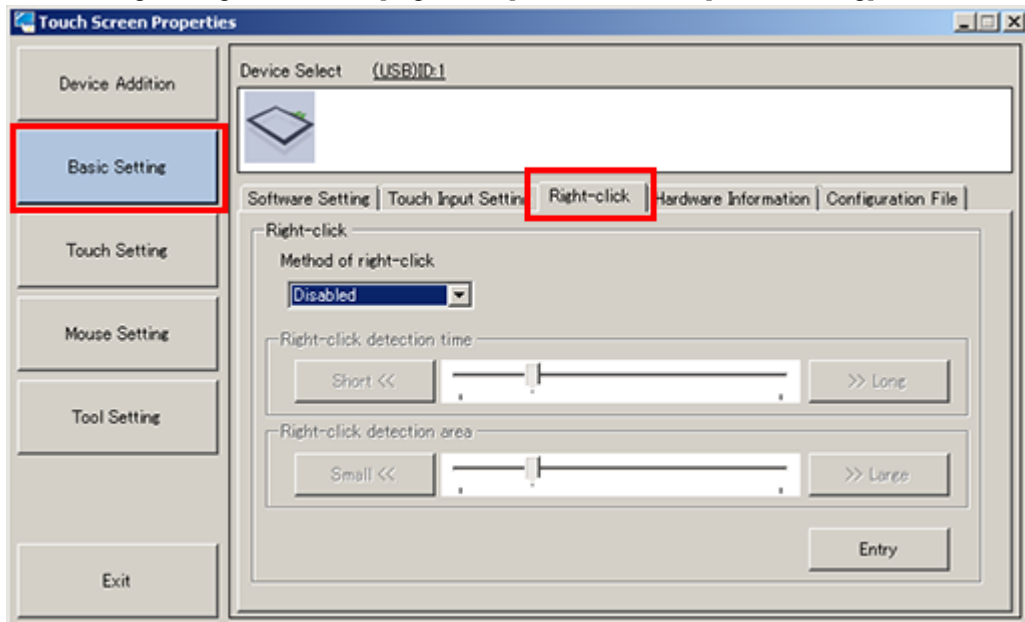

[Right-click] → select [2-point touch] in Method of right-click → [Entry]

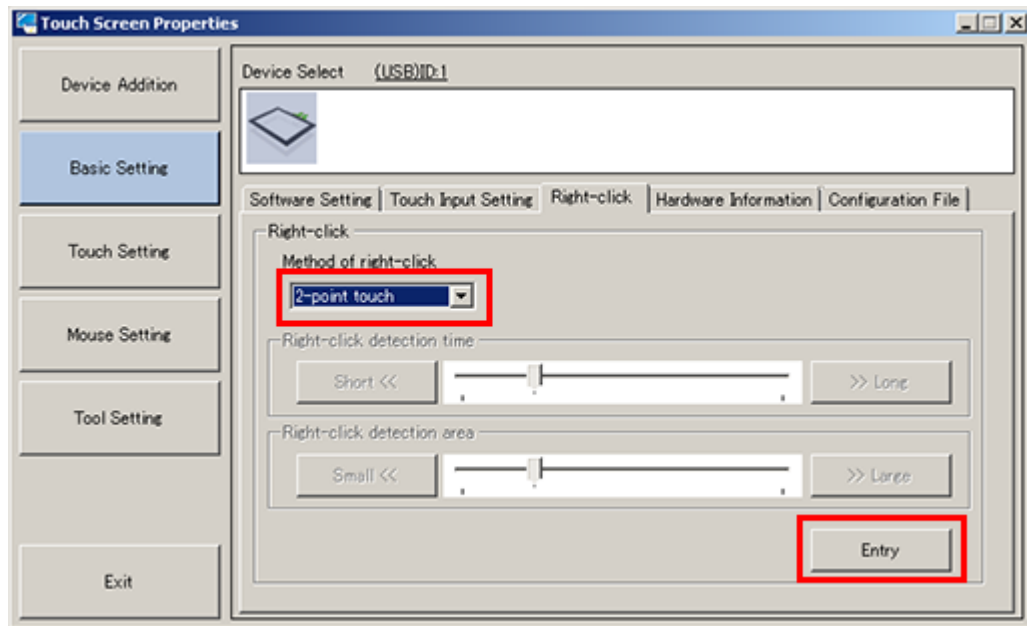

5. Confirm the driver in Device Manager

[Device Manager] → [DMC Mouse Filter(MultiMonitor)]

After you install DMT-DD driver, you can see the “DMC Mouse Filter” in the device driver list. Please confirm it.

