

BLUE Open Studio

Quick Start Guide

BOS-QSG_11
08/2023

Legal Information

The Pro-face brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this guide are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owners.

This guide and its content are protected under applicable copyright laws and furnished for informational use only. No part of this guide may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the guide or its content, except for a non-exclusive and personal license to consult it on an "as is" basis. Schneider Electric products and equipment should be installed, operated, serviced, and maintained only by qualified personnel.

As standards, specifications, and designs change from time to time, information contained in this guide may be subject to change without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this material or consequences arising out of or resulting from the use of the information contained herein.

As part of a group of responsible, inclusive companies, we are updating our communications that contain non-inclusive terminology. Until we complete this process, however, our content may still contain standardized industry terms that may be deemed inappropriate by our customers.

Cybersecurity Best Practices

To help keep your Pro-face products secure and protected, we recommend that you implement the cybersecurity best practices. Following the recommendations may help significantly reduce your company's cybersecurity risk. For the recommendations, refer to the following URL:

<https://www.pro-face.com/trans/en/manual/1087.html>

Secure the network using Windows firewall during running Database Gateway features.

Contents

INTRODUCTION.....	4
Conventions used in this documentation.....	5
About this software.....	6
About the software components.....	9
Differences between the runtime editions.....	11
Install the full software.....	14
Execution modes.....	18
THE DEVELOPMENT ENVIRONMENT.....	19
Title bar.....	20
Quick Access Toolbar.....	21
Ribbon.....	23
File menu.....	23
Home tab.....	23
View tab.....	23
Insert tab.....	24
Project tab.....	24
Draw tab.....	24
Format tab.....	25
Help tab.....	25
Project Explorer.....	26
Global tab.....	26
Graphics tab.....	27
Tasks tab.....	28
Comm tab.....	29
Screen/Worksheet Editor.....	31
Watch window.....	32
Output window.....	33
Status bar.....	34
ABOUT TAGS AND THE PROJECT DATABASE.....	35
Tag name syntax.....	37
Tag data types.....	38
Array tags.....	39
Indirect tags.....	40
TUTORIAL: BUILDING A SIMPLE PROJECT.....	41
Creating a new project.....	42
Specifying the startup screen.....	44
Creating tags.....	45
Creating the main screen.....	47
Drawing the main screen's title.....	48
Drawing a button to open another screen.....	50
Saving and closing the main screen.....	52

- Creating the summary screen..... 53
 - Drawing the summary screen title..... 53
 - Drawing "Date" and "Time" displays..... 53
 - Placing an "Exit" icon..... 55
 - Testing the project..... 56
 - Placing an animated tank..... 56
 - Placing a level slider..... 59
 - Drawing a tank selector..... 61
 - Testing the project..... 62
- Configuring the communication driver..... 63
 - Monitoring device I/O during run time..... 65

Safety Information

Important Information

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

About This Manual

Document Scope

This manual describes how to use this product.

Validity Note

This documentation is valid for this product.

The technical characteristics of the device(s) described in the present manual also appear online at www.pro-face.com.

The characteristics that are described in the present document should be the same as those characteristics that appear online. In line with our policy of constant improvement, we may revise content over time to improve clarity and accuracy. If you see a difference between the document and online information, use the online information as your reference.

Registered Trademarks

Microsoft® and Windows® are registered trademarks of Microsoft Corporation in the United States and/or other countries.

QR Code is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

Product names used in this manual may be the registered trademarks owned by the respective proprietors.

Related Documents

You can download the manuals related to this product, such as the software manual, from our website.

<https://www.pro-face.com/trans/en/manual/1085.html>

Product Related Information

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

▲WARNING

UNINTENDED EQUIPMENT OPERATION

- Touch panel switches should not be used to make a switch that could result in human injury or equipment damage. Trouble with the display unit, units, and cables which keep the output ON or OFF could result in a serious accident. An output signal that could result in a serious accident must be equipped with a monitoring circuit such as a limiter. Please design the system so that important operation switches are handled by equipment other than the display unit. This will prevent potential accidents as a result of incorrect output or malfunctions.
- Touch panel switches should not be used for a device's Emergency Stop Switch. The Ministry of Health, Labor and Welfare requires all industrial machinery/systems must be equipped with a mechanical, manually operate emergency stop switch. Also, for other kinds of systems, similar mechanical switches must be provided to ensure safe operation of those systems.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

▲WARNING

LOSS OF DATA

Save the project periodically.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

NOTICE

LOSS OF DATA

- Do not turn off your personal computer's power switch during the execution of a program. The project files could be damaged as a result.
- Do not change the contents of this product's project files using Text Editor software. The project files could be damaged as a result.
- Do not turn off the display unit power or perform reset while using features that change a project file on the display unit. The project files could be damaged as a result.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Cybersecurity

Cybersecurity Guideline

Use this product inside a secure industrial automation and control system. Total protection of components (equipment/devices), systems, organizations, and networks from cyber attack threats requires multi-layered cyber risk mitigation measures, early detection of incidents, and appropriate response and recovery plans when incidents occur. For more information about cybersecurity, refer to the Pro-face HMI/IPC Cybersecurity Guide.

https://www.proface.com/en/download/manual/cybersecurity_guide

⚠ WARNING

POTENTIAL COMPROMISE OF SYSTEM AVAILABILITY, INTEGRITY, AND CONFIDENTIALITY

- Change default passwords at first use.
- Disable unused ports/services and default accounts, where possible.
- Place networked devices behind multiple layers of cyber defenses (such as firewalls, network segmentation, and network intrusion detection and protection).
- Apply the latest updates and hotfixes to your Operating System and software.
- Use cybersecurity best practices (for example: least privilege, separation of duties).

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Introduction

This Quick Start Guide is intended for persons who are using BLUE Open Studio 2023 for the first time, and it will help you to familiarize yourself with the basic functions of the software.

BLUE Open Studio 2023 is a powerful, integrated tool that uses key features of Microsoft operating systems and enables you to build full-featured SCADA (Supervisory Control and Data Acquisition) or HMI (Human-Machine Interface) programs for your industrial automation business.

Conventions used in this documentation

This documentation uses standardized formatting and terminology to make it easier for all users to understand.

Text conventions

This documentation uses special text formatting to help you quickly identify certain items:

- Titles, labels, new terms, and messages are indicated using *italic* text (for example, *Object Properties*).
- File names, screen text, and text that you need to enter are indicated using **monospace** text (for example, `D:\Setup.exe`).
- Buttons, menu options, and keyboard keys are indicated using a **bold** typeface (for example, **File** menu).

In addition, this documentation segregates some text into **Tip**, **Note**, and **Caution** boxes:

- A **Tip** box provides information that helps you to save development time or improve run-time performance.
- A **Note** box provides information that helps you to understand other nearby text, usually the text just before the note.
- A **Caution** box provides information that helps you to avoid potentially hazardous situations, which, if not avoided, can result in minor injury or equipment damage.

Mouse and selection conventions

Because most PCs used for project development run a version of Microsoft Windows with a mouse, this documentation assumes you are using a mouse. Generally, a PC mouse is configured for right-handed use, so that the left mouse button is the primary button and the right mouse button is the secondary button.

This documentation uses the following mouse and selection conventions:

- **Click** and **Select** both mean to click once on an item with the left mouse button. In general, you click buttons and you select from menus and lists.
- **Double-click** means to quickly click twice on an item with the left mouse button.
- **Right-click** means to click once on an item with the right mouse button.
- **Select** can also mean that you need to use your pointing device to highlight or specify an item on the computer screen. Selecting an item with a touchscreen is usually the same as selecting with a mouse, except that you use your finger to tap the item on the screen. To select items with your keyboard, you typically use the Tab key to move around options, the Enter key to open menus, and the Alt key with a letter key to select an object that has an underlined letter.
- **Drag** means to press down the appropriate mouse button and move the mouse before releasing the button. Usually an outline of the item will move with the mouse cursor.

Windows conventions

This documentation uses the following Windows conventions:

- **Dialogs** are windows that allow you to configure settings and enter information.
- **Text boxes** are areas in dialogs where you can type text.
- **Radio buttons** are white circles in which a black dot appears or disappears when you click on the button. Typically, the dot indicates the option is selected or enabled. No dot indicates the option is cleared or disabled.
- **Check boxes** are white squares in which a check (`Titlebar`) appears or disappears when you click on it with the cursor. Typically, a check indicates the option is selected or enabled. No check indicates the option is cleared or disabled.
- **Buttons** are icons in boxes appear "pressed" when you click on them.
- **Lists** are panes (white boxes) in windows or dialogs containing two or more selectable options.
- **Combo boxes** have arrows that, when clicked, show part or all of an otherwise concealed list.
- **Dockable windows** are windows that you can drag to an edge of the interface and merge with that edge.

About this software

BLUE Open Studio 2023 is powerful software for developing HMI, SCADA, and OEE/Dashboard projects that can be deployed anywhere.

Each project consists of:

- A project tags database to manage all run-time data, including both internal variables and I/O data;
- Configurable drivers to communicate in real-time with programmable logic controllers (PLCs), remote I/O devices, and other data-acquisition equipment;
- Animated human-machine interface (HMI) screens and overall equipment effectiveness (OEE) dashboards; and
- Optional modules such as alarms, events, trends, recipes, reports, scriptable logic, schedulers, a project security system, and a complete database interface.

After you develop your project, you can either run it locally on your development workstation or download it to a remote computer and run it there. The project runtime server processes I/O data from connected devices according to your project parameters and then reacts to, displays, and/or saves the data.

Product features

ActiveX and .NET

Use third-party controls to enhance your project. This software is a container for ActiveX and .NET controls. Add functionality such as browsers, media players, charting, and other tools that support the ActiveX and .NET interface standards.

Alarms

In addition to all of the alarm functions you would expect, this software also sends alarms using multi-media formats like PDF. Use remote notification to have alarms sent right to your email inbox, a printer, or a smartphone! Alarms are real-time and historical, log data in binary format or to any database.

Animation

This software gives you great command over graphics. Paste images, and even rotate them dynamically. Fill bar graphs with color, or adjust the scale of objects with easy-to-use configuration. Other animations include "command" (for touch, keyboard and mouse interaction), hyperlink, text data link, color, resize (independent height and width), position, and rotation (with custom rotation point).

Database

Connect to SQL databases (MS SQL, MySQL, Sybase, Oracle), MS Access and Excel, and ERP/MES systems (including SAP). Flexible enough to have a built-in interface without the need to know SQL (for trends, alarms/events, grid and other objects), or use any SQL statement you need anywhere you need it.

Drivers

This software includes over 240 built-in communication drivers for most PLCs, temperature controllers, motion controllers, barcode/RFID readers, and other devices. Use these built-in drivers without the need for OPC servers (but are an optional connection method).

Email

Send email via SMTP to any desktop or mobile device. Get real-time information on alarms, process values, and other events. This software supports SSL encryption allowing the use of third-party providers such as Gmail.

Events

This software offers traceability for operator initiated actions or internal system activity. Log events such as security system changes (user logon/logoff), screen open/close, recipe/report operations, tag value changes, custom messages, and other run-time issues.

FDA Traceability

Take advantage of built-in traceability and e-signature features to create projects that fully comply with U.S. Food and Drug Administration regulations (Title 21 CFR Part 11). These features are often used in food and pharmaceutical applications, but they can be used in any application where traceability is required.

FTP

Automatically upload or download files during run time to/from remote storage locations using FTP and flexible scripting functions. Configure FTP via scripting or the included configuration interface.

Graphics and Design Tools

Create powerful screens to meet any application need using the improved tools in our graphic interface. Combine built-in objects to create any functionality required. Store graphics in the symbol library for future use. Easily make projects across a product line share a consistent "look and feel".

Historical Performance

We have optimized the trend history module and designed it to load millions of values from SQL relational databases with high performance, with built-in data decimation in the Trend Control. Easy-to-use tools provide quick access to Statistical Process Control (SPC) values without any need for programming.

Intellectual Property Protection

Screens, documents, scripts and even math worksheets can be individually password protected. This helps to prevent unauthorized viewing or editing of your corporate custom functionality.

Multi-Language

Develop your project in one of many development languages, including English, Portuguese, German, and French.

OPC

As an alternative to the built-in drivers for direct communication with PLCs, you can also use any of several different versions of OLE for Process Control (OPC) to manage your devices. This software includes support for "classic" OPC DA (client or server), OPC UA (client or server), OPC XML-DA (client only), and OPC HDA (server only).

PDF Export

Send Alarms, Reports, or any file (including .doc or .txt) to a production supervisor, quality manager, or maintenance staff using the included PDF writer.

Recipes

Save time and maintain consistency by automating part parameters or productions quantities with any triggering event.

Redundancy

This software supports web server, database and overall system redundancy to help ensure data integrity.

Reports

Create clear, concise reports in text format, graphical RTF, XML, PDF, HTML, and CSV, or integrate with Microsoft Office. Get the data you need, in the format you need it, to make informed decisions, fast.

Scalable

Develop once and deploy anywhere, on any currently supported version of Microsoft Windows.

Scheduler

Schedule custom tag changes on date/time, frequency, or any trigger. Use this for simulation, to trigger reports or other functionality at a particular time of day, or even to trigger driver worksheets to read/write at a scan rate you choose.

Scripting

Two powerful scripting languages are supported. Use built-in functions or use standard VBScript to take advantage of widely available resources. Both can be used simultaneously to give you the functionality you need.

Security

This software provides support for group and user accounts, e-signatures, and traceability, as well as support for Lightweight Directory Access Protocol (LDAP). Integrate your project with your Active Directory, including Active Directory Application Mode (ADAM).

SSL Support for Emails

Native support for Secure Socket Layer (SSL), which makes it easy and secure to send emails from this software using third-party tools such as Gmail!

Standards

Take advantage of common industry standards to develop projects that are compatible with any format. TCP/IP, ActiveX/.NET, OPC (client and server), COM/DCOM, OLE, XML, SOAP, and HTML are all supported.

SNMP

Easily configure managed networked devices on IP networks (such as switches and routers) using incorporated SNMP configuration commands and an easy-to-use configuration interface.

Symbols

An extensive library of pre-made symbols features push buttons, pilot lights, tanks, sliders, meters, motors, pipes, valves and other common objects. Use the included symbols in your project, modify existing symbols to suit your needs, or create your own from scratch. Plus support for third-party symbol libraries and graphic tools.

Tags Database

This software features an object-oriented tags database with boolean, integer, real, strings, arrays, classes (structures), indirect tags, and included system tags.

Thin Clients

Remotely view project screens on several different types of thin clients. Use the standalone Secure Viewer in order to increase security on plant-floor stations. Or use the HTML5-enabled Mobile Access in order to access your project from almost any other browser or mobile device.

Trends

Real-time and Historical trends are supported. Log data in binary format or to any database locally and remotely. Color or fill trends with graphic elements to enhance clarity of data. Date/Time based or numeric (X/Y plot) trends give you the flexibility to display information that best suits your project.

Troubleshooting


Quickly debug and verify a project using local and remote tools for troubleshooting, including status fields, Watch and LogWin. Capture screen open and close times, see communications in real-time, and messages related to OPC, recipes/reports, security, database activity, and even custom messages. Quickly get your project finished using these powerful tools.

About the software components

The software suite comprises several individual components that can be installed on different platforms to perform different functions. The architecture of your finished project depends on which components you install, where you install them, and how you connect them to each other.

The following table lists all of the available components.

Component	Description	Platform(s)
Studio	The full software, licensed for and running in "Engineering" mode. Includes the following: <ul style="list-style-type: none"> Project development environment Tag integration Project viewer, for testing screens Remote management of project runtimes 	Windows Windows Server
SCADA	The full software, licensed for and running in "Runtime" mode. Includes the following: <ul style="list-style-type: none"> Project runtime Remote agent, to allow remote management Project viewer 	Windows Windows Server
HMI Runtime	Standalone runtime for Linux. Includes the following: <ul style="list-style-type: none"> Project runtime (limited tags and drivers) Remote agent, to allow remote management Mobile Access add-on for CGI-enabled web server 	Linux distributions: <ul style="list-style-type: none"> Ubuntu Raspberry Pi BeagleBone others (contact us)
Database Gateway (StADOSvr)	Enables communication between the project runtime and external databases, including AVEVA Historian and most ADO.NET-compatible databases. Must be installed separately when using HMI Runtime, because Database Gateway runs on Windows only.	Windows Windows Server
Mobile Access Runtime	Enables the project runtime to serve HTML5-enhanced project screens to web browsers and mobile devices.	Internet Information Services (IIS) for Windows, or any CGI-enabled web server (e.g., Apache)
Secure Viewer	Project viewer / thin client, installed as a standalone program. (See below.)	Windows Windows Server

 **Note:** Although the term "Windows Embedded" appears in the communication driver manuals, BLUE Open Studio 2023 is not supported on the Windows Embedded operating system.

It helps to distinguish between the project development environment and the project runtime. You can use the project development environment to design, develop, troubleshoot, deploy, and monitor projects. In contrast, the project runtime actually runs your project, communicates with external databases and devices, and serves screens to project viewers.

The full software for Windows includes both the project development environment (a.k.a. "Studio") and the project runtime (a.k.a. "SCADA"). Your software license determines which parts of the software you can use on a specific computer. For more information, see [Execution modes](#) on page 18.

HMI Runtime is a new, platform-agnostic runtime edition for other embedded devices. It has very low system requirements and somewhat limited features.

In most cases, the first thing you need to do is install the full software on your primary workstation, because it not only sets up the project development environment for you, it also unpacks the rest of the components so that they can be installed on other computers and devices.

We recommend that you use Mobile Access instead of our traditional Thin Client software whenever possible. Thin Client depends on legacy, Windows-only technologies, while Mobile Access allows you to use any HTML5-compatible browser running on any platform as a project viewer. Mobile Access does not yet support all of the features that Thin Client does, but we are continuing to improve Mobile Access with every new release.

Differences between the runtime editions

You can develop projects once in the Studio development environment and then run them on any of the runtime editions. This topic describes the differences between the editions, so that you can decide which to use.

The following table shows the minimum system requirements for each runtime edition.

Requirement	SCADA	HMI Runtime
Windows	Supported	Not supported
Windows Server	Supported	Not supported
Linux	Not supported	Supported
Available storage (hard drive or non-volatile)	2 GB or more	64 MB
Available memory (RAM)	1 GB or more	32 MB

For a complete list of system requirements for each runtime edition, see the installation instructions for that edition.

The following table shows the main differences between the runtime editions in their support for project features. (The majority of features are fully supported by all editions, so they are not listed.) If you develop a project to include features that are not supported by your chosen edition, you might see unexpected behavior and possibly even serious issues during run time. Some features will be automatically hidden in the project development environment when you select your project's target platform, but you still need to be aware of the differences. For more information, see [About target platforms, product types, and target systems](#).

Feature	SCADA	HMI Runtime
Run projects developed in Studio	Supported	Supported
Run as a Windows service	Supported	Not supported
Local project viewer	Supported	Not supported
Server for Secure Viewer	Supported	Not supported
Support for Mobile Access	Supported	Supported
Email (SMTP client)	Supported	Not supported
Create tags programmatically during run time	Supported	Not supported
Create screens programmatically during run time	Supported	Not supported
Save reports in PDF format	Supported	Not supported
Built-in functions	Supported	Supported with limitations ¹
Tag integration (a.k.a. Shared Tags)	Supported	Not supported
Security	Supported	Supported with limitations ²
Translation	Supported	see Mobile Access
Procedures	Supported	Not supported ³
Alarms	Supported	Supported with limitations ⁴
Events	Supported	Supported with limitations ⁴
Trends	Supported	Supported with limitations ⁴
Recipes	Supported	Not supported
Reports	Supported	Not supported
Math	Supported	Supported
Script	Supported	Not supported ³
Scheduler	Supported	Not supported

Feature	SCADA	HMI Runtime
Database/ERP	Supported	Supported with limitations ⁵
Drivers	Supported	Supported with limitations ⁶
OPC DA Client (Legacy)	Supported	Not supported
OPC DA Server	Supported	Not supported
OPC HDA Server	Supported	Not supported
OPC UA Client	Supported	Supported with limitations
OPC UA Server	Supported	Supported
OPC XML/DA Client	Supported	Not supported
TCP/IP Client/Server	Supported	Not supported
Industrial Graphics Screens	Supported	Not supported
Native Screens	Supported	Supported
Screen Group	Supported	Supported
Graphic Script	Supported	Not supported ³
Screen Script	Supported	Not supported ³
Shapes	Supported	Supported
Active Objects	Supported	Supported with limitations ⁷
Data Objects	Supported	see Mobile Access
Libraries > Symbols	Supported	Supported with limitations ⁸
Libraries > ActiveX Controls	Supported	Not supported
Libraries > .NET Controls	Supported	Not supported
Libraries > Linked Pictures	Supported	see Mobile Access
Libraries > Custom Widgets	Supported	see Mobile Access
Auto screen scaling	Supported	see Mobile Access
Fill effects in shapes	Supported	see Mobile Access
Ellipse object styles	Supported	see Mobile Access
Hint (tooltip)	Supported	see Mobile Access
Command events	Supported	see Mobile Access
Rotation animation	Supported	see Mobile Access
Trend Control > Fill effects	Supported	see Mobile Access
Trend Control > Export to File	Supported	see Mobile Access
Enhanced graphics (incl. anti-aliasing)	Supported	see Mobile Access
Multi-touch gestures	Supported	see Mobile Access
Number of project tags	up to 64,000	up to 4000
Number of thin clients	Unlimited ⁹	Unlimited ⁹
Hardkey license (USB)	Supported	Not supported

¹ Most functions are supported in all editions, but some specific functions are not supported in this edition. For more information, see [List of available functions](#).

² Local mode only. Distributed and Domain modes are not supported.

³ VBScript is not supported.

⁴ Proprietary format is not supported. Alarm, Event, and Trend history can be saved in Database format only.

⁵ Some Database/ERP functions are supported. Database/ERP worksheets are not supported.

⁶ Most drivers are supported in all editions, but some specific drivers are not supported in this edition. For more information, see the documentation for each driver.

For a comprehensive list of supported features and limitations in HMI Runtime, see [Supported features in HMI Runtime](#).

⁷ Pushbutton, ListBox, and Smart Message objects are not supported. Minor limitations in other objects.

⁸ A specific linked symbol is supported as long as all of its component objects and animations are also supported.

⁹ Limited by runtime license, and by external and physical constraints (i.e., hardware and operating system).

Install the full software

Install the full software on your Windows computer in order to develop projects, or to use the computer as a project runtime server and/or thin client.

Hardware Requirements

Standard requirements:

- A Windows-compatible computer with a standard keyboard, a pointer input (mouse, trackpad, or touchscreen. etc.), and an SVGA-minimum display.
- Minimum 2 GB available storage (hard drive or non-volatile).
- Minimum 1 GB available memory (RAM).
- An Ethernet or Wi-Fi network adapter.

Optional items:

- A USB port or memory card slot, to be used for hardkey licensing of the software.
This item is optional because softkey licensing is also available.
- Serial COM ports and adapters, to be used for direct communication with PLCs and other devices.
This item is optional because many newer device protocols use Ethernet communication (TCP or UDP) instead of serial communication.

Software Requirements

One of the following Windows operating systems:

- Windows:
 - Windows 11
 - Windows 10, version 1909 or later (including LTSC/LTSB versions)
- Windows Server:
 - Windows Server 2022
 - Windows Server 2019
 - Windows Server 2016

Use the "Pro" or "Enterprise" editions of Windows because they include Internet Information Services (IIS) as a pre-installed feature that can be turned on. Do not use the "Home" and "Education" editions of Windows, because many features are hidden or disabled in these editions.

Update Windows before you install the software in order to have the latest security fixes and system components.

.NET Framework

This software requires .NET Framework 4.8 (or later) installed and enabled.

If Windows is fully updated on your computer, the latest versions of .NET Framework should be installed, but they might not be enabled. Use either the *Windows Features* control panel in Windows or the *Server Manager* console in Windows Server to confirm that .NET Framework 4.8 is enabled.

In some cases, it might not be possible to update Windows through normal means. For example, if your computer is on a private network without access to the Internet, it might not be able to contact the Windows Update service. You can use another computer to download an offline installer for .NET Framework and then transfer it.

Optional Software

- Internet Information Services (IIS) installed and turned on. IIS is the default web server for Windows.
This item is optional because it is not required to develop a basic project and then run it on a standalone device, but it is required in order to use more advanced features.
 - In most cases, IIS is required in order to install and then use Mobile Access. You may choose not to install the Mobile Access Runtime feature at this time. You can install it at a later time, for either IIS or CGI. For more information, see the [Mobile Access Runtime](#) feature in the "Select Features" installation step.

- IIS is required in order to run projects that include Industrial Graphics symbols.
 - Either Microsoft Edge or Google Chrome, to be used for viewing project screens in Mobile Access.
- This item is optional because you can always use the built-in Viewer program to view project screens.

System Sizing

The operating system, storage, and memory requirements will necessarily increase for larger projects; the minimum requirements listed above are only for projects of up to 4,000 tags. The following table shows the complete requirements:

Project Size	Operating System	Storage	Memory
up to 4,000 tags	Windows, Windows Server	2 GB available	1 GB available
up to 64,000 tags	Windows, Windows Server	4 GB available	2 GB available

Your computer needs to meet only the minimum requirements when you first install the software and begin to develop your project, but the requirements will increase as your project grows. Every computer or device that you plan to use as a runtime station is subject to the same requirements.

Industrial Graphics

If you are using [Industrial Graphics](#) screens, the project should be hosted on a dedicated Windows system with IIS installed. The additional system recommendations for this dedicated system are:

- CPU PassMark® > 5200 pts
- 16 GB available RAM memory (Each client session requires ~200 MB of memory, depending upon graphics complexity.)

These recommended requirements are suitable for a system with ten clients, browsing pages with approximately 40 dashboard/charting components with ~250 I/O tags on the page. Pages may take a longer time to display on the first visit. The display time depends on graphics and script complexity. Additional clients can be supported by increasing the number of CPU's, CPU speed, and Memory.

User Privileges

You need to have administrator privileges on your computer in order to install any software. If you are not already signed on as a user with administrator privileges when you run the software installer, you can choose to run the installer as an administrator. To do this, right-click the installer program file (`setup.exe`), and then on the shortcut menu, click **Run as administrator**. You will be asked for the appropriate user name and password.

To install the full software:

1. Close all other running programs, if possible, but not Windows services.
2. Do one of the following:
 - Download the zipped installer to your computer, either from our website (www.pro-face.com/trans/en/software/1090.html) or from another location on your network where you have previously saved it. Extract the files, open the resulting folder, and then locate and run the setup program (`setup.exe`).

The installation wizard runs and asks you to select a language for the installation.

3. Select a language from the list, and then click **OK**.
This selection determines the language of the user interface for both the installation wizard and the project development environment. You can change the language for the project development environment later, after the software has been installed.
The wizard prepares for installation. During this step, it automatically installs SafeNet's Sentinel drivers (a part of the software licensing mechanism), .NET Framework 3.5, and .NET Framework 4.8, if necessary.
4. On the **Welcome** page of the wizard, click **Next** to proceed with the installation.
5. On the **License Agreement** page, click **Yes** to accept the agreement and proceed, or click **No** to refuse the agreement and exit the wizard.
6. On the **Customer Information** page, type your user name and company name, and then click **Next**.
7. On the **Choose Destination Location** page, select the folder in which you want to install the software, and then click **Next**.

By default, the software will be installed at the following location:


C:\Program Files (x86)\Pro-face\BLUE Open Studio 2023

8. On the **Select Features** page, select the specific features and components that you want to install, and then click **Next**.

Feature	Description
Program Files	The main program files for the project development application, project runtime server, and project runtime client. This feature cannot be deselected.
Custom Widget Framework	Installs files for the Custom Widget Framework, which is used to create HTML5-based widgets and use them in project screens. This feature cannot be deselected.
Database Gateway and Historian Integration	Installs Studio Database Gateway, AVEVA Historian integration, and AVEVA Insight integration. This feature is required for any database communication. This feature requires .NET Framework 4.8 (or later) installed and turned on.
Demo Projects	Sample projects that demonstrate the capabilities of the software.
Industrial Graphics	Industrial Graphics is a powerful modern graphic editor that enables creation of portable graphic libraries that can be reused in products that use this platform-agnostic solution. It acts as a companion to our native graphics tools.
Mobile Access Runtime	Additional software to make the project runtime accessible to mobile devices such as tablets and smartphones, using HTML5-compatible browsers to view the project screens. This feature requires Microsoft .NET Framework 4.8 and Microsoft IIS--with ASP, ASP.NET, and ISAPI Extensions enabled--installed and turned on. This required software will be installed if necessary. Whether or not this feature is selected during installation, a separate Mobile Access Runtime software installer (<code>MobileAccessSetup.exe</code>) will be copied to the program folder. This installer can be run at a later time.
PDF Printing	Additional software for printing runtime reports directly to PDF files.
Security System Device Driver	Installs device driver for security system to lock the keyboard (kbdlock).
Symbol Library	A large library of premade but configurable screen objects such as pushbuttons, toggle switches, gauges, dials, and indicator lights.

9. On the **Ready To Install** page, click **Install**.

 **Note:** You might receive the following message during installation: "Error 1628: Failed to complete script based install." For more information about this issue and how to resolve it, go to: https://flexeracommunity.force.com/customer/articles/en_US/ERRDOC/Error-1628-Failed-To-Complete-Script-Based-Install

 **Note:** If you try to install an earlier version of this software on a computer that already has a later version installed, you might receive the following message during installation: "Version x.x.x.x of CodeMeter Development Kit is already installed. Downgrading to Version x.x.x.x is not possible, installation will be aborted." CodeMeter is supplemental software used to manage hardkey licenses. To resolve this issue, use Task Manager in Windows to stop CodeMeter Runtime Server (`CodeMeter.exe`) before you install the earlier version of the software.

The software is installed, and then when the installation is finished, the last page of the wizard is displayed.

10. Click **Finish** to close the installation wizard.

When you have finished the installation, you can find the software in your Windows Start menu at:

Start > Pro-face 2023 > BLUE Open Studio 2023 2023.

The software includes the following "apps" (applications):

BLUE Open Studio 2023

The project development environment and/or the project runtime for Windows. Its capabilities are determined by your software license.

BLUE Open Studio 2023 Help Manual

A complete technical reference and user guide for all of the BLUE Open Studio 2023 software.

BLUE Open Studio 2023 Quick Start Guide

A brief guide to installing and using the project development environment, including a tutorial for developing a simple project.

BLUE Open Studio 2023 Register

A utility program that manages your BLUE Open Studio 2023 software license.

BLUE Open Studio 2023 Release Notes

A list of changes in the BLUE Open Studio 2023 software.

BLUE Open Studio 2023 Remote Agent

A utility program that allows other stations to remotely manage BLUE Open Studio 2023 as a project runtime.

BLUE Open Studio 2023 SCADA

A shortcut that automatically starts the project runtime and then runs the most recent project.

There will also be a shortcut icon on your desktop.

To run the software, do one of the following:

- Double-click the shortcut icon on your desktop; or
- Click **Start > Pro-face 2023 > BLUE Open Studio 2023 2023**.

If the installation does not finish as expected, you can use System Restore to restore the computer to the restore point that was created at the beginning of the installation. For more information about System Restore, go to: <https://support.microsoft.com/help/17127/windows-back-up-restore>

Execution modes

Each software component supports the following execution modes:

Execution Mode	BLUE Open Studio 2023	HMI Runtime
Evaluation Mode	Supported (Studio + SCADA)	Not supported
Demo Mode	Supported (SCADA)	Not supported
Licensed for Engineering Only	Supported (Studio)	Not supported
Licensed for Runtime Only	Supported (SCADA)	Supported

Evaluation Mode

Enables all of the software's development and runtime features for a limited time. The first time it is installed, the software runs for 40 hours in Evaluation Mode. This evaluation period includes any time you run a product module (engineering or runtime). You can use this evaluation period continuously or not; for example, 10 hours a day for 4 days, or 5 hours a day for 8 days, or 10 hours a day for 3 days plus 5 hours a day for 2 days, and so on.

After running for a total of 40 hours in the Evaluation Mode, the evaluation period ends and the software automatically switches to Demo Mode until you apply a valid license. You cannot reactivate Evaluation Mode, even if you reinstall the software on your computer.

Each major version has an evaluation period that is independent of every other major version. For example, if an earlier version is running in Demo Mode because its evaluation period has expired, and then you install the latest version on the same computer, the latest version will begin its own 40-hour evaluation period and the earlier version will continue to run in Demo Mode.

Demo Mode

Allows you to download projects to target stations and to run projects for testing or demonstration purposes. You can start runtime tasks and use the remote debugging tools (*Watch*, *LogWin*), but the project will stop automatically after two hours of continuous use. After that period, you can run the project for another two hours. You can run the project as many times as you want, but the fact that you will need to do so every two hours makes this mode inappropriate for actual use.

You cannot create or modify project screens, worksheets, or settings while in Demo Mode.

Licensed for Engineering Only

Enables the project development features for an unlimited time. This mode also allows you to run projects for testing purposes. You can start runtime tasks and use the local debugging tools (*Watch*, *Output*), but the project will stop automatically after 72 hours of continuous use. After that period, you can run the project again for another 72 hours. You can run the project as many times as you want, but the fact that you will need to do so every 72 hours makes this mode inappropriate for actual use.

Licensed for Runtime Only

Enables the runtime tasks and debugging tools (*Watch*, *Output*, *LogWin*) for an unlimited time, but you cannot create or modify project screens, worksheets, or settings.


The menu options available in Runtime Only mode are the same as the options listed for Demo Mode.

The Remote Management tool is always available, regardless of the mode, so that you can upload files from or download files to target stations.

To see which mode you are currently in, go to the **Help** tab of the ribbon and then click **About**. The *About* dialog box shows the execution mode, including the time remaining if you are in Evaluation Mode.


The Development Environment

BLUE Open Studio 2023 incorporates a modern, Ribbon-based Windows interface to provide an integrated and user-friendly project development environment.

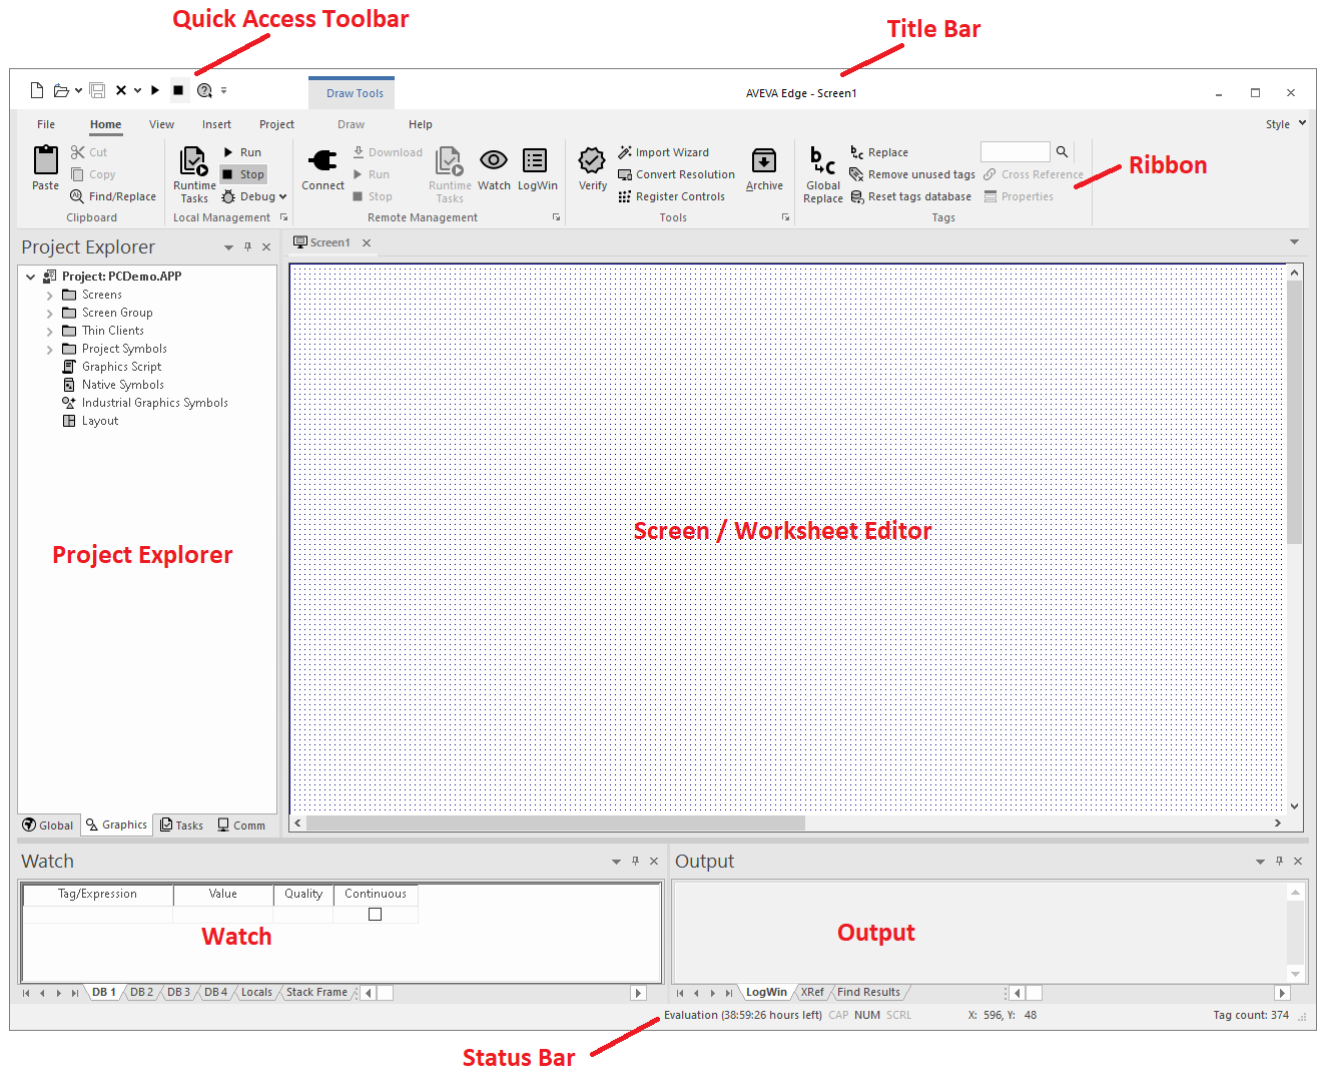

Title bar

The Title Bar located along the top of the project development environment displays the full name of the Studio application (e.g., BLUE Open Studio 2023), followed by the name of the active screen or worksheet (if any).



Example of Title Bar

The Title Bar also provides the following buttons (from left to right):

- **Minimize** button: Click to minimize the development environment window to the Taskbar.
- **Restore Down / Maximize**: Click to toggle the development environment window between two sizes:
 - **Restore Down** button reduces the window to its original (default) size.
 - **Maximize** button enlarges the window to fill your computer screen.
- **Close** button: Click to save the database and then close the development environment. If you modified any screens or worksheets, the application prompts you to save your work. This button's function is similar to clicking **Exit Application** on the File menu.

Closing the project development environment does not close either the project runtime or the project viewer, if they are running.

Quick Access Toolbar

The Quick Access Toolbar is a customizable toolbar that contains a set of commands that are independent of the ribbon tab that is currently displayed.



Example of Quick Access Toolbar

Move the Quick Access Toolbar

The Quick Access Toolbar can be located in one of two places:

- Upper-left corner, above the menu bar (default location); or
- Below the ribbon, where it can run the full length of the application window.

To move the Quick Access Toolbar to another location:

1. Click **Customize Quick Access Toolbar** ▾.
2. In the list, click **Show Below Ribbon** or **Show Above Ribbon**.


Add a command to the Quick Access Toolbar

To add a command to the Quick Access Toolbar directly from commands that are displayed on the ribbon:

1. On the ribbon, click the appropriate tab or group to display the command that you want to add to the Quick Access Toolbar.
2. Right-click the command, and then click **Add to Quick Access Toolbar** on the shortcut menu.

To add and remove commands, or to reset the toolbar to its default, using the *Customize* dialog:

1. Click **Customize Quick Access Toolbar** ▾.
2. In the list, click **More Commands**. The *Customize* dialog is displayed.

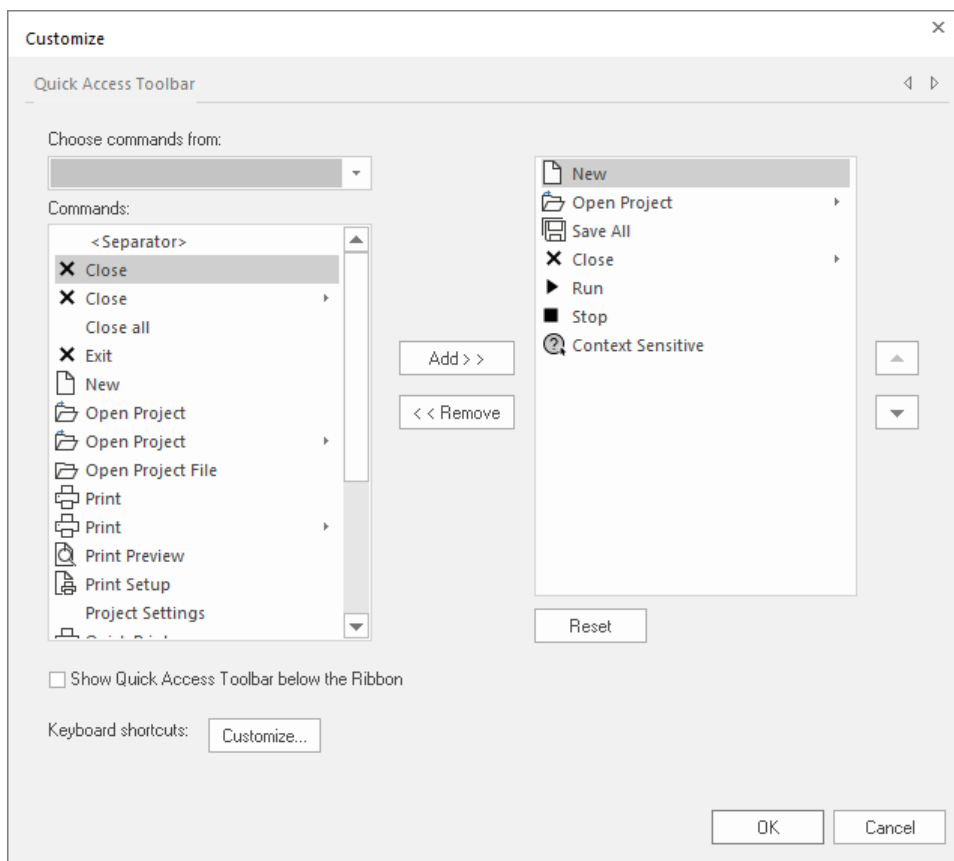

3. In the **Choose commands from** menu, select the appropriate Ribbon tab. The commands from that tab are displayed in the **Commands** list.
4. In the **Commands** list, select the command that you want to add to the Quick Access Toolbar.
5. Click **Add**.

Only commands can be added to the Quick Access Toolbar. The contents of most lists, such as indent and spacing values and individual styles, which also appear on the ribbon, cannot be added to the Quick Access Toolbar.

Ribbon


The new ribbon combines the numerous menus and toolbars from the previous versions of this software into a single, user-friendly interface. Almost all application commands are now on the ribbon, organized into tabs and groups according to general usage.

File menu

When you click the **File** tab of the ribbon, it opens a menu of standard Windows application commands like New, Open, Save, Print, and Close.

Home tab

The **Home** tab of the ribbon is used to manage your project within the development environment.

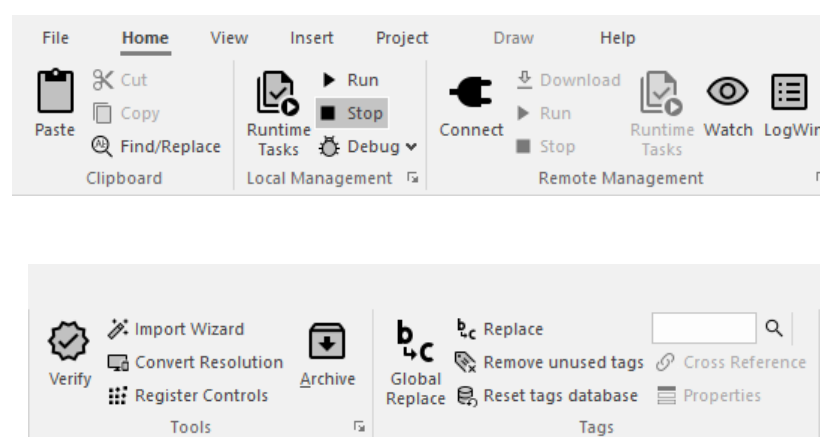


On the **Home** tab, the commands are organized into the following groups:

- **Clipboard:** [cut](#), [copy](#), [paste](#), and [find](#) items in project screens and task worksheets.
- **Local Management:** [Run](#) and [stop](#) the project on the local station (i.e., where the development application is installed), as well as manage the [execution tasks](#). You can also run a project in Debug mode, for [debugging VBScript](#).
- **Remote Management:** Connect to a remote station so that you can download the project to it, and then run, stop, and troubleshoot the project on that station.
- **Tools:** Miscellaneous tools to [verify the project](#), [import tags](#) from other projects, [convert screen resolutions](#), and [register ActiveX and .NET controls](#).
- **Tags:** [Manipulate tags and tag properties](#) in the project database.

View tab

The **View** tab of the ribbon is used to customize the look of the development environment itself.

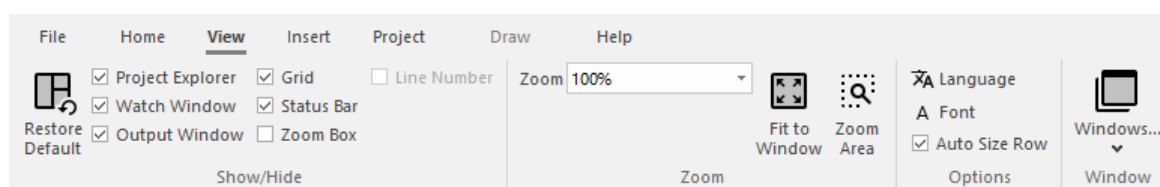


On the **View** tab, the commands are organized into the following groups:

- **Show/Hide:** Show and hide the different parts of the development environment, as well as restore the default layout.
- **Zoom:** [Zoom](#) in and out of the screen editor.
- **Options:** Change the [language](#) and [font](#) used in the development environment.

- **Window:** [Arrange the windows](#) in the development environment.

Insert tab

The **Insert** tab of the ribbon is used to insert new tags, screens, worksheets, and other components into your project.

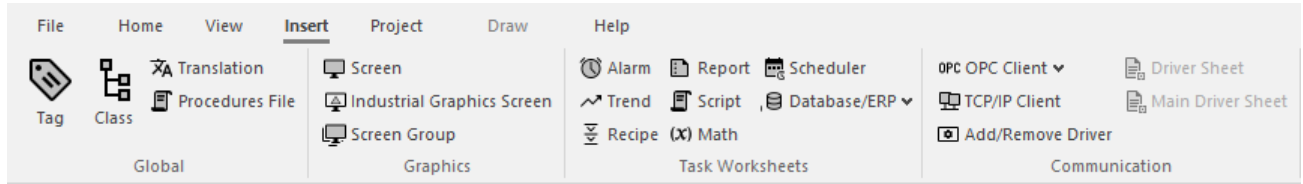


On the **Insert** tab, the commands are organized into the following groups:

- **Global:** Insert [tags](#), [classes](#), [translations](#), and [procedures](#) into the [Global tab](#) of the Project Explorer.
- **Graphics:** Insert [screens](#) and [screen groups](#) into the [Graphics tab](#) of the Project Explorer.
- **Task Worksheets:** Insert [task worksheets](#) into the [Tasks tab](#) of the Project Explorer.
- **Communication:** Insert [server configurations](#) and [communication worksheets](#) into the [Comm tab](#) of the Project Explorer.

Project tab

The **Project** tab of the ribbon is used to configure your project settings.

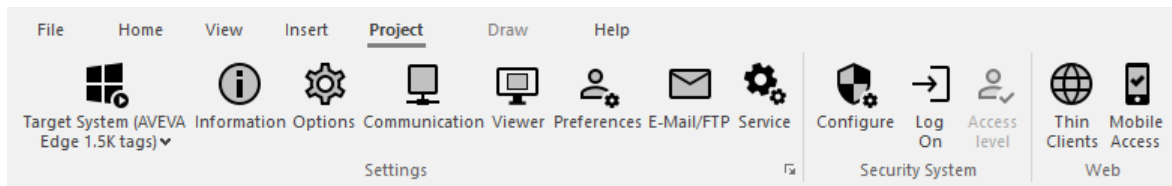


On the **Project** tab, the commands are organized into the following groups:

- **Settings:** Configure the general [project settings](#) or set the project to [run as a Windows service](#).
- **Security System:** Enable and configure the [project security system](#).
- **Web:** Configure the project to accept connections from a variety of [thin clients](#).

Draw tab

The **Draw** tab of the ribbon is used to draw objects in project screens.

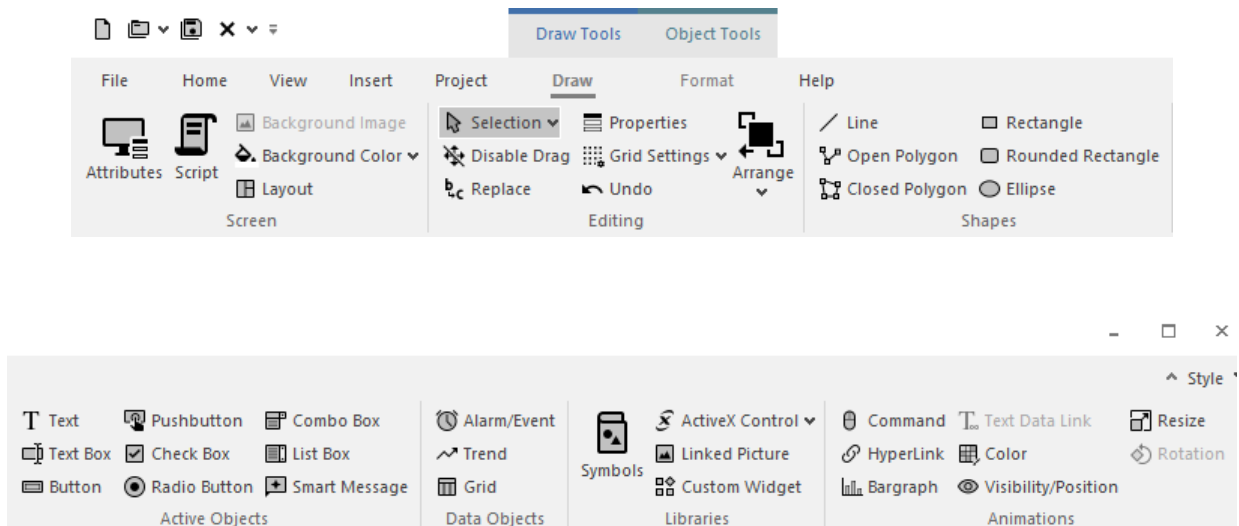


The **Draw** tab is available only when you have a project screen open for editing.

On the **Draw** tab, the commands are organized into the following groups:

- **Screen:** Configure settings for the project screen itself, such as its [attributes](#), [script](#), and [background color or image](#).
- **Editing:** [Select and edit objects](#) in the project screen.
- **Shapes:** Draw [static lines and shapes](#).
- **Active Objects:** Draw [active objects](#), like buttons and check boxes.
- **Data Objects:** Draw [objects that display historical data](#), like alarms, events, and trends.
- **Libraries:** Select from libraries of premade objects, such as [symbols](#), [ActiveX](#) and [.NET controls](#), [external image files](#), and HTML5-based [custom widgets](#).
- **Animations:** Apply [animations](#) to other screen objects.

Format tab

The **Format** tab of the ribbon is used to format and arrange objects in a project screen.

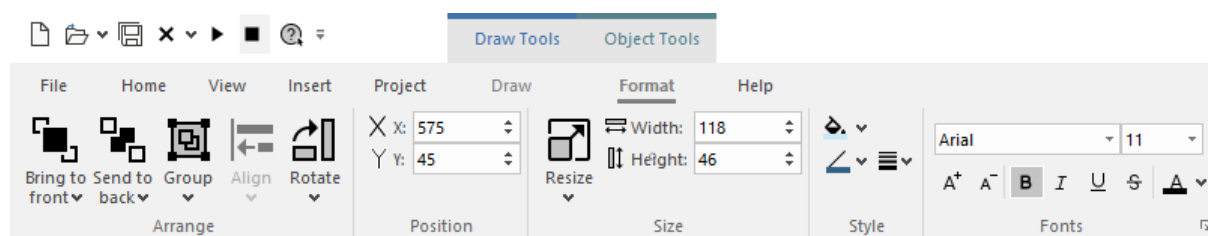


The **Format** tab is available only when you have selected one or more objects in a project screen.

On the **Format** tab, the commands are organized into the following groups:

- **Arrange:** Arrange objects in a project screen, including [bring to front and send to back](#), [group](#), [align](#), and [rotate](#).
- **Position:** Precisely adjust the [position](#) of a screen object in a project screen.
- **Size:** Precisely adjust the [size](#) of a screen object.
- **Style:** Change the [fill](#) and [line color](#) of a screen object.
- **Fonts:** Change the [caption font](#) of a screen object.

Help tab

The **Help** tab of the ribbon provides additional help with using the software.

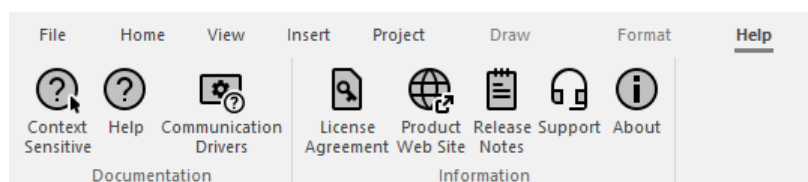

On the **Help** tab, the commands are organized into the following groups:

- **Documentation:** Access the documentation for the development application, including this [help file / technical reference](#) and notes for the individual [communication drivers](#).
- **Information:** Access other information about BLUE Open Studio 2023, including the [license agreement](#), [product website](#), and [release notes](#), as well as [support](#) details that make it easier for us to assist you.

Project Explorer

The Project Explorer organizes all of the screens, worksheets, and other items that comprise your project and presents them in an expandable tree-view.

To open a folder and view its contents, either click the Expand icon ▸ to the left of the folder or double-click the folder itself.


To close a folder, click the Collapse icon ◀ to the left of the folder.

If you right-click any item in the Project Explorer, then a shortcut menu will appear with contextual commands for that item.

There are four main sections, or tabs, in the Project Explorer: Global, Graphics, Tasks, and Comm.

Global tab

The Global tab of the Project Explorer contains the project tags database, as well as other features that apply to the entire project such as the security system, VBScript procedures, and UI translation.

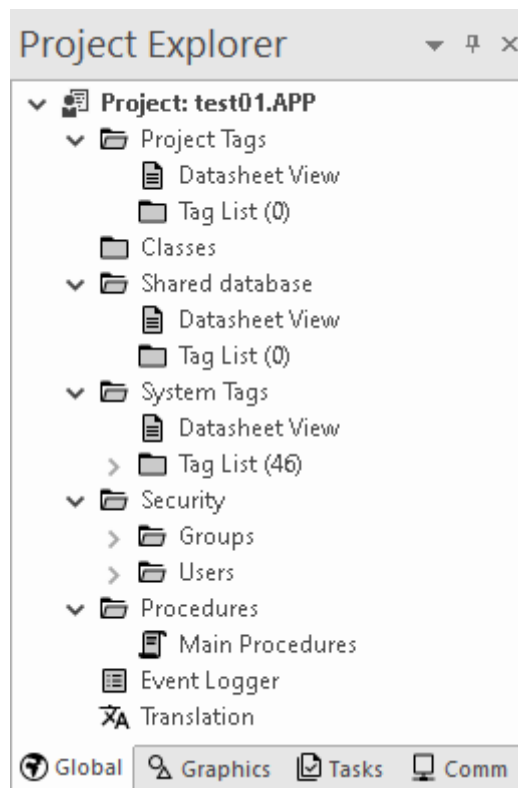

Global tab of the Project Explorer

The folders on the Global tab are described in the following sections:

Project Tags

The project tags database contains all of the data tags that you create during project development, such as screen tags (e.g., `button1_state`) or tags that read from / write to connected devices.

Classes

Classes are compound tags that you can create to associate a set of values, rather than a single value, with an object. For example, where you may normally create separate tags for a tank's pressure, its temperature, and its fill level, you can instead create a "tank" class that includes all three.

Shared Database

The shared database contains tags that were created in another program and then imported into or integrated with your project.

System Tags

System tags are predefined values such as the date, the time, the name of the current user, and so on. You can use these values to develop supervisory functions and housekeeping routines.

All system tags are read-only, which means you cannot add, edit, or remove these tags from the database.

Security

If you choose to enable it, you can use the project security system to control who may log on to your project and what they may do during runtime.

Procedures

Procedures are VBScript functions and sub-routines that can be called by any other script in your project.

Event Logger


The event logger saves run-time messages and task activity to an external database.

Translation

You can use the translation table to develop a multilingual user interface (MUI) for your project.

Graphics tab

The Graphics tab of the Project Explorer contains all of the screens, screen groups, and symbols in your project.

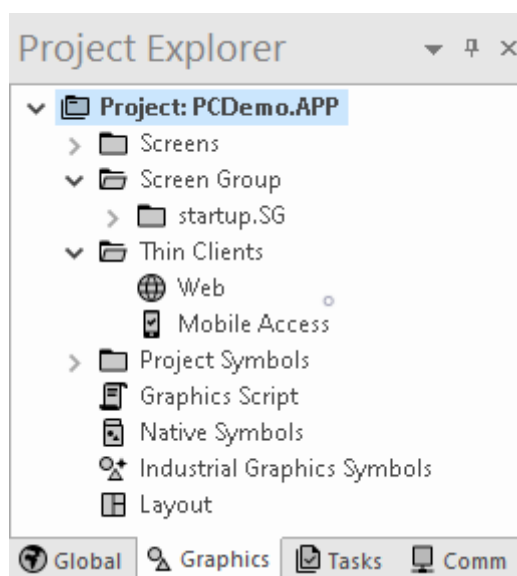

Graphics tab of the Project Explorer

The folders on the Graphics tab are described in the following sections:

Screens

You create screens to provide a graphical interface for your project. Each screen can contain many buttons, sliders, dials, indicators, graphs, and so on.

Screen Groups

You can combine individual screens into screen groups, so that they all open together at the same time.

Thin Clients

You can deploy your project as a web application to be accessed by thin clients such as desktop web browsers, tablets, and smartphones. You can even deploy different versions of your project with different levels of functionality for each type of client.

Project Symbols

This folder contains all of the custom symbols that you create for your project. A symbol is a group of interconnected screen objects that work together to perform a single function —

for example, lines, rectangles, and text fragments that have been arranged to make a slider control.

Graphics Script

You can use this worksheet to define VBScript sub-routines that are called only when the graphics module starts (i.e., when a client station connects to the server and displays the graphical interface), while it is running, and when it ends.

Native Symbols

This folder is a library of the symbols that are created with the native graphics tools in Studio. It contains not only the custom symbols that you create (see Project Symbols above), but also a large selection of premade symbols that are installed with Studio.

Industrial Graphics Symbols


This folder is a library of the symbols that are created with the Industrial Graphics editor, which works as a companion to the native graphics tools in Studio.

Layout

The layout editor displays all of the screens that are currently open for editing. You can use it to visualize how the screens are arranged together and reuse screens in multiple layouts — for example, to create a common navigation bar across your entire project.

Tasks tab

The Tasks tab of the Project Explorer organizes the worksheets that are processed as background tasks (i.e., server-based maintenance tasks that are not directly related to screen operations or device I/O) during project runtime.

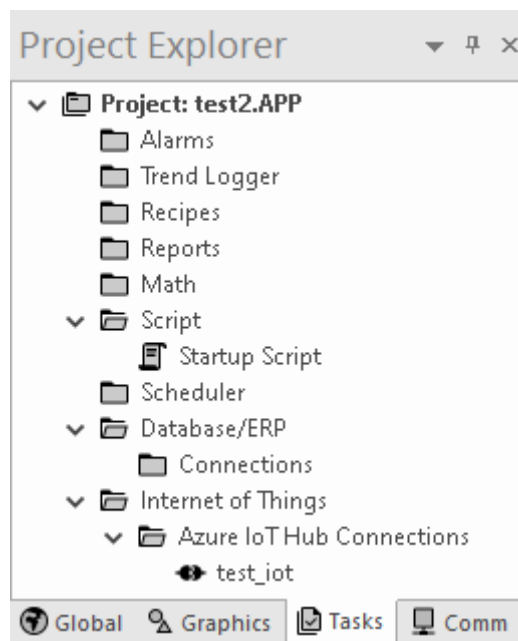

Tasks tab of the Project Explorer

The folders on the Tasks tab are described in the following sections:

Alarms

You can use Alarm worksheets to define when alarms are triggered, how they are handled, and what messages they generate.

(You can then use the Alarm/Event Control screen object to display your alarms on screen, but that is a separate procedure.)

Trend Logger

You can use Trend worksheets to select project tags to display as data trends and/or save as historical data.

(You can then use the Trend Control screen object to actually display your trends on screen, but that is a separate procedure.)

Recipes

You can use Recipe worksheets to select project tags that will load values from and/or save values to an external file. These worksheets are typically used to execute process recipes, but you can store any type of information such as passwords, operation logs, and so on.

(You can then call the `Recipe` function to actually run a configured Recipe worksheet, but that is a separate procedure.)

Reports

You can use Report worksheets to design runtime reports that are either sent to a printer or saved to disk.

(You can then call the `Report` function to actually run a configured Report worksheet, but that is a separate procedure.)

Math

You can use Math worksheets to develop complex runtime logic using the built-in scripting language.

Script

You can use Script worksheets to develop complex runtime logic using VBScript.

Scheduler

You can use Scheduler worksheets to run commands at specified times, dates, or trigger events.

Database/ERP


You can use Database worksheets to set up connections and exchange data with external databases using the standard ADO.NET interface.

Internet of Things

You can use Internet of Things worksheets to set up connections and exchange information with external databases that send and receive data over the internet. Currently, you can connect to and interact with Azure IoT message queues.

Comm tab

The Comm tab of the Project Explorer organizes the worksheets that control communication with remote devices, using either direct communication drivers or other common protocols.

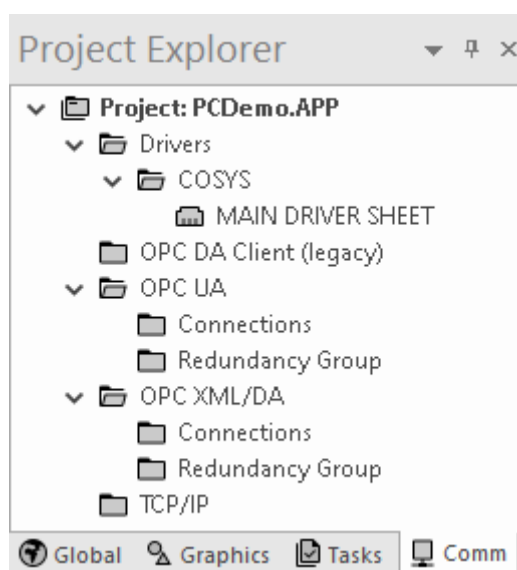

Comm tab of the Project Explorer

The folders on the Comm tab are described in the following sections:

Drivers

You can use Driver worksheets to communicate with PLCs and other hardware, using any of the hundreds of direct communication drivers that are installed with the development application.

OPC DA 2.05

You can use OPC worksheets to communicate with OPC servers via the OPC Classic protocol.

OPC UA

You can use OPC UA worksheets to communicate with OPC servers via the new OPC Unified Architecture protocol.

OPC XML/DA


You can use OPC XML/DA worksheets to communicate with OPC servers via the new OPC XML-DA protocol.

TCP/IP

You can use TCP/IP worksheets to configure communication between your own project and other projects. The TCP/IP Client and TCP/IP Server modules enable two or more projects to keep their databases synchronized using the TCP/IP protocol.

Screen/Worksheet Editor

Use the powerful, object-oriented screen editor to create and edit a variety of screens and worksheets for your projects. You can input information using your mouse and keyboard, output control data to your processes, and automatically update screens based on data input from your processes.

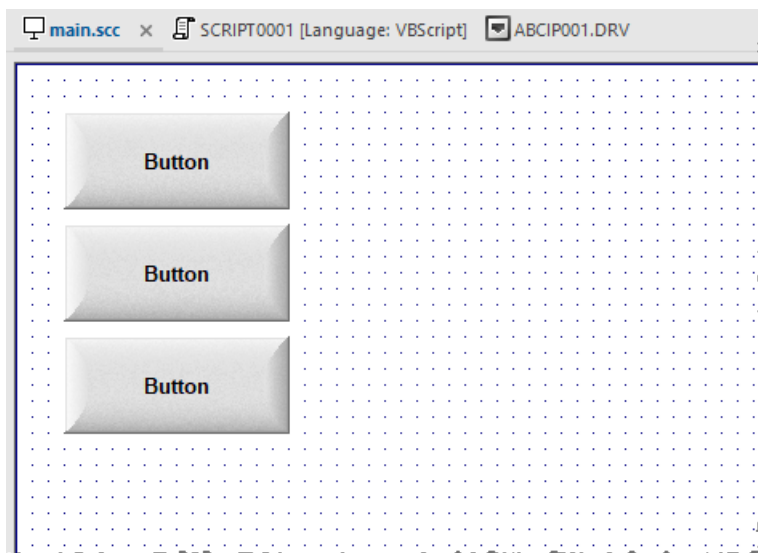

Screen/Worksheet Editor

Other screen editor features include:

- Simple point-and-click, drag-and-drop interface
- Grouping objects to preserve the construction steps of individual objects
- Editing objects without having to ungroup internal object components or groups
- Handling bitmap objects and background bitmaps
- Status line support in project windows and dialogs

Watch window

The *Watch* window is a debugging tool that lets you: watch and force values to project tags; execute and test functions; and execute and test math expressions.

Tag/Expression	Value	Quality	Continuous
Second	35	GOOD	<input checked="" type="checkbox"/>
Minute	7	GOOD	<input checked="" type="checkbox"/>
Hour	13	GOOD	<input checked="" type="checkbox"/>
Sqrt(25)	5	GOOD	<input type="checkbox"/>
IsTaskRunning("Startup Script")	0	GOOD	<input checked="" type="checkbox"/>

Example of the Watch window


The *Watch* window contains the following elements:

- For each item that you want to watch during project run time:
 - **Tag/Expression:** Specify a project tag, system tag, or expression that you want to watch.
 - **Value:** Displays the value returned by the tag/expression.
 - **Quality:** Displays the quality (GOOD or BAD) of the value returned by the tag/expression.
 - **Continuous:** Select this option to have the project continuously evaluate the tag/expression.
- **DB tabs:** You can use these tabs to organize the items you are watching, so that you do not need to scroll through one long list of items.
- **Locals, Stack Frame, and Tasks Frame tabs:** These tabs are used to debug [VBScript](#).
- **Scroll bars:** Use to view areas of the *Watch* window that are obscured from view because of the window size or the size of the current sheet.

The *Watch* window is dockable, which means you can drag it to another position in the project development environment.

Output window

Use the *Output* window to view additional information about your project. By default, the window is located in the bottom-right corner of the project development environment.

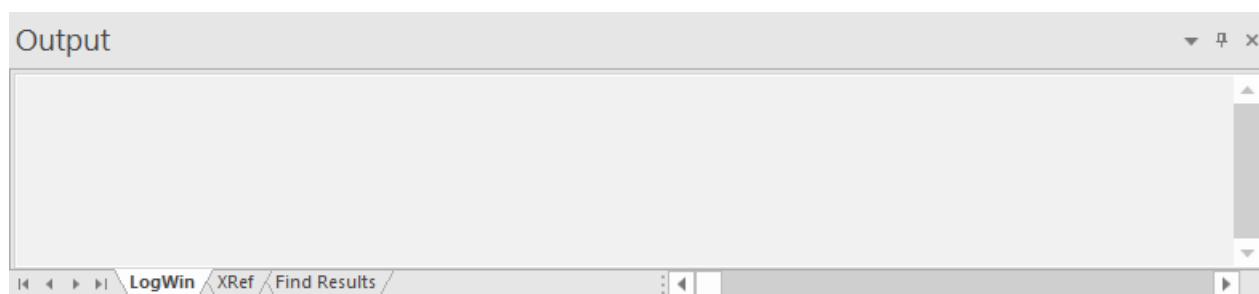

Output window

The *Output* window has three tabs:


- The **LogWin** tab displays the log messages that are generated by your project. You can select exactly which types of messages are displayed, but generally speaking, the log includes run-time messages from the tags database, the communication drivers, the background tasks, the project security system, and so on, as well as certain "housekeeping" messages generated by the project development environment itself. You can use these messages to test and debug your project.
- The **XRef** tab displays the results of using the **Cross Reference** command to find where a specific tag is used in your project. The results include the file path and name of the worksheet in which the tag is used, as well as the column and row in the worksheet. So, if something changes in the tag and produces unexpected or unsuccessful results, you can locate all instances of the tag for debugging purposes.
- The **Find Results** tab displays the results of using the **Global Find** command.

The *Output* window cannot display the log for a project running on a remote computer. It also cannot print or save log messages. If you want to do either of those things, use the **LogWin** command instead.

The *Output* window is dockable, which means you can drag it to another position in the project development environment.

Status bar

The Status Bar located along the bottom of the development environment provides information about the active screen (if any) and the state of the application.

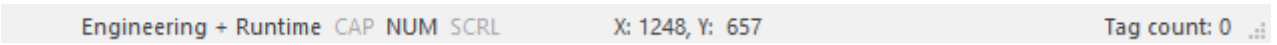

Example of Status Bar


The Status Bar fields (from left to right) are described in the following table:

Field	Description
Execution Mode	The current execution mode of the application.
CAP	Indicates whether the keyboard Caps Lock is on (black) or off (grey).
NUM	Indicates whether the keyboard Num Lock is on (black) or off (grey).
SCRL	Indicates whether the keyboard Scroll Lock is on (black) or off (grey).
Object ID	The ID number of a selected screen object.
Cursor Position	The location of the cursor on the active screen or worksheet. If it's a screen, then the position of the <i>mouse</i> cursor is given as X,Y coordinates, where X is the number of pixels from the left edge of the screen and Y is the number of pixels from the top edge of the screen. If it's a worksheet, then the position of the <i>text</i> cursor is given as Line and Column.
Object Size	The size (in pixels) of a selected screen object, where W is the width and H is the height.
No DRAG	Indicates whether dragging is disabled (No DRAG) or enabled (empty) in the active screen.
Tag Count	The total number of tags used so far in the project.

About Tags and the Project Database

Tags are a core component of any project. Simply put, project tags are variables used to receive and store data obtained from communication with plant floor devices, from the results of calculations and functions, and from user input. In turn, tags can be used to display information on screens (and Web pages), to manipulate screen objects, and to control [runtime tasks](#).

But tags are more than simple variables. The project runtime includes a real-time database manager that provides a number of sophisticated functions such as time-stamping of any value change, checking tag values against runtime minimum and maximum values, comparing tag values to alarming limits, and so on. A project tag has both a value and various properties that can be accessed, some at development and others only at runtime.

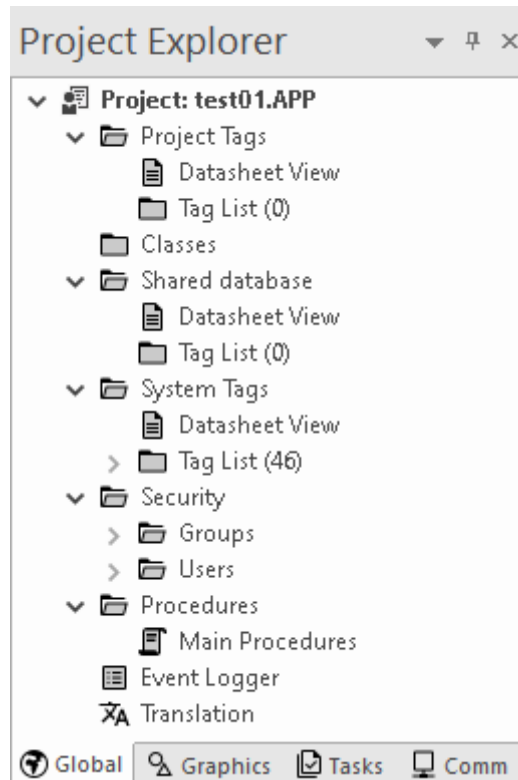

All tags are organized into one of the following categories, which are represented by folders on the [Global tab](#) of the *Project Explorer*:

- **Project Tags** are tags that you create during project development. Places where project tags are used include:
 - Screen tags
 - Tags that read from/write to field equipment
 - Control tags
 - Auxiliary tags used to perform mathematical calculations
- **Shared Database** tags are created in a PLC program and then imported into the tags database through the Tag Integration feature.

For example you might create tags in CoDeSys and then import them into your project so that it can directly read/write data on a CoDeSys device.

You cannot modify the properties of shared tags within your project. Instead, modify those tags in the original PLC program and then re-import them into the tags database.

- **System Tags** are predefined tags with predetermined functions that are used for supervisory tasks during project run time. For example,
 - Date tags hold the current date in string format

- Time tags hold the current time in string format

Most system tags are *read-only*, which means you cannot add, edit, or remove these tags from the database.

To see a list of the system tags, select the **Global** tab in the *Project Explorer*, open the **System Tags** folder, and open the **Tag List** subfolder.

After creating a tag, you can use it anywhere within the project, and you can use the same tag for more than one object or attribute.

Tag name syntax

Observe the following guidelines when you name a tag or class member:

- Each name must be unique — you cannot specify the same name as another user-created tag or class member, an imported tag, a system tag, or a built-in function. If you enter an existing name, the project development environment will recognize that name and it will not prompt you to create a new tag.
- The name can be composed of uppercase and lowercase letters (**A-Z, a-z**), the accented forms of those letters (e.g., **é, ü, ç**), standard numerals (**0–9**), and the underscore character (**_**). All other punctuation, special characters, mathematical symbols, and non-Latin alphabets are not allowed.
- The name must begin with a letter.
- The name can be up to 255 characters long.
- Even though the name can be composed of both uppercase and lowercase letters, it is not actually case-sensitive. It will be recognized as long as it is spelled correctly. Therefore, you can use uppercase and lowercase letters to make the name more readable to you. For example, **TankLevel1** and **tanklevel1** both refer to the same tag.

To indicate a tag will be used as an [indirect tag](#), insert the "at" sign (@) at the beginning of the tag name.

Tag data types

Another consideration when designing a project tag is what type of data the tag will receive. The following data types are recognized:

- **Boolean** (*one bit*): Simple boolean with the possible values of 0 (false) and 1 (true). Equivalent to the "bool" data type in C++. Typically used for turning objects off and on or for closing and opening objects.
- **Integer** (*four bytes*): Integer number (positive, negative, or zero) internally stored as a signed 32-bit. Equivalent to the "signed long int" data type in C++. Typically used for counting whole numbers or setting whole number values. Examples: 0, 5, -200.
- **Real** (*floating point, eight bytes*): Real number that is stored internally as a signed 64-bit. Equivalent to the "double" data type in C++. Typically used for measurements or for decimal or fractional values.
- **String** (*alphanumeric data, up to 1024 characters*): Character string up to 1024 characters that holds letters, numbers, or special characters. Supports both ASCII and UNICODE characters. Examples: **Recipe product X123, 01/01/90, *** On *****.

You can also assign a new tag to a [class](#) that you have previously created.

You can find these tag types (and their respective icons) in the [Global tab](#) of the *Project Explorer*.

Array tags

An *array tag* consists of a set of tags or elements that all have the same name but use array indexes to differentiate between them. An *array index* can be a literal numeric value, another tag that contains the value, or an expression that includes the arithmetic operator "+".

You can use array tags to simplify configurations, optimize memory usage, enable multiplexing, and save time during project development.

For example, suppose you want to monitor the temperature of four tanks. The conventional configuration method is:

- **Temperature1** – high temperature on tank 1
- **Temperature2** – high temperature on tank 2
- **Temperature3** – high temperature on tank 3
- **Temperature4** – high temperature on tank 4

You can use array tags to simplify this task as follows (where *n* represents the tank number):

- **Temperature[n]** – high temperature on tank *n*

The following table provides some additional examples of referencing an array tag:

Example	Description
Temperature[1] Temperature[2] Temperature[500]	Simple arrays, where the array indexes (1 , 2 , 500) are literal numeric values representing tank numbers.
Temperature[tk]	A simple array, where the array index (tk) is a tag representing the tank number.
Temperature[tk+1]	A complex array, where the array index (tk+1) is an expression. For example, the value of tk (tank number) plus 1.

When you create an array tag, you need to specify its size or maximum index. You can do this in either the *Project Tags* datasheet or in the *New Tag* dialog box, depending on when and how you create the tag. Enter the size in the **Array Size** box.

Keep in mind that each array tag has a position 0, so when you create an array tag of size *n*, it actually has *n+1* elements (i.e., from position 0 to position *n*).

The total number of tags in a project is limited by the Product Type (i.e., the runtime license) that you select for the project. Each array element (including position 0) counts towards the total number of tags, because each array element can have its own value. The maximum possible size of a single array tag is either 16384 or the project's tag limit, whichever is lesser.

Notes

You cannot use spaces in an array tag or array index. When the software reads a tag name it begins with the first character and then continues until it finds the next space or null character. Consequently, the software does not recognize any characters following the space as part of the tag name. For example, if you type **a[second + 1]**, the software reads **a[second** as the tag name and considers it to be invalid because it does not have a closing bracket. In contrast, if you type **a[second+1]**, the software reads it correctly and considers it to be valid.

If you use another tag as the index of an array, and if the value of that tag is outside the size of the array, the following results are given:

- If the value of **IndexTag** is greater than the size of the array, then **ArrayTag[IndexTag]** will point to the last position in the array; and
- If the value of **IndexTag** is less than 0, then **ArrayTag[IndexTag]** will point to the first position in the array (i.e., position 0).

Indirect tags

An *indirect tag* references or "points to" another tag in the tags database.

Any tag of String type can be used as an indirect tag, as long as the value of that tag is the name of another tag in the tags database. To indicate that a tag should be used as an indirect tag, simply prepend an "at" character (@) to the tag name.

For example, consider the tag **x** of String type. If the value of **x** is "**TEMP**", then **@x** points to the tag **TEMP**. Anywhere that you use **@x** in your project, you will actually use **TEMP** as if you referenced it directly. And if the value of **x** changes to the name of yet another tag, then **@x** will point to that tag instead.

This eliminates the need to create duplicate logic for multiple tags. You can create the logic once, using indirect tags to point to the actual tags, and then change the values of those indirect tags as needed.

If you are specifically creating a new tag to be used as an indirect tag, you do not need to create it of String type. Instead, when you create the tag, you can enter the tag name with the @ already prepended and then select the type of the other tag(s) to which it will point. For example, **@z** of Integer type. This makes it easier to filter the tags, because both regular and indirect tags of a specified type will be listed together.

Using indirect tags to point to classes and class members

You can use indirect tags to point to both classes and class members, in slightly different ways. Let's assume you do the following:

- Create the class **TANK** with the member **Level1**; and
- Create the tag **TK** of the class **TANK**.

Now, there are two ways to use an indirect tag to point to **TK.Level1**. The first is the standard way that was described above: if you create the tag **XCLASS** of String type and give it a value of "**TK.Level1**", then **@XCLASS** points to **TK.Level1**.

The second way might be more flexible, depending on how you use it in your project: if you create the tag **XCLASS** of the class **TANK** and give it a value of "**TK**", then **@XCLASS.Level1** points to **TK.Level1**. In this way, you can use the same indirect tag to point to different class members without changing its value.

Tutorial: Building a Simple Project

This section explains, using a step-by-step tutorial, how to build a simple project, as well as how to select and configure an I/O driver.


Creating a new project

This part of the tutorial shows how to create a new project, including how to give it a name and then select the target platform and system.

1. Go to **File**, and then click *New*.
The *New* dialog is displayed.
2. Click the **Project** tab, if it is not already selected.
3. In the **Project name** box, type the name of your project.
For this tutorial, type `Tutorial`.

The development application automatically creates a new directory of the same name and assigns your project file to that directory. (Notice the **Configuration file** text box in the figure.) To put your project file somewhere other than in the default projects folder, click **Browse** and navigate to the preferred location.


4. In the **Product type** list, select the type of project that you want to build.
For this example, select a **Product type** with 4,000/4K tags.

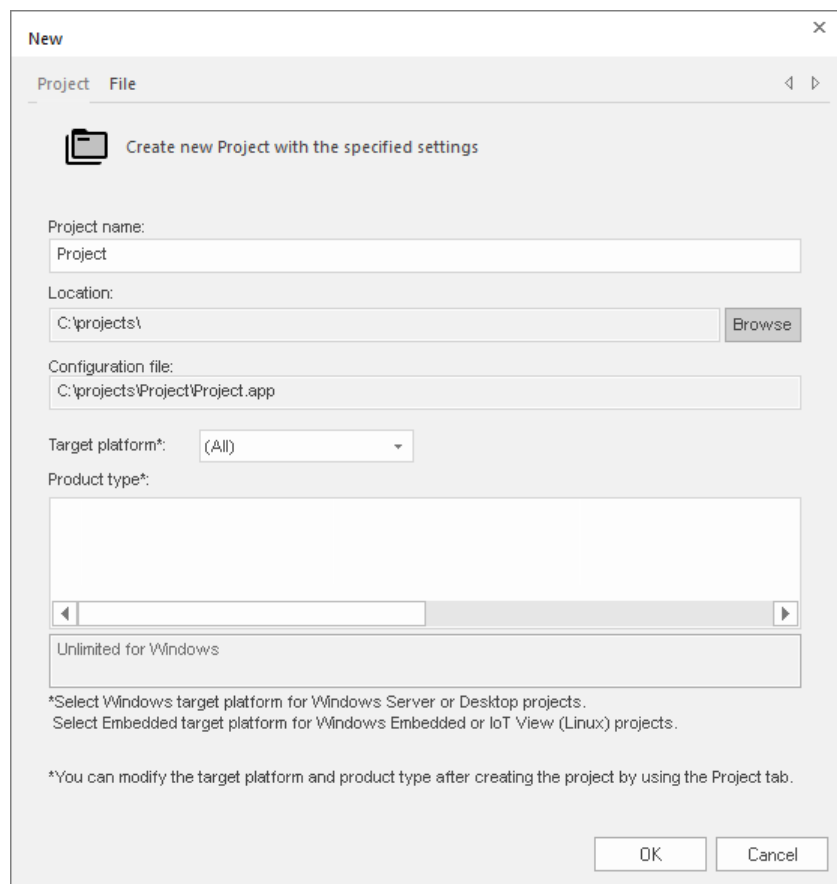

Selecting the target platform and product type

5. Click **OK**.
The *New* dialog is closed and the *Project Wizard* dialog is displayed.


- In the **Resolution** list, select **1024 x 768**.

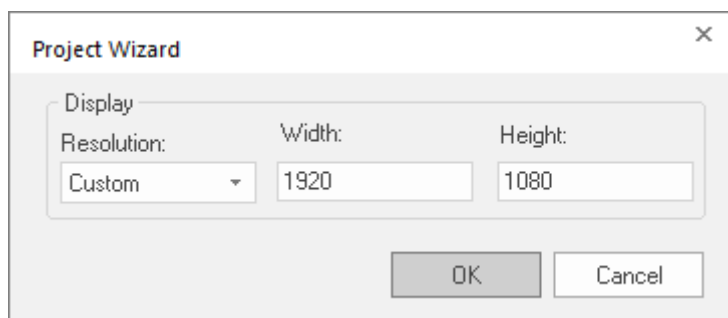

Specifying an empty Application with 1024x768 resolution

- Click **OK**.

The *Project Wizard* dialog is closed, the project is created in the development environment, and the *Security System Configuration Wizard* is displayed.

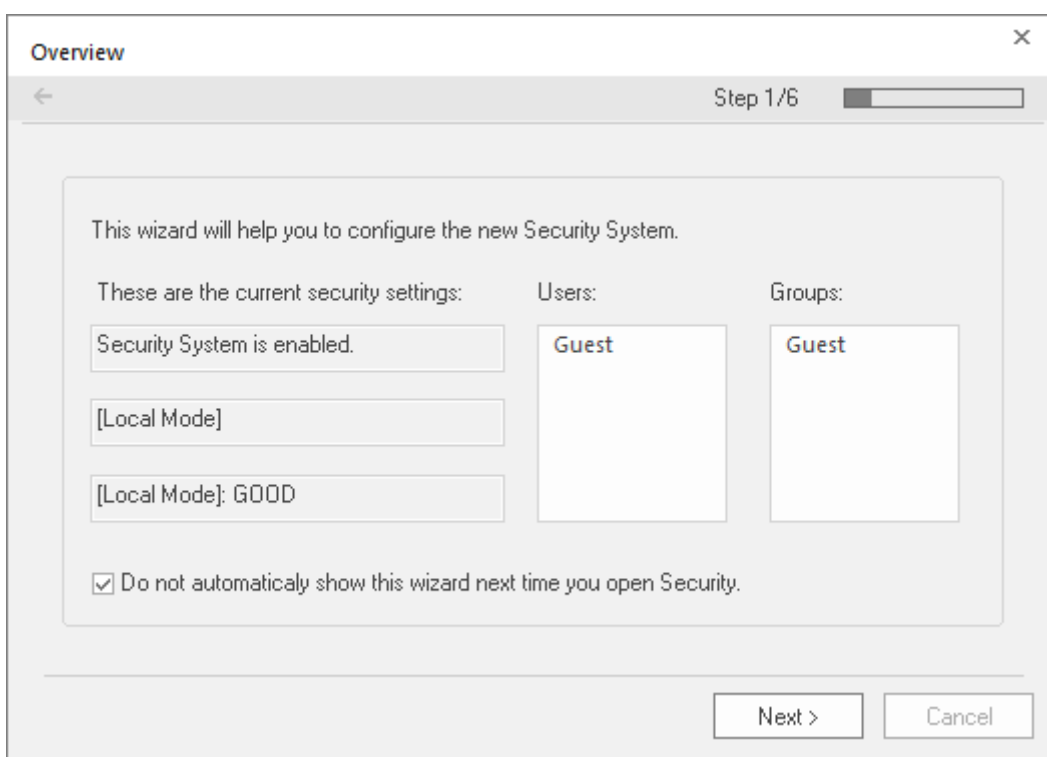

Security System Configuration Wizard

- Use the *Security System Configuration Wizard* to set a Main Password for your project.
The security system is enabled by default for all new projects.

When you finish the *Security System Configuration Wizard*, your new project is ready for development.

Specifying the startup screen

This part of the tutorial shows how to open the project settings and then specify which screen to display on startup.

- Use the **Information** tab to provide information that identifies the project (such as project description, revision number, Company name, Author's name, field equipment, and general notes).
- Use the **Options** tab to specify generic settings for the project, such as the Target System, Automatic Translation, Alarm history and Events, Default Database and Shared Tags.
- Use the **Viewer** tab to enable/disable the run-time desktop parameters.
- Use the **Communication** tab to specify communication parameters relating to the project in general.
- Use the **Preferences** tab to enable/disable warning messages when using the development application.


To specify the startup screen:

1. On the **Project** tab of the ribbon, in the **Settings** group, click **Viewer**.
The *Project Settings* dialog is displayed with the **Viewer** tab selected.
2. In the **Startup screen** box, type `main.scc`.
When you run the project, it will automatically display the main screen (or whichever screen you specify) first. You can specify a screen before you create it, but if the screen has been created, then you can also select it from the list.
3. Click **OK**.

Creating tags

This part of the tutorial shows how to create new tags by adding them to the Project Tags datasheet.

A tag is any variable that holds a value. All tags created in a project are stored in the Project Tags folder, on the Global tab of the Project Explorer.

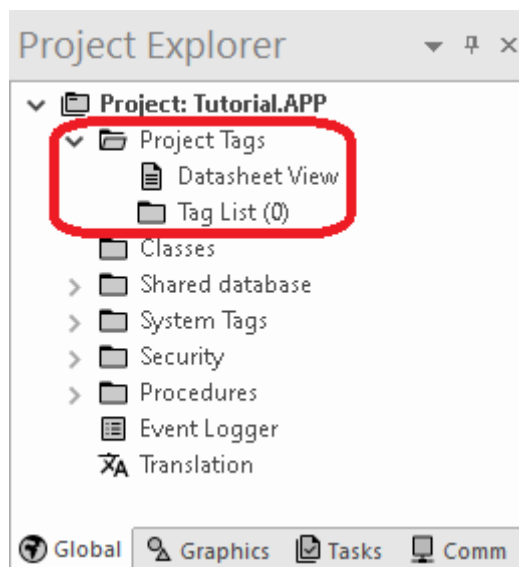

Project Tags folder

1. In the Project Explorer, click the **Global** tab.
2. Double-click **Project Tags** to expand the folder.
3. Double-click **Datasheet View** to open the *Project Tags* datasheet.
4. Use the following parameters to create a tag for the sample project.
 - a) **Name:** Specify a unique tag name. For this tutorial, type `Level`.
 - b) **Array Size:** Specify the top array index of the tag. (Simple tags have an **Array Size** of 0.) For this tutorial, type 3.

Each array index corresponds to one of the three tanks:

- `Level[1]` is the level of Tank #1
- `Level[2]` is the level of Tank #2
- `Level[3]` is the level of Tank #3

You will not use `Level[0]` in this tutorial, even though it is a valid tag. It is easier to understand if the array indices match the tank numbers.

- c) **Type:** Specify the data type of the tag: Boolean, Integer, Real, String, or Class. For this tutorial, select **Integer**.
- d) **Description** (optional): Type a description of the tag for documentation purposes only.
- e) **Scope:** Specify how the tag is managed between the Server and the Thin Client stations.
 - Select **Local** if you want the tag to have independent values on the Server and Client stations.
 - Select **Server** if you want the tag to share the same value on the Server and Client stations.

For this tutorial, select **Server**.

Project Tags						
	Name	Tag Size	Type	Description	Scope	UA External Availability
	Filter text	F...	(All)	Filter text	(All)	(All)
1	Level	3	Integer	Level of the tank	Server	Disabled
*			Integer		Server	Disabled
*			Integer		Server	Disabled
*			Integer		Server	Disabled
*			Integer		Server	Disabled
*			Integer		Server	Disabled

Creating the Level tag

5. Save and close the *Project Tags* datasheet.


You will create additional tags as you build the project.

 **Tip:** You can sort the data in the *Project Tags* datasheet or insert/remove additional columns by right-clicking on it and then choosing the applicable option from the pop-up menu.


Creating the main screen

This part of the tutorial shows how to create your first screen, which will contain a single button that opens another screen.

1. In the *Project Explorer*, click the **Graphics** tab.

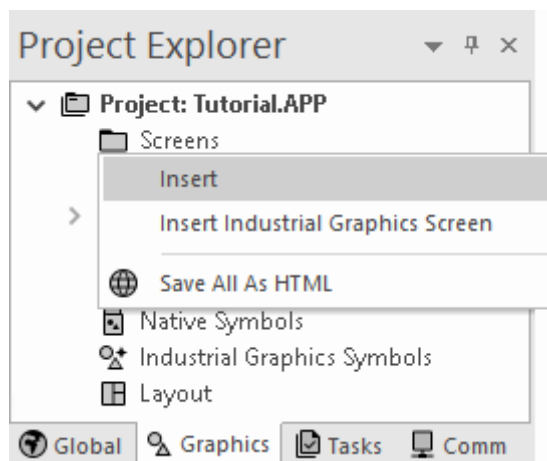

2. Right-click **Screens**, and then click **Insert** on the shortcut menu.
The development application stores all screens created for a project in this **Screens** folder.
The *Screen Attributes* dialog is displayed.

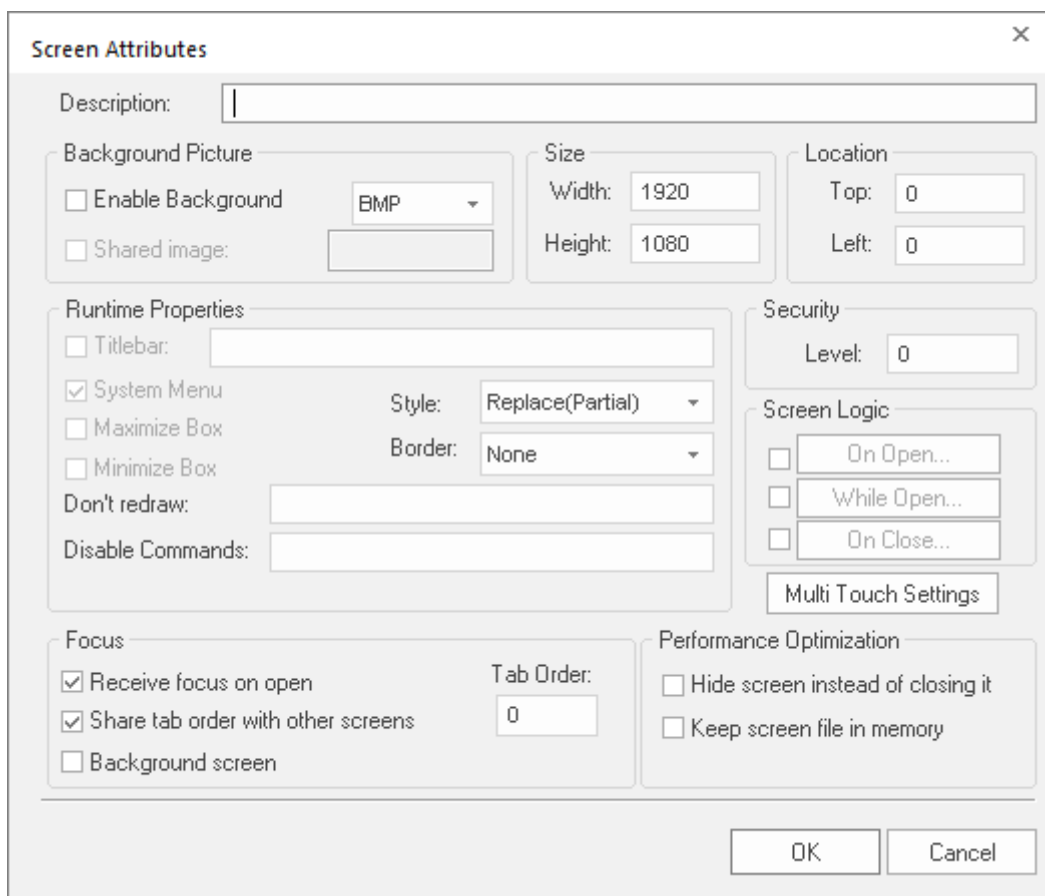


Screen Attributes dialog

3. Use this dialog to set screen properties such as size and type.

For this tutorial, click **OK** to accept the default settings.

The *Screen Attributes* dialog is closed, and the new screen is opened in the workspace for editing.

4. On the **Draw** tab of the ribbon, in the **Screen** group, click **Background Color**.
A standard color picker is displayed.
5. In the color picker, select a light gray color.

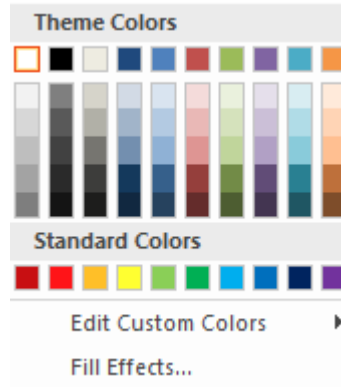


Color picker

That color is applied to the screen.

Drawing the main screen's title

This part of the tutorial shows how to draw the main screen's title using a Text object.


1. On the **Draw** tab of the ribbon, in the **Active Objects** group, select **Text**.
Your mouse cursor changes from an arrow to a crosshair.
2. Click a location on the screen, type `Welcome to the Tutorial Application`, and then press `Return`.
This creates a new Text object with the specified text.
3. Double-click the object to open its *Object Properties* dialog.

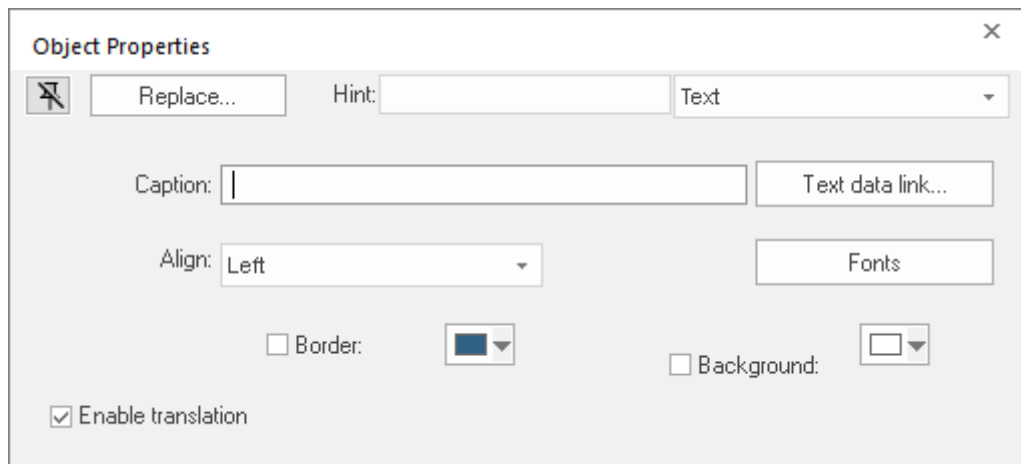

Object Properties: Text dialog

- Double-clicking on any screen object opens an *Object Properties* dialog containing the properties for that object. The properties shown in the dialog change depending on the type of object.
- The *Object Properties* dialog also contains a pin button that controls whether this dialog remains open. The button changes state (and function) each time you click on it, as follows:
 - When the pin button is released, the focus is passed to the object on the screen as soon as it is selected. It is recommended that this button is kept released when you want to manipulate the objects (Copy, Paste, Cut, or Delete). Although the *Object Properties* dialog is on the top, the keyboard commands (**Ctrl+C**, **Ctrl+V**, **Ctrl+X**, or **Del**) are sent directly to the objects.


- When the pin button is pressed, the focus is kept on the *Object Properties* dialog, even when you click the objects on the screen. We recommend you keep this button pressed when you want to modify the settings of the objects. You can click an object and type the new property value directly in the *Object Properties* dialog (it is not necessary to click on the window to bring focus to it). Also, when the pin button is pressed, the *Object Properties* dialog does not automatically close when you click on the screen.
4. Click **Fonts** to open *Font* dialog, and then specify the font settings.
For this tutorial...
- Font is **Arial**
 - Font style is **Regular**
 - Size is **20**
 - Color is **Blue**

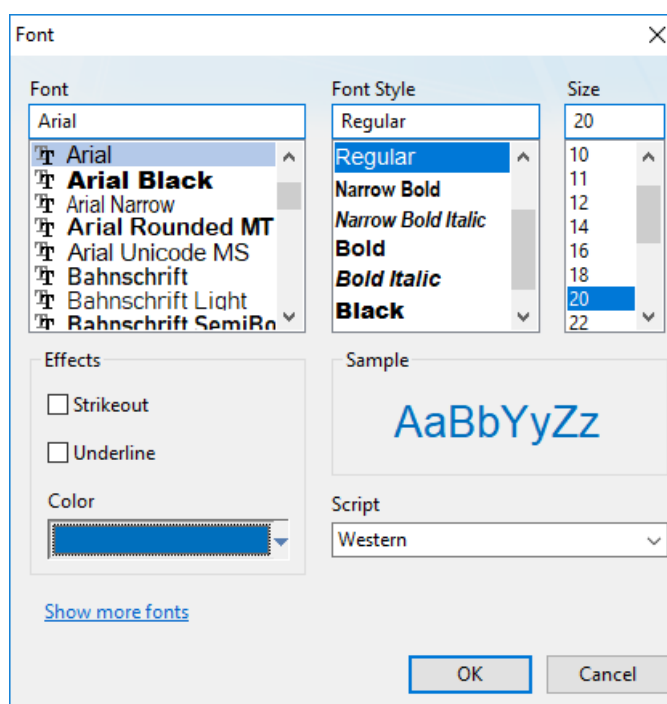

Specifying the font settings

5. Select **OK** to close the *Font* dialog.

The font settings are applied to the Text object.

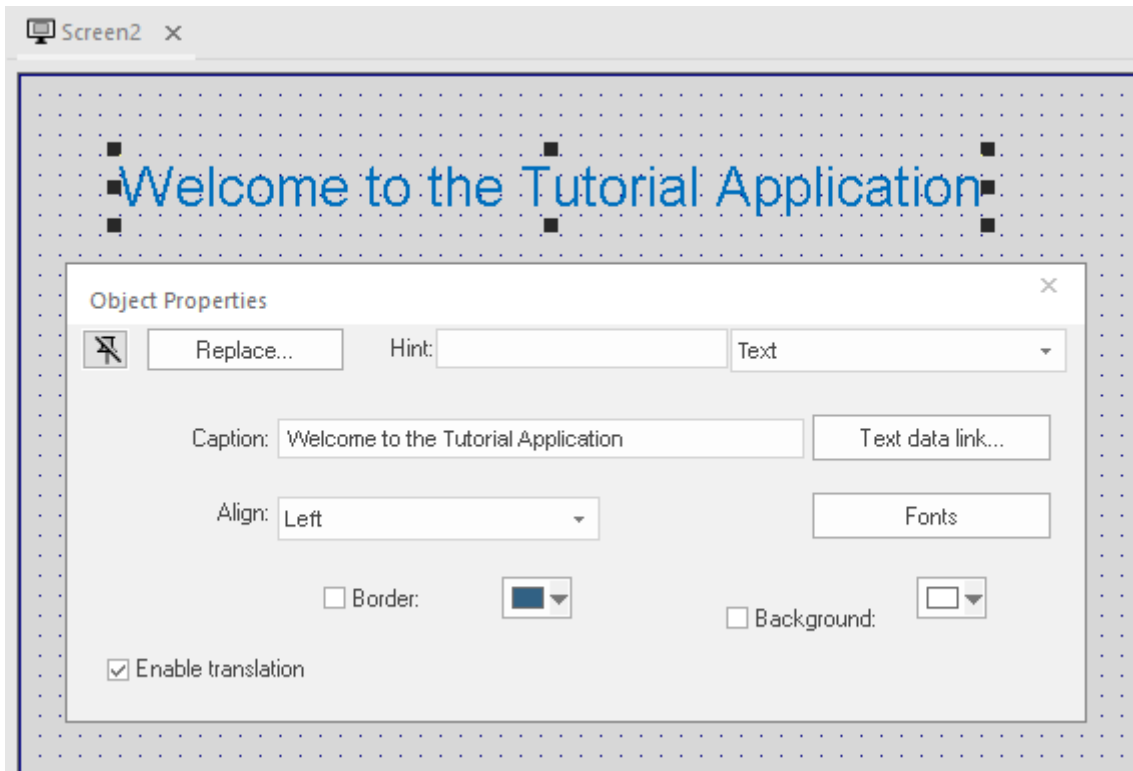

Font settings applied to Text object


6. Close the *Object Properties* dialog (select the **Close** button in the dialog box's top-right corner).

Drawing a button to open another screen

This part of the tutorial shows how to draw and configure a button that will open another screen.

1. On the **Draw** tab of the ribbon, in the **Active Objects** group, click **Button**.
Your mouse cursor changes from an arrow to a crosshair.
2. Click and hold on the screen, and then drag the cursor to draw the Button object.
3. Double-click the object to open its *Object Properties* dialog.


4. In the **Caption** box, type the following text: Click here to open the summary screen.

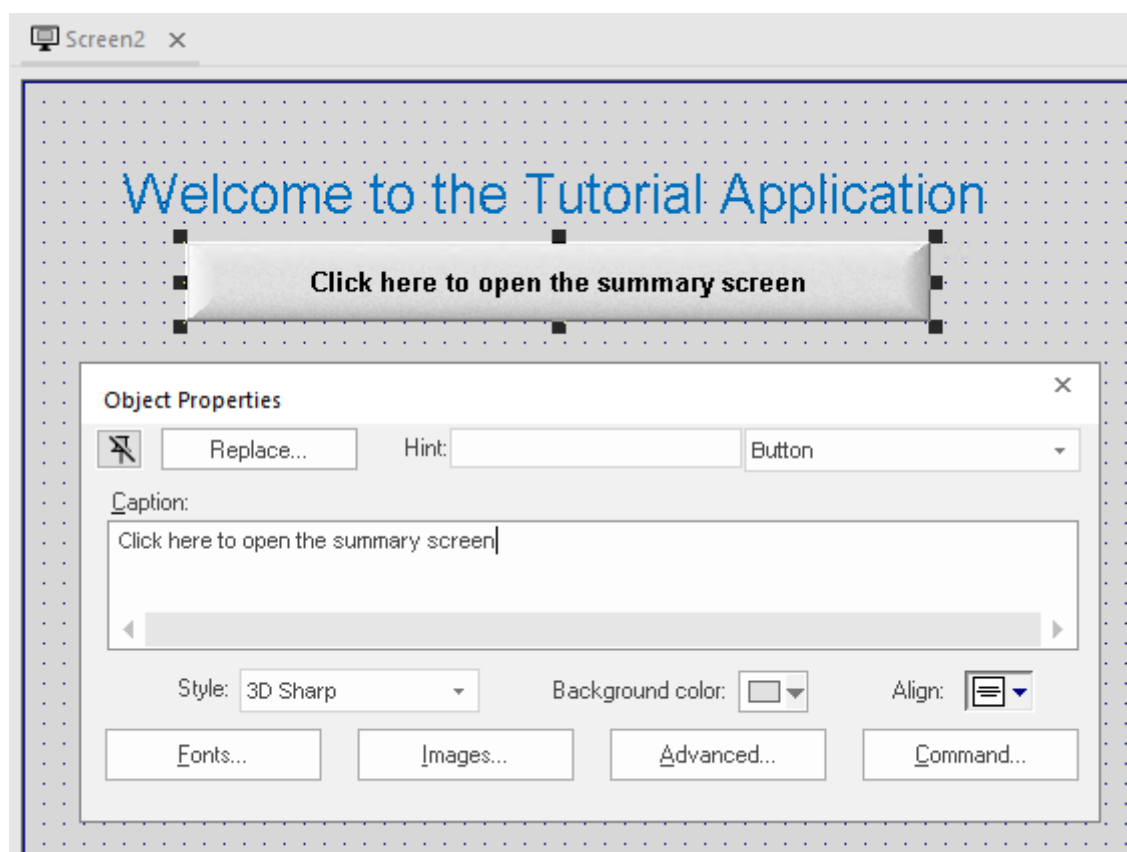

Adding a caption to the button

5. Click **Command**.
The *Object Properties* dialog changes to show the properties for the Command animation.
6. In the **Type** list, select **Open Screen**.

7. In the **Open Screen** box, type `summary.scc`.

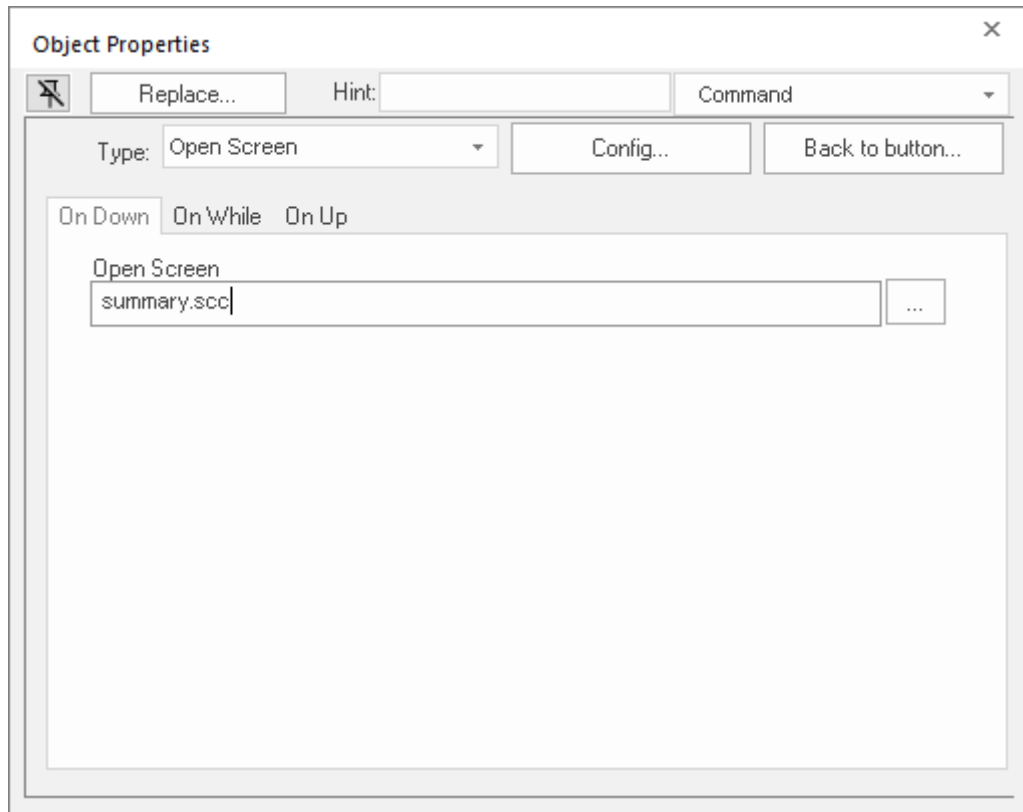

Configuring an Open Screen command on the button

You can specify a screen that you have not yet created.

8. Close the *Object Properties* dialog.

Saving and closing the main screen

This part of the tutorial shows how to properly save and close a screen.

1. Go to **File**, and then select **Save**.
A standard Windows *Save* dialog is displayed.
2. In the **File name** box, type `main`.
3. Click **Save**.
The file is saved in your project folder (at `<project name>\Screen\main.scc`), and the *Save* dialog is closed.
4. Go to **File**, and then select **Close**.

Creating the summary screen

This part of the tutorial show how to create your second screen, which will include an animated tank of liquid and some basic controls for that tank.

1. In the **Graphics** tab of the *Project Explorer*, right-click the **Screens** folder, and then click **Insert** on the shortcut menu.
The *Screen Attributes* dialog is displayed.
2. Use this dialog to set attributes such as size and type.
For this tutorial, click **OK** to accept the default settings.
3. Go to **File**, and then select **Save As**.
A standard Windows *Save As* dialog is displayed.
4. In the **File name** box, type `summary`.
5. Click **Save**.
The file is saved in your project folder (at `<project name>\Screen\summary.scc`), and the *Save* dialog is closed.

Do not close the screen like you did the main screen when you saved it. You still need to draw the summary screen.

Drawing the summary screen title

As in a previous part, this part of the tutorial shows how to draw the summary screen title using a Text object.

1. On the **Draw** tab of the ribbon, in the **Active Objects** group, select **Text**.
2. Click on the screen, type `Summary Screen`, and then press Return.
3. Double-click the object to open its *Object Properties* dialog.
4. Click **Fonts** to open *Font* dialog, and then specify the font settings.
For this tutorial...
 - Font is **Arial**
 - Font style is **Bold**
 - Size is **20**
 - Color is **Blue**
5. Click **OK** to save the font settings and close the dialog.
6. Close the *Object Properties* dialog.
7. Move the Text object to the top left corner of the screen.
8. Go to **File**, and then select **Save**.

This figure shows what your screen will look like after you have drawn the screen title.



Finished screen title

Drawing "Date" and "Time" displays


This part of the tutorial shows how to draw "Date" and "Time" displays by linking Text objects to system tags.

Date and **Time** are system tags that hold the current date and time of the local station. These tags are available to any project.

1. On the **Draw** tab of the ribbon, in the **Active Objects** group, select **Text**.
2. Click on the screen, type `Date: #####`, and then press Return.
3. Double-click the object to open its *Object Properties* dialog.
4. Click **Text Data Link**.

The *Object Properties* dialog changes to show the properties for the Text Data Link animation.

- In the **Tag/Expression** box, type `Date`.

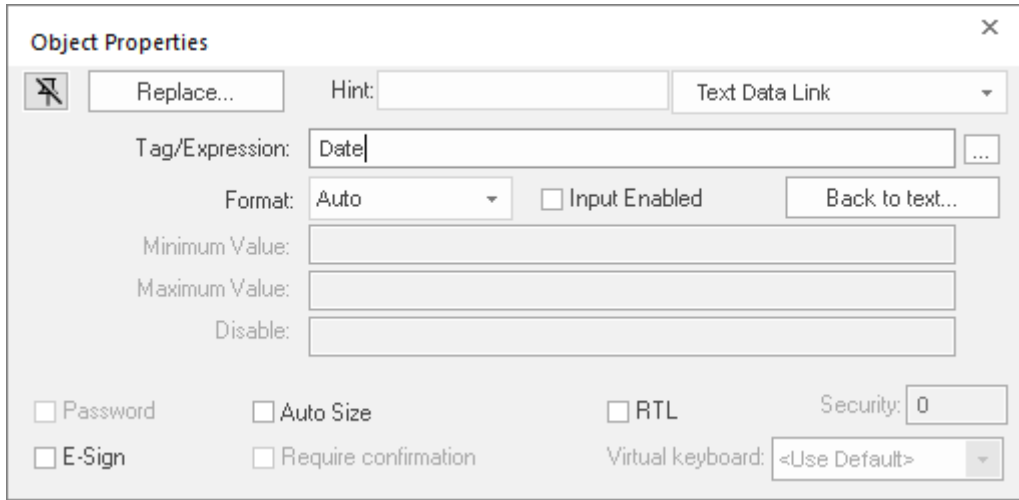


Specifying the Date system tag

During run time, the project replaces the ##### characters of the Text object with the value of the system tag `Date`.

- Close the *Object Properties* dialog.
- On the **Draw** tab of the ribbon, in the **Active Objects** group, select **Text**.
- Click on the screen, type `Time: #####`, and then press Return.
- Double-click the object to open its *Object Properties* dialog.
- Click **Text Data Link**.

The *Object Properties* dialog changes to show the properties for the Text Data Link animation.

- In the **Tag/Expression** box, type `Time`.

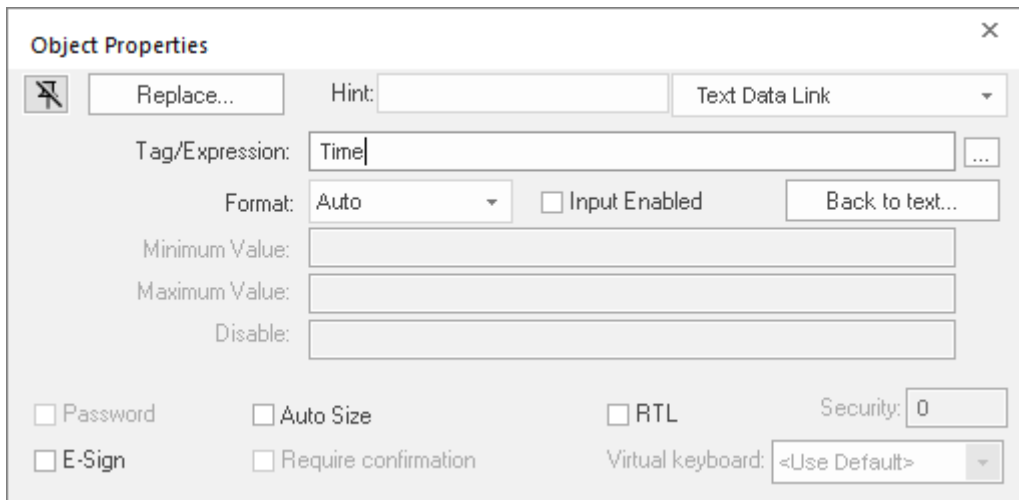

Specifying the Time system tag

During run time, the project replaces the ##### characters of the Text object with the value of the system tag `Time`.

- Close the *Object Properties* dialog.
- Go to **File**, and then select **Save**.

This figure shows what your screen will look like after you have created the date and time objects.




Finished date and time objects

Placing an "Exit" icon


This part of the tutorial shows how to place an icon (by selecting and configuring a Linked Symbol) that allows the user to exit the project, .

1. On the **Draw** tab of the ribbon, in the **Libraries** group, select **Symbols**.
The symbols library is displayed.
2. In the Symbols menu tree, open the **System Symbols** folder and then open the **Icons** sub-folder.
3. In the Icons sub-folder, select **exit01**.
The symbol will be displayed in the symbol viewer to the right of the menu tree.

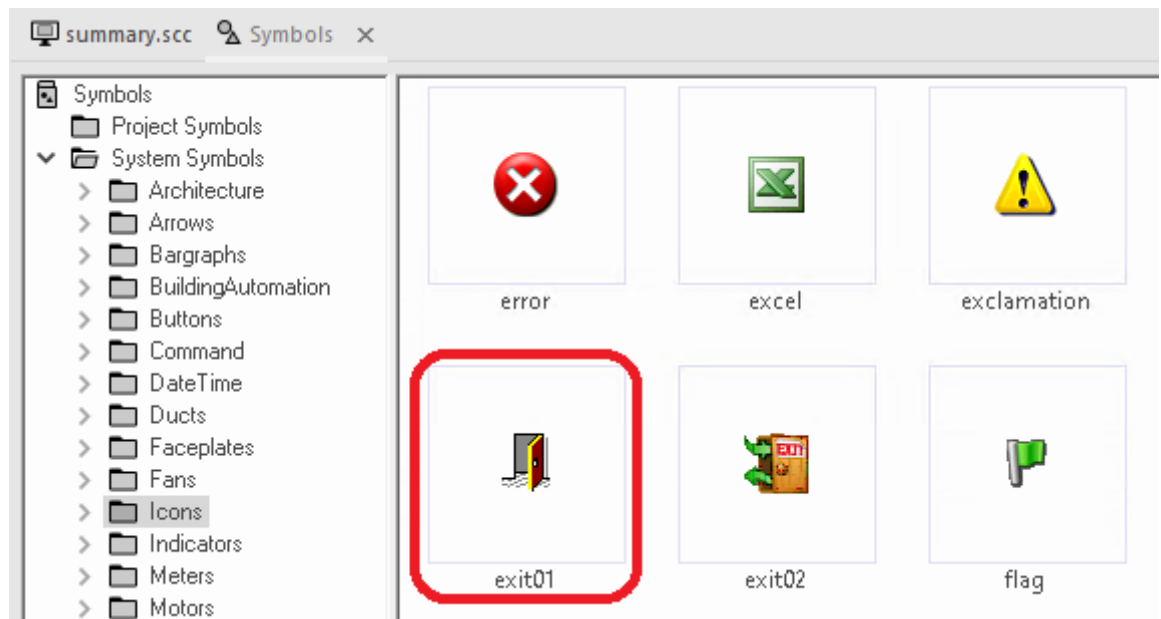

Selecting the "exit01" symbol


4. Select the symbol.
The mouse cursor will change to show that the symbol is ready to be placed in a screen.
5. Switch back to the screen where you want to place the symbol and then click in it.
The symbol is placed as a Linked Symbol object.



Placing the Linked Symbol object

6. With the object still selected, select **Command** (on the **Draw** tab of the ribbon, in the **Animations** group) to apply this animation to the object.
7. Double-click the object to open its *Object Properties* dialog.
8. In the **Type** list, select **VBScript**.
9. In the **On Down** box, type `$Shutdown()`.

Shutdown is one of BLUE Open Studio 2023's built-in scripting functions, but it can be used within VBScript by prefacing it with a dollar sign (\$).

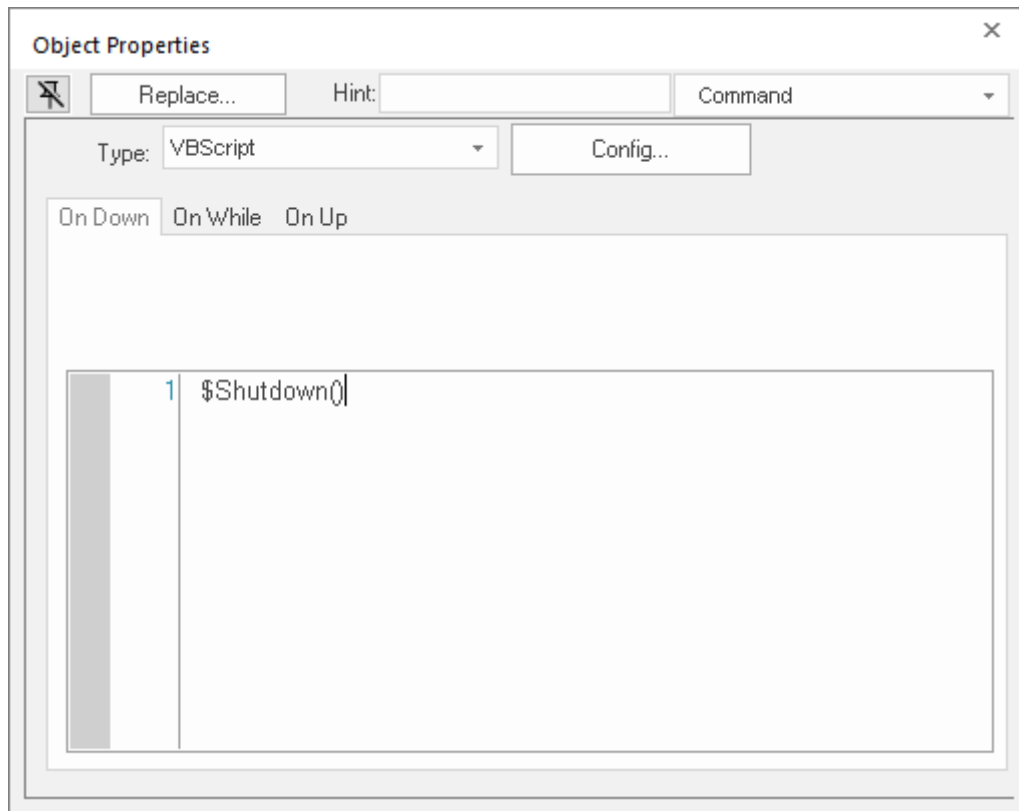

Specifying the Shutdown command on the symbol

10. Close the *Object Properties* dialog.

11. Go to **File**, and then select **Save**.

Now, when a user clicks this icon during run time, the project will stop and exit to the station's desktop.

Testing the project

This part of the tutorial shows how to test the project so far.

1. Go to **File**, and then select **Close All**.
All open worksheets and screens are closed.
2. On the **Home** tab of the ribbon, in the **Local Management** group, click **Run**.
The project runs and the startup screen is displayed.
3. Click the button to open the summary screen.
The summary screen is displayed.
4. Click the exit icon to shut down the project.


If any part of the project does not work as expected, switch back to the development application (**ALT+TAB**) and then click **Stop** on the Home tab of the ribbon.

Placing an animated tank

This part of the tutorial shows how to select an animated tank from the Symbol Library and place it on the screen (similar to how you selected and placed the "Exit" icon), then associate some project tags with the tank's properties.

1. In the **Graphics** tab of the *Project Explorer*, expand the **Screens** folder.
2. Double-click **summary.scc**.
The summary screen worksheet is reopened for editing.
3. On the **Draw** tab of the ribbon, in the **Libraries** group, select **Symbols**.


- In the Symbols menu tree, open the **System Symbols** folder and then open the **Tanks** sub-folder.
- Browse the tank symbols and choose one.
You may choose any tank symbol that you like; they all function basically the same.

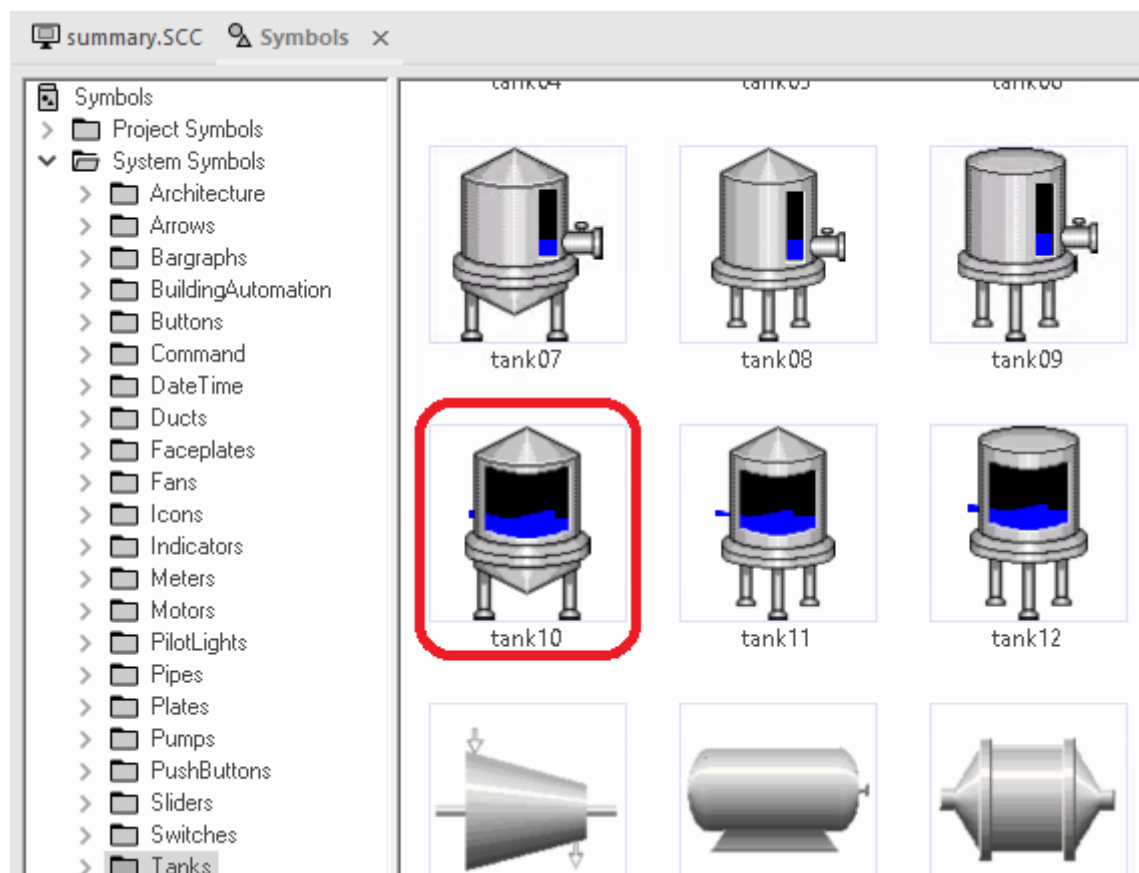

Choosing a tank symbol

- Click the symbol.
The mouse cursor will change to show that the symbol is ready to be placed in a screen.
- Switch back to the screen where you want to place the symbol and click in it.
The symbol is placed as a Linked Symbol object.


- Double-click the object to open its *Object Properties* dialog.

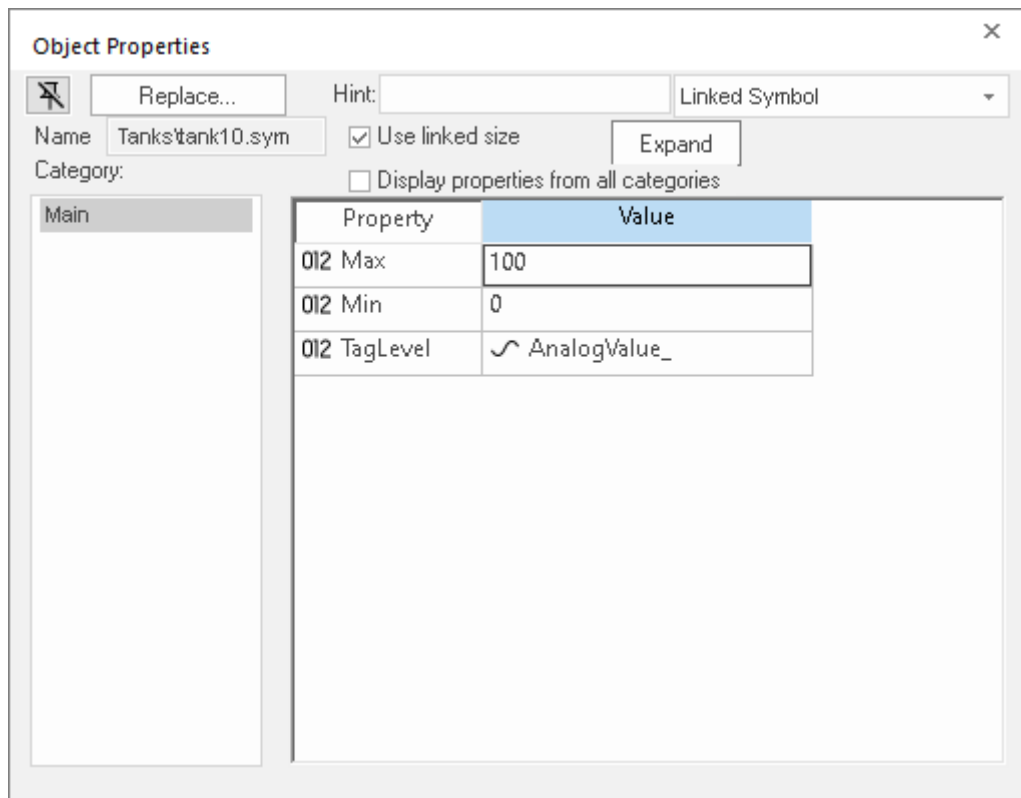

The tank symbol's properties

A tank is an arrangement of different objects and animations (for example a rectangle, a bar graph, etc.), all combined together as a Linked Symbol. You can modify the properties of this symbol by editing the properties list. For this tutorial, you will modify the tag associated with the tank level.

- For the property **TagLevel1**, delete the existing value and then type `Level[Index]`.
You do not need to reopen the Project Tags datasheet to create tags as you develop the project. You have not previously created the tag **Index** in the Project Tags database, so an *Question* message asks you if you would like to create it now.
- Select **Yes**.
A *New Tag* dialog is displayed.
- Configure the new tag with **Array** as 0, **Type** as Integer, and **Scope** as Local.

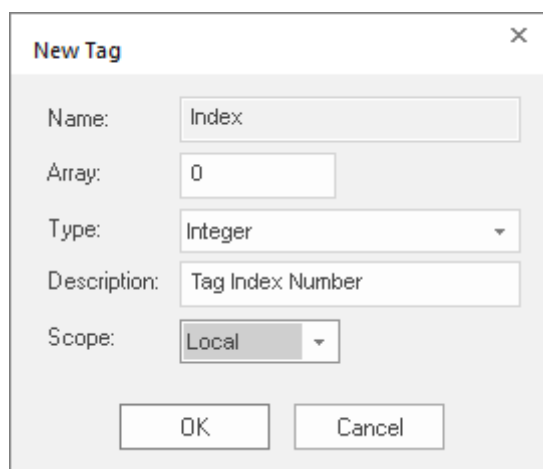

Configuring a new tag

- Click **OK** to close the *New Tag* dialog.

You can use the tag **Index** to set the array position of the tag **Level**, and show the level for any of the three tanks in the same object:


- When **Index** equals **1**, the tank object shows the level of Tank #1 (i.e., **Level[1]**);
- When **Index** equals **2**, the tank object shows the level of Tank #2 (i.e., **Level[2]**); and
- When **Index** equals **3**, the tank object shows the level of Tank #3 (i.e., **Level[3]**).

Also, because the tag scope is local, the tag can have different values for the Server and Client stations at the same time. Consequently, the local user (i.e., the Server station) can be monitoring the level of Tank #1 while the remote user (i.e., the Client station) is monitoring the level of Tank #2.

13. Close the *Object Properties* dialog.

14. Go to **File**, and then select **Save**.

This figure shows what your screen will look like after you have created the tank object.

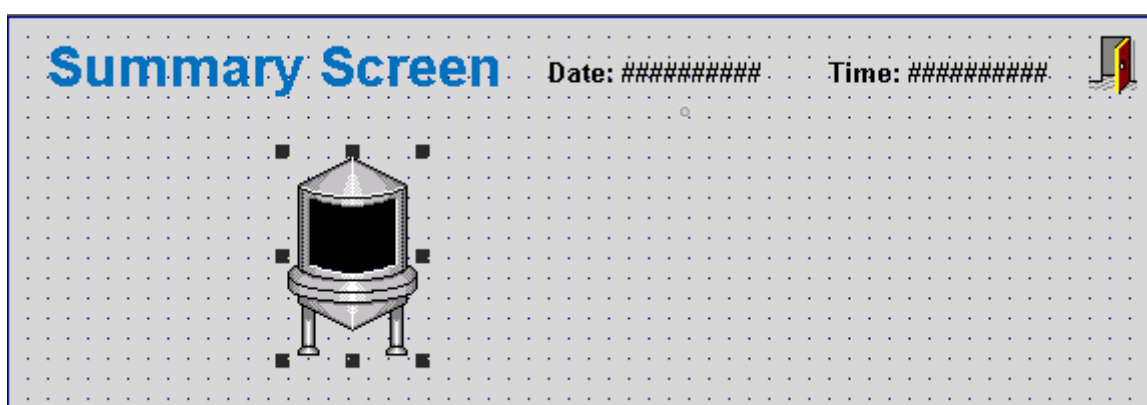


Finished tank object

Placing a level slider

This part of the tutorial shows how to select a slider control from the Symbol Library and then connect it to the animated tank.

1. On the **Draw** tab of the ribbon, in the **Libraries** group, select **Symbols**.


- In the Symbols menu tree, open the **System Symbols** folder and then open the **Sliders** sub-folder.

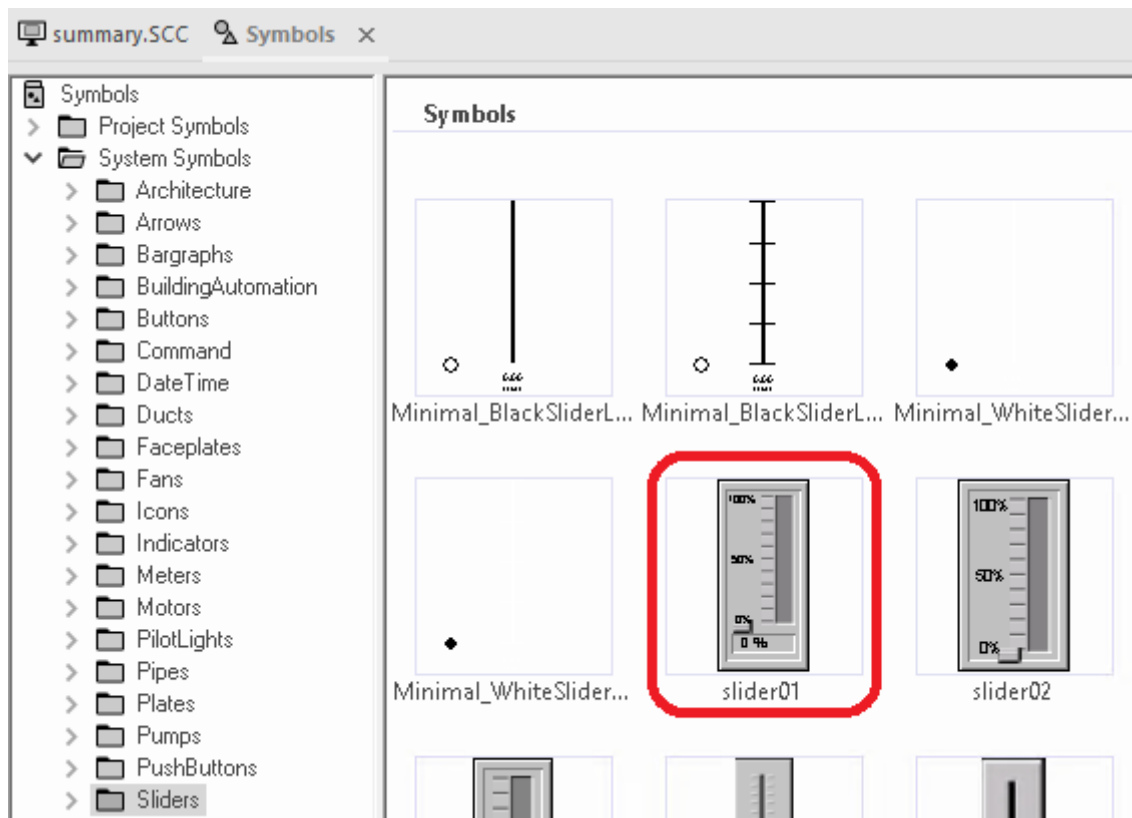

Selecting a slider symbol

- In the Sliders sub-folder, select a slider control.
You may select any slider you like; they all function basically the same way.
- Click on the symbol.
The mouse cursor will change to show that the symbol is ready to be placed in a screen.
- Switch back to the screen where you want to place the symbol and click in it.
The symbol is placed as a Linked Symbol object.
- Double-click the object to open its *Object Properties* dialog.
- For the property **TagName**, delete the existing value and then type `Level[Index]`.
Just as with the tank, you need to modify the symbol property associated with the slider level.
- Close the *Object Properties* dialog.
- Go to **File**, and then select **Save**.

This figure shows what your screen should look like after you have created the level slider object.

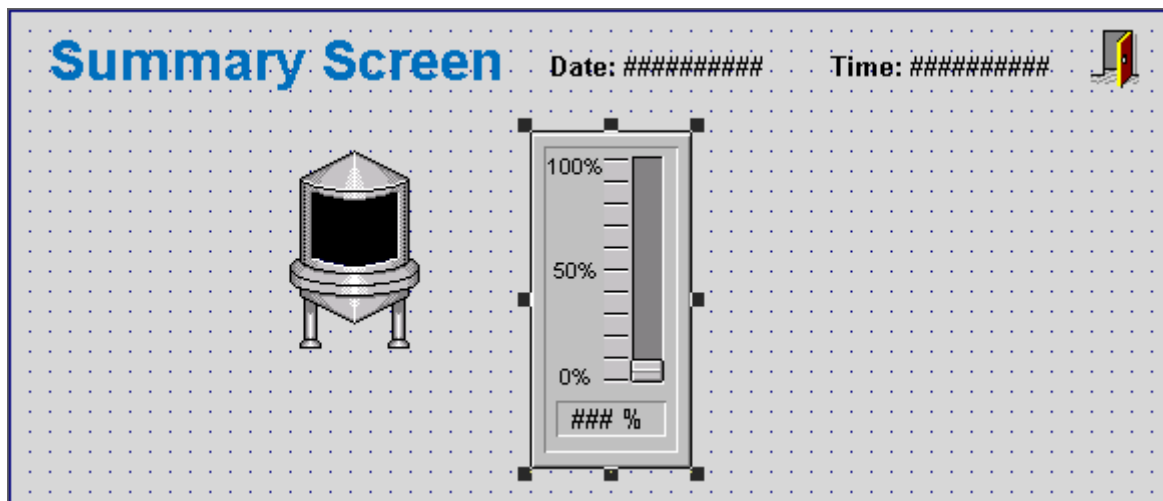


Finished level slider object

Drawing a tank selector

This part of the tutorial shows how to draw a text input box that can be used to change which real-world tank is represented by the animated tank on the screen.

1. On the **Draw** tab of the ribbon, in the **Active Objects** group, select **Text**.
2. Click a location on the screen below the tank, type **Tank: #**, and then press Return.
3. Double-click the object to open its *Object Properties* dialog.
4. Select **Text Data Link**.
The *Object Properties* dialog changes to show the properties for the Text Data Link animation.
5. In the **Tag/Expression** box, type Index.
6. Select the **Input Enabled** option.
This lets the user enter a new value for the tag during run time.
7. In the **Minimum Value** box, type 1.
8. In the **Maximum Value** box, type 3.

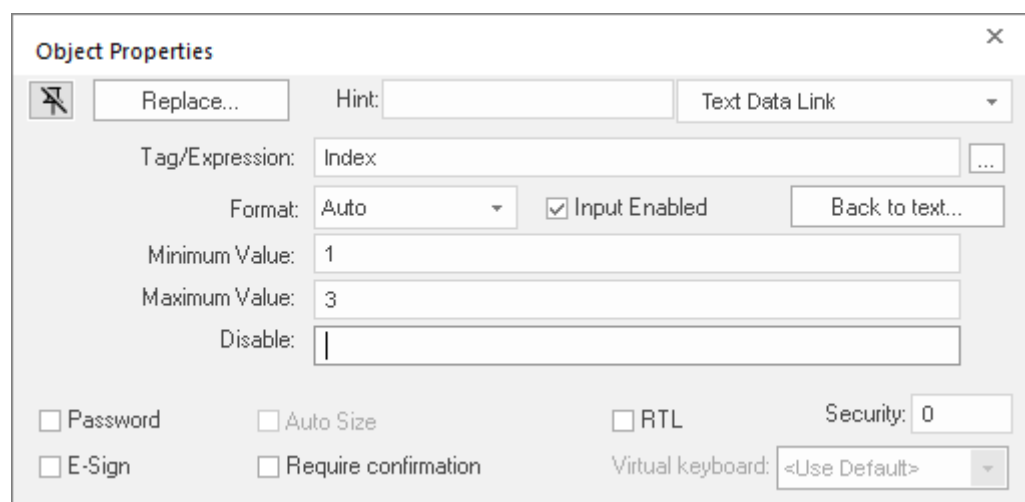

Configuring the "Tank" text input


9. Close the *Object Properties* dialog.
10. Go to **File**, and then select **Save**.

Testing the project

This part of the tutorial shows how to test the project again with the animated tank, the level slider, and the tank selector.

1. Go to **File**, and then select **Close All**.
All open worksheets are closed.
2. On the **Home** tab of the ribbon, in the **Local Management** group, click **Run**.
The project runs and the startup screen is displayed.
3. Select the button to open the summary screen.
The summary screen is displayed.
4. Type the tank number (1, 2, or 3) in the Tank label, and then use the slider to adjust the tank level.
You can view/adjust the level of each tank independently.
5. Select the exit icon to shut down the project.

This figure shows what your screen should look like.

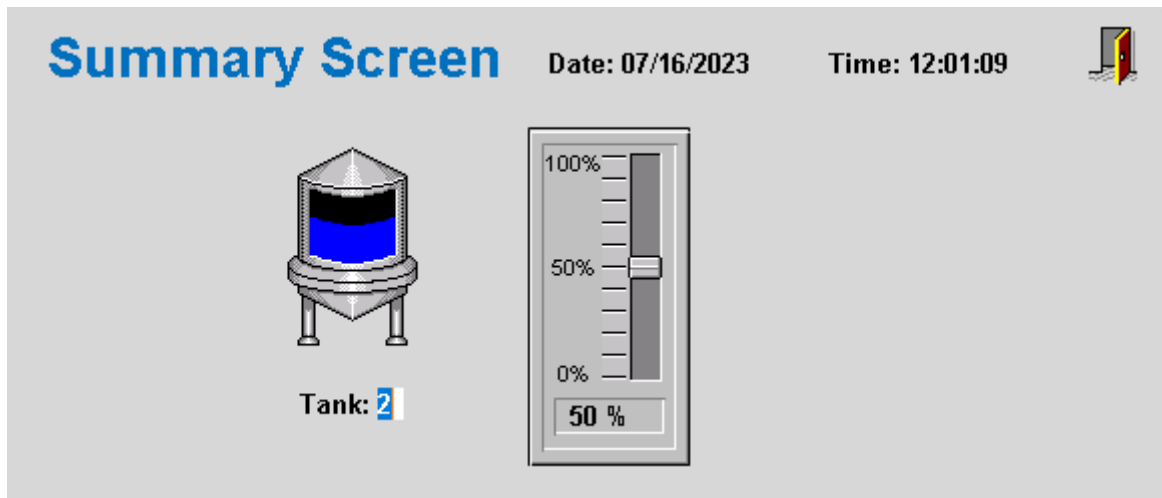


Finished tank selector object during run time

If any part of the project does not work as expected, switch back to the development application (**ALT+TAB**) and then click **Stop** on the Home tab of the ribbon.

Configuring the communication driver


This part of the tutorial shows how to select and configure a driver to communicate with an external I/O device.

1. In the *Project Explorer*, select the **Comm** tab.
2. Right-click the **Drivers** folder, and then select **Add/Remove Drivers** on the shortcut menu. The *Communication Drivers* dialog is displayed.
3. Highlight a driver in the **Available drivers** list, and then choose **Select**. For this tutorial, select MODBU. The driver is moved to the **Selected drivers** list.

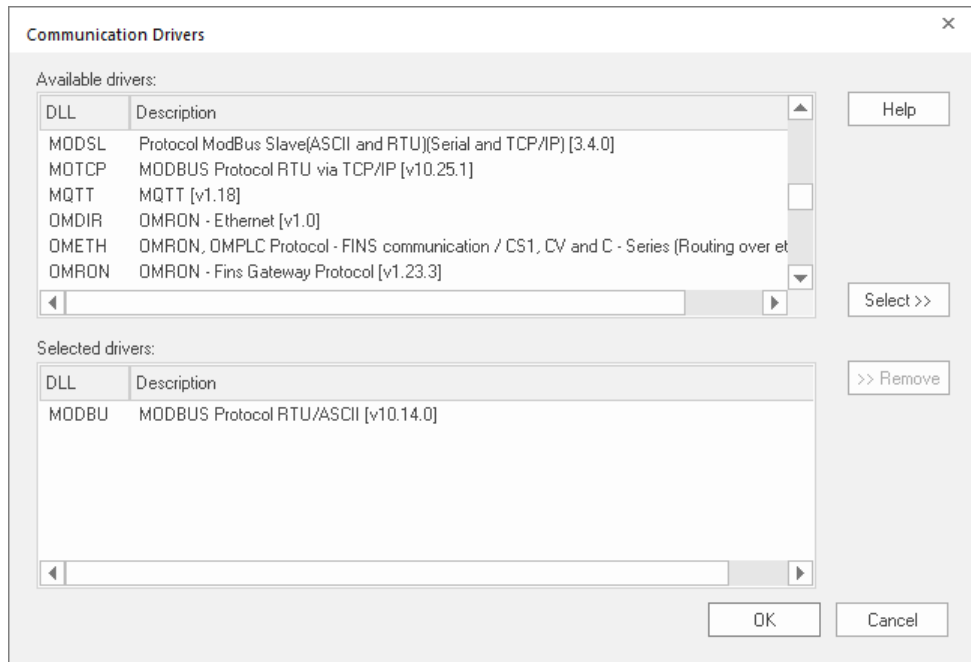


MODBU driver selected

4. Select **OK**. The *Communication Drivers* dialog is closed, and the driver is added to the Drivers folder in the *Project Explorer*.
5. In the Project Explorer, right-click the **MODBU** folder, and then select **Settings** on the shortcut menu.

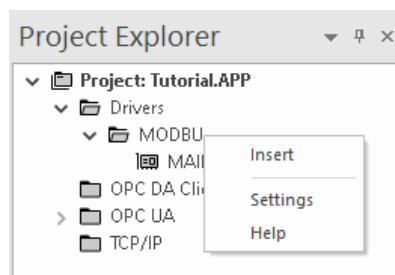

The *Communication Settings* dialog is displayed.

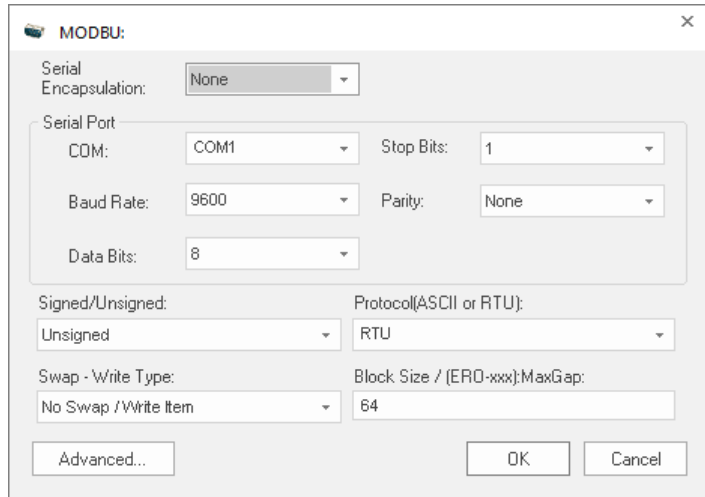

Communication Settings dialog for MODBU driver

6. Configure the communication settings as needed for the target device. For this tutorial, you can accept the default settings.

For more information about a specific driver, select **Communication Drivers** on the **Help** tab of the ribbon.

7. Click **OK** to close the dialog.
8. In the Project Explorer, right-click the **MODBU** folder and then select **Insert** on the shortcut menu. A new driver worksheet named MODBU001.drv is created and opened for editing.
9. Configure the worksheet header:
 - a) In the **Description** box, type `Tutorial Modbus`.
This setting is for documentation only; it does not affect the project during run time.
 - b) In the **Enable Read When Idle** box, type `1`.
This setting is a trigger that takes a Boolean value. A value of `1` — either entered manually as above or evaluated from a tag/expression — forces your project to continue reading tag values from the target device even when there are no changes in value.
 - c) In the **Enable Write On Tag Change** box, type `1`.
This setting is also a trigger. A value of `1` forces your project to write tag values to the target device only when those values change, rather than continuously. This improves run-time performance.
 - d) In the **Station** box, type `1`.
This indicates the I/O device number to be accessed by this driver. Typically, the PLC is specified as Device #1.
 - e) In the **Header** box, type `4X:0`.

Each driver has a specific format. The format for the MODBU driver is:

register_type:initial_offset

Register Type	Description
0X	Coil Status
1X	Input Status
3X	Input Register
4X	Holding Register

Register Type	Description
ID	Slave ID Number

Completed worksheet header

10. In the worksheet body, enter the tags and their associated device addresses — for each tag:

- In the **Tag Name** field, type the name of the project tag.
- In the **Address** field, type the value to be added to the header to form the complete device address.

Tag Name	Address	Complete Device Address
Level [1]	1	4X:1 (Holding Register 1)
Level [2]	2	4X:2 (Holding Register 2)
Level [3]	3	4X:3 (Holding Register 3)

Completed worksheet body

11. Go to **File**, and then select **Save**.

12. When prompted to choose the driver sheet number, type 1 and then select **OK**.

Monitoring device I/O during run time

This part of the tutorial shows how to monitor device I/O during run time by using the *Log* window.

- On the **Home** tab of the ribbon, in the **Local Management** group, select **Run**. The project runs and the startup screen is displayed.
- Press **ALT+TAB** to switch back to the development application.
- Right-click in the *Output* window, and then select **Settings**. The *Log Settings* dialog is displayed.
- Select the **Field Read Commands**, **Field Write Commands**, and **Protocol Analyzer** options.
- Select **OK** to close the *Log Settings* dialog.

You can now monitor the device I/O during run time.

Schneider Electric Japan Holdings Ltd.
Schneider Electric Osaka Building, 4-4-9 Kitahama, Chuo-ku, Osaka
541-0041
Japan

+ 81 (0) 6 6208 3133

www.pro-face.com

As standards, specifications, and design change from time to time,
please ask for confirmation of the information given in this publication.

© 2023 – Schneider Electric Japan Holdings Ltd. All rights reserved.

BOS-QSG_11