# Easy! Smooth! Replacement Guidebook

 $GP-3200T/A \rightarrow ST-6200WA (GP-Pro EX)$ 

The 2<sup>nd</sup> Edition August 2024 SE01-Guide-GP3200toST6200WA-EN-02

\*Products may be changed or discontinued without notice. Please check our website for the latest information.



© 2024 Pro-face. All Rights Reserved. | Page 1

## Update History

Date	Edition	Updated Slide	Description
2023/09/27	1 <sup>st</sup>	-	Newly created
2024/08/23	2 <sup>nd</sup>	Slide 39	Added information of the workarounds for Blink function on ST6000 Series



The Pro-face brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this guide are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owners.

This guide and its content are protected under applicable copyright laws and furnished for informational use only. No part of this guide may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the guide or its content, except for a non-exclusive and personal license to consult it on an "as is" basis. Schneider Electric products and equipment should be installed, operated, serviced, and maintained only by qualified personnel.

As standards, specifications, and designs change from time to time, information contained in this guide may be subject to change without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this material or consequences arising out of or resulting from the use of the information contained herein.

As part of a group of responsible, inclusive companies, we are updating our communications that contain non-inclusive terminology. Until we complete this process, however, our content may still contain standardized industry terms that may be deemed inappropriate by our customers.



## Safety Information

### **Important Information**

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a "Danger" or "Warning" safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.	<b>CAUTION</b> indicates a hazardous situation which, if not avoided, <b>could result</b> in minor or moderate injury.
	NOTICE
WARNING indicates a hazardous situation which, if not avoided, <b>could result in</b> death or serious injury.	<b>NOTICE</b> is used to address practices not related to physical injury.

### **Please Note**

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation and has received safety training to recognize and avoid the hazards involved.

### **Document Scope**

This guidebook introduces the procedures to replace a unit from "GP3000 Series (GP-3200T/A)" to "ST6000 Series GP-Pro EX Model (ST-6200WA)". The recommended substitute models are as follows.

	Model in use		Recomme	ended substitutes
GP-3200T	AGP3200-T1-D24 (PFXGP3200TAD) *1			
GP-3200T	AGP3200-T1-D24-M (PFXGP3200TADC) *1*2	$\rightarrow$	ST-6200WA (GP-Pro EX)	PFXST6200WADE
GP-3200A	AGP3200-A1-D24 (PFXGP3200AAD) *3			

#### \*1: End of Sale on September 30, 2013

\*2: This is a coated model. As for ST6000 Series, there is no coated model in Standard lineup. You can request the coated model as Lite Customization. For the detail, please contact Customer Service.

\*3: End of Sale on June 21, 2013

### Validity Note

This documentation is valid for this product.

The technical characteristics of the devices described in the present document also appear online. To access the information online, go to our website. <u>https://www.pro-face.com</u>

The characteristics presented in the present document should be the same as those that appear online. In line with our policy of constant improvement we may revise content over time to improve clarity and accuracy. In the event that you see a difference between the document and online information, use the online information as your reference.

### **Registered Trademarks**

Product names used in this manual may be the registered trademarks owned by the respective proprietors.



### About this book

### **Related Documents**

You can download the manuals related to this product, such as the software manual, from our website. <u>https://www.proface.com/en/download/search</u>

### **Product Related Information**

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

### **A A DANGER**

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Remove all power from the device before removing any covers or elements of the system, and prior to installing or removing any accessories, hardware, or cables.
- Unplug the power cable from both this product and the power supply prior to installing or removing the product.
- Always use a properly rated voltage sensing device to confirm power is off where and when indicated.
- Replace and secure all covers or elements of the system before applying power to this product.
- Use only the specified voltage when operating this product. This product is designed to use 24 Vdc. Always check whether your device is DC powered before applying power.
- When using ST-6•00TA in Class I, Division 2, Groups A, B, C, and D hazardous locations, install this product in an enclosure that prevents the operator from touching the back of this product without the use of tools.

Failure to follow these instructions will result in death or serious injury.



## About this book

### **A**DANGER

#### POTENTIAL FOR EXPLOSION

#### For ST-6•00WA:

- Do not use this product in hazardous environments.
- Do not connect or disconnect this product unless power has been switched off or the area is known to be non-hazardous.
- Do not attempt to install, operate, modify, maintain, service, or otherwise alter this product except as permitted in this manual.
- Confirm that the USB cable has been attached with the USB cable clamp before using the USB interface.
- Use the USB (micro-B) interface for temporary connection only during maintenance and setup of the device.

Failure to follow these instructions will result in death or serious injury.

For ST-6•00TA installation in hazardous location, refer to <u>Hazardous Location</u> <u>Installation - For USA and Canada.</u>

Critical alarm indicators and system functions require independent and redundant protection hardware and/or mechanical interlocks.

When you cycle power, wait at least 10 seconds after it has been turned off. If this product is restarted too quickly, it may not operate correctly.

In the event the screen cannot be properly read, for example, if the backlight is not functioning, it may be difficult or impossible to identify a function. Functions that may present a hazard if not immediately executed, such as a fuel shut-off, must be provided independently of this product. The machine's control system design must take into account the possibility of the backlight no longer functioning and the operator being unable to control the machine or making mistakes in the control of the machine.

### **A**WARNING

#### LOSS OF CONTROL

- The designer of any control scheme must consider the potential failure modes of control paths and, for certain critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop and overtravel stop, power outage and restart.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of unanticipated transmission delays or failures of the link.
- Observe all accident prevention regulations and local safety guidelines.
- Each implementation of this product must be individually and thoroughly tested for proper operation before being placed into service.
- The machine control system design must take into account the possibility of the backlight no longer functioning and the operator being unable to control the machine, or making errors in the control of the machine.

### Failure to follow these instructions can result in death, serious injury, or equipment damage.

For additional information, refer to NEMA ICS 1.1 (latest edition), "Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control" and to NEMA ICS 7.1 (latest edition), "Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems" or their equivalent governing your particular location.

### **A**WARNING

#### UNINTENDED EQUIPMENT OPERATION

- The application of this product requires expertise in the design and programming of control systems. Only persons with such expertise should be allowed to program, install, alter, and apply this product.
- · Follow all applicable safety standard, local regulations and directives.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

## About this book

### **A**WARNING

#### UNINTENDED EQUIPMENT OPERATION

- Do not use this product as the only means of control for critical system functions such as motor start/stop or power control.
- Do not use this equipment as the only notification device for critical alarms, such as device overheating or overcurrent.
- Use only the software provided with this product. If you use other software, please confirm the operation and safety before use.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The following characteristics are specific to the LCD panel and are considered normal behavior:

• LCD screen may show unevenness in the brightness of certain images or may appear different when seen from outside the specified viewing angle. Extended shadows, or crosstalk may also appear on the sides of screen images.

• LCD screen pixels may contain black and white colored spots and color display may seem to have changed.

• When experiencing vibrations within a certain frequency range and vibration acceleration is above what is acceptable, the LCD screen may partially turn white. Once the vibration condition ends, the whitening of the screen is resolved.

• When the same image is displayed on the screen for a long period, an afterimage may appear when the image is changed.

• The panel brightness may decrease when used for a long time in an environment continuously filled with inert gas. To prevent deterioration of panel brightness, regularly ventilate the panel. For more information, please contact customer support. https://www.pro-face.com/trans/en/manual/1015.html

### **A**WARNING

#### SERIOUS EYE AND SKIN INJURY

The liquid in the LCD panel contains an irritant:

- · Avoid direct skin contact with the liquid.
- Wear gloves when you handle a broken or leaking unit.
- · Do not use sharp objects or tools in the vicinity of the LCD panel.
- Handle the LCD panel carefully to prevent puncture, bursting, or cracking of the panel material.
- If the panel is damaged and any liquid comes in contact with your skin, immediately rinse the area with running water for at least 15 minutes. If the liquid gets in your eyes, immediately rinse your eyes with running water for at least 15 minutes and consult a doctor.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

### NOTICE

REDUCTION OF SERVICE LIFE OF PANEL

Change the screen image periodically and try not to display the same image for a long period of time.

Failure to follow these instructions can result in equipment damage.





### **Cybersecurity Best Practices**

To help keep your Pro-face products secure and protected, we recommend that you implement the cybersecurity best practices. Following the recommendations may help significantly reduce your company's cybersecurity risk. For the recommendations, refer to the following URL: <u>https://www.pro-face.com/trans/en/manual/1087.html</u>



### General

ST-6•00TA is suitable for use in Class I, Division 2, Groups A, B, C, and D hazardous locations or in non-hazardous locations. Before installing or using this product, confirm that the Hazardous Location certification appears on the product labeling.

NOTE: Some products are not yet rated as suitable for use in hazardous locations. Always use your product in conformance with the product labeling and this manual.

### **A A DANGER**

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Remove all power from the device before removing any covers or elements of the system, and prior to installing or removing any accessories, hardware, or cables.
- Unplug the power cable from both this product and the power supply.
- Always use a properly rated voltage sensing device to confirm power is off where and when indicated.
- Replace and secure all covers or elements of the system before applying power to this product.
- Use only the specified voltage when operating this product. This product is designed to use 24 Vdc. Always check whether your device is DC powered before applying power.

Failure to follow these instructions will result in death or serious injury.

### **A**WARNING

#### **EXPLOSION HAZARD**

- Do not use this product in hazardous environments or locations other than Class I, Division 2, Groups A, B, C, and D.
- Substitution of any components may impair suitability for Class I, Division 2.
- Always confirm the UL 121201 or CSA C22.2 No.213 hazardous location rating of your device before installing or using it in a hazardous location.
- To apply or remove the supply power from this product installed in a Class I, Division 2 hazardous location, you must either: A) Use a switch located outside the hazardous environment, or B) Use a switch certified for Class I, Division 1 operation inside the hazardous area.
- Do not connect or disconnect equipment unless power has been switched off or the area is known to be non-hazardous. This applies to all connections including power, ground, serial, parallel, and network connections.
- Do not install any components, equipment, or accessories manufactured by us or by OEM unless these have also been qualified as suitable for use in Class I, Division 2, Groups A, B, C, and D locations.
- · Never use unshielded/ungrounded cables in hazardous locations.
- Use only non-incendive USB devices.
- Do not attempt to install, operate, modify, maintain, service, or otherwise alter this product except as permitted in this manual. Unpermitted actions may impair the suitability of this product for Class I, Division 2 operation.

### Failure to follow these instructions can result in death, serious injury, or equipment damage.

Make sure that this product is properly rated for the location. If the intended location does not presently have a Class, Division and Group rating, then users should consult the appropriate authorities having jurisdiction in order to determine the correct rating for that hazardous location.

## Hazardous Location Installation - For USA and Canada

### **Operation and Maintenance**

The systems have been designed for compliance with relevant spark ignition tests.

### **A**WARNING

#### EXPLOSION HAZARD

In addition to the other instructions in this manual, observe the following rules when installing this product in a hazardous location:

- Wire the equipment in accordance with the National Electrical Code article 501.10 (B) for Class I, Division 2 hazardous locations.
- Install this product in an enclosure suitable for the specific application.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

NOTE: IP65F is not part of UL certification.

## Table of Contents

1	<u>Summary</u>					
2	Harc	Iware Section				
	2-1	Specification Comparison				
	2-2	Standards Compatibility				
	2-3	Interface Compatibility				
	2-4	Installation Method Compatibility				
	2-5	Option Compatibility				
	2-6	Other Important Notes on Hardware				
3	<u>Soft</u>	ware Section				
	3-1	Replacement Procedure				
	3-2	Software Compatibility				

3-3 Other Important Notes on Software

## 1. Summary

The replacement from GP3000 Series (GP-3200T/A) to ST6000 Series GP-Pro EX Model (ST-6200WA) generally keeps compatibility, but the followings are the main points to note.

- Display Type: GP-3200A has a Monochrome Amber/Red LCD, but ST-6200WA has a TFT Color LCD. As the screen will look different, please check on the actual unit.
- Display resolution: ST-6200WA has a better resolution. You need to convert resolution by the software to use old project data from GP-3200T/A. To check the replacement procedure, refer to 3. Software Section in this document.

GP3000 Series (3.5") GP-3200T/A	320 x 240 pixels (QVGA)	ST6000 Series (4.3") ST-6200WA (GP-Pro EX)	480 x 272 pixels (WQVGA)
------------------------------------	-------------------------	---	--------------------------

External dimensions: The panel cut dimensions are the same, but the external dimensions are different. It is necessary to check the dimensions of the HMI installation location.





## 2. Hardware Section



## 2-1. GP-3200T/A vs ST-6200WA Specification Comparison - 1. Basic Information -

		GP-3200T	GP-3200A	ST-6200WA (GP-Pro EX)	Points to note when replacing
Display type		TFT Color LCD	Monochrome Amber/Red LCD	TFT color LCD	
Display si	ze	3.	5"	4.3"	
Resolution	n	320 x 240 pi	xels (QVGA)	480 x 272 pixels (WQVGA)	Need to change resolution setting by software
Display co	olors	256 colors (without blink) 64 colors (with blink)	Black and White (8 shades)	16 million colors	
Backlight		White LED (Not user replaceable)	Amber/Red LED (Not user replaceable)	White LED (not replaceable)	Backlight is not replaceable
Backlight service life		40,000 hours or more (continuous operation at 25°C before backlight brightness decreases to 50%)	50,000 hours or more (continuous operation at 25° C before backlight brightness decreases to 50%)	50,000 hours or more (continuous operation at 25°C before backlight brightness decreases to 25%)	
Panel cut	dimensions	W118.5 x	H92.5 mm	W118.5 x H92.5 mm	
External d	limensions	W130 x H10	4 x D40 mm	W134.5 x H108.5 x D43 mm	
Touch par	nel type	Resistive film (ana	alog, single touch)	Resistive film (analog, single touch)	
Touch par	nel service life	1 million tim	nes or more	1 million times or more	
	Application memory	FLASH EPROM 6MB		FLASH EPROM 64MB	Refer to FAQ for the available
Memory	Backup memory	SRAM	320KB	NVRAM 320KB	capacity of each memory
Battery (clock data backup)		Rechargeable battery / Secondary battery		Replaceable battery / Primary battery	Battery can be replaced by user
Rated inp	ut voltage	DC	24V	DC 24V	
Power Co	nsumption	13W c	or less	6.9W	

## 2-1. GP-3200T/A vs ST-6200WA Specification Comparison - 2. Interface -

		GP-3200T	GP-3200A	ST-6200WA (GP-Pro EX)	Points to note when replacing
	COM1	RS-232C/422/485	(D-Sub 9pin Plug)	RS-232C/RS-422/RS-485 (D-Sub 9pin Plug)	Please refer to 2.5. Other important notes
Serial I/F	COM2	-		-	on Hardware in this document.
Ethernet I/F		10BASE-T/100BA	SE-TX (RJ-45) x 1	10BASE-T/100BASE-TX (RJ-45) x 1	
CF Card I/F				-	
SD Card I/F		-		-	
	Туре А	USB 1.1 x 1 - USB transfer cable (CA3-USBCB-01)		USB 2.0 x1	No screen data transfer via Type A
USB I/F	Type mini-B	-		-	
038 1/F	Type micro-B	-		USB 2.0 x1 - USB transfer cable (PFXZUSCBMB2) or commercial USB micro-B transfer cable	
Auxiliary I/O I/F		-		-	
Sound Output I/F		-		-	
Expansion U	nit I/F			-	

Hardware Manual: ST6000 Series Hardware Manual




## 2-2. Standards Compatibility

Certification	GP-3200T/A	ST-6200WA (GP-Pro EX)
CE (EN61000-6-4, EN61000-6-2, EN61131-2)	$\checkmark$	$\checkmark$
UKCA	-	$\checkmark$
UL/cUL	✓ (UL508) (CSA C22.2 No.142)	✓ (UL61010-2-201) (CSA C22.2 No.61010-2-201)
UL/cUL Class 1, Div. 2	✓ (ANSI/ISA12.12.01) (CSA C22.2 No213)	✓ (UL121201) (CSA C22.2 No213)
ATEX (Zones 2/22, equipment category 3 Gas Dust)	$\checkmark$	-
IECEx (Zones 2/22, equipment category 3 Gas Dust)	-	-
UKEX	-	-
KCs	-	-
NEPSI → CCC-Ex	-	-
RCM (C-Tick)	-	$\checkmark$
EAC (GOST-R)	$\checkmark$	$\checkmark$
RoHS for EU	$\checkmark$	$\checkmark$
RoHS for China	$\checkmark$	$\checkmark$
REACH	$\checkmark$	$\checkmark$
CCC *apply for CCC exemption	-	-
KC	$\checkmark$	$\checkmark$
Marine (DNV, ABS, LR, BV, NK, RINA, CCS)	-	-
WEEE	$\checkmark$	$\checkmark$



## 2-3. Interface Compatibility

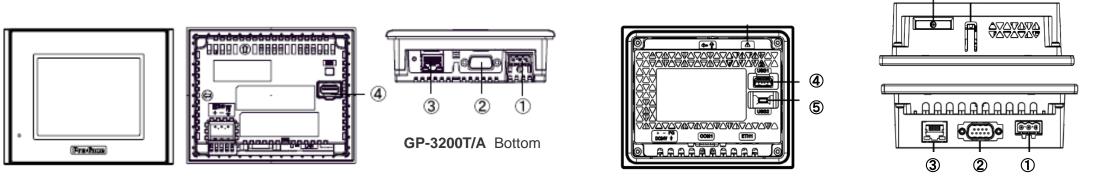

GP-3200T/A Rear

ST-6200WA Rear

ST-6200WA Bottom


6

	GP-3200T/A	ST-6200WA
1	Power Connector (DC)	Power Connector (DC)
2	Serial Interface (COM1)	Serial Interface (COM1)
3	Ethernet Interface (ETH1)	Ethernet Interface (ETH1)
4	USB (Type A) Interface	USB (Type A) Interface
(5)	-	USB (micro-B) Interface
6	-	Battery Slot

Please check ST6000 Series Hardware Manual for details such as interface specifications and pin assignments.

## 2-3. Installation Method Compatibility

Panel Cut Dimensions of ST-6200WA are the same as GP-3200T/A.

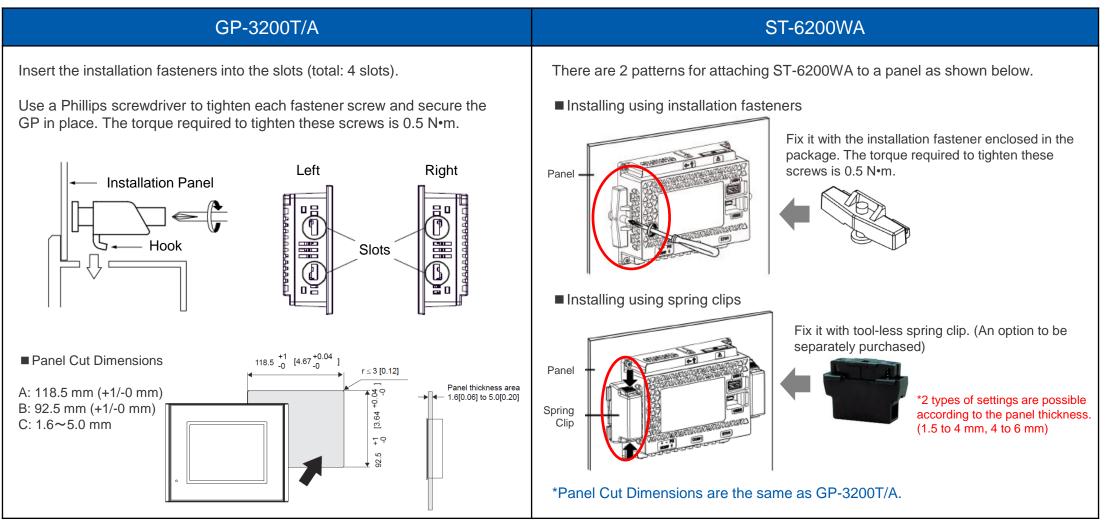

NOTE: The installation fasteners for GP3000 Series (P/N: CA3-ATFALL-01) cannot be used for ST-6200WA. For ST-6200WA, please use the ones for ST-6200WA (P/N: ZC9AF31) or Spring Clip (P/N: XBTZ3002).

Please check ST6000 Series Hardware Manual for installation requirements and procedure.

## 2-4. Option compatibility – Serial Interface

Product Name	GP-3200T/A	ST-6200WA (GP-Pro EX)	Description	Compatibility
RS-232C Cable (5m)	CA3-CBL232/5M-01	CA3-CBL232/5M-01	Cable for RS-232C connection between various hosts and this product	<b>v</b>
RS-422 Cable (5m)	CA3-CBL422/5M-01	CA3-CBL422/5M-01	Cable for RS-422 connection between various hosts and this product (Socket Type)	V
RS-422 Cable (5m)	CA3-CBL422-01	CA3-CBL422-01	Cable for RS-422 connection between various hosts and this product (Plug Type)	V
Mitsubishi PLC A-Series Connection Cable (5m)	CA3-CBLA-01	CA3-CBLA-01	Cable for directly connecting an A Series CPU	V
Mitsubishi PLC Q-Series Connection Cable (5m)	CA3-CBLQ-01	CA3-CBLQ-01	Cable for directly connecting a Q Series CPU	~
Mitsubishi PLC Q-Series Link Cable (5m)	CA3-CBLLNKMQ-01	CA3-CBLLNKMQ-01	Cable for directly connecting a Q Series Link Unit	V
Mitsubishi PLC FX-Series Connection Cable	CA3-CBLFX/1M-01 (1m) CA3-CBLFX/5M-01 (5m)	CA3-CBLFX/1M-01 (1m) CA3-CBLFX/5M-01 (5m)	Cable for directly connecting an FX Series CPU	~
Omron PLC SYSMAC Link Cable (5m)	CA3-CBLSYS-01	CA3-CBLSYS-01	Cable for directly connecting a SYSMAC Link Unit	V
Siemens TTY Converter Cable (5m)	CA6-CBLTTY/5M-01	CA6-CBLTTY/5M-01	Cable for connecting a PLC S5 series to this product	~
MPI Cable (3.5m)	ST03-A2B-MPI21-PFE GP3000-MPI21-PFE CA3-MPI-PG1-PFE CA3-MPI-PGN-PFE	-	Connects a host controller to this product for MPI communication.	-
Multi-Link Cable (5m)	CA3-CBLMLT-01 * End of sale	CA3-CBLMLT-01 * End of sale	Connects a host controller to this product for multi-link (n:1) communication.	V
	PFXZCBCBML1	PFXZCBCBML1		

## 2-4. Option compatibility – Serial Interface

Product Name	GP-3200T/A	ST-6200WA (GP-Pro EX)	Description	Compatibility
RS-232C 9-pin/25-pin Conversion Cable (20cm)	CA3-CBLCBT232-01	CA3-CBLCBT232-01	Cable for converting a D-Sub 9-pin plug to a D-Sub 25-pin socket	<i>v</i>
RS-422C 9-pin/25-pin Conversion	CA3-CBLCBT422-01 *End of sale	CA3-CBLCBT422-01 *End of sale	Cable for converting a D-Sub 9-pin plug to a D-Sub 25-pin socket	V
Cable (20cm)	PFXZCBCBCVR41	PFXZCBCBCVR41		
2 Port Adapter Cable (5m)	CA3-MDCB11 *End of sale	CA3-MDCB11 *End of sale	Connects Mitsubishi PLC to this product using 2 port adapter II (RS-422).	~
Mitsubishi PLC A, QnA, FX Series 2 Port Adapter II	GP070-MD11 *End of sale	GP070-MD11 *End of sale	Allows simultaneous use of this product and a Mitsubishi PLC A, QnA, FX Series peripheral device.	~
COM Port Conversion Adapter	CA3-ADPCOM-01	CA3-ADPCOM-01	Connects optional RS-422 communication items to serial interface.	<ul> <li>✓</li> </ul>
RS-422 Terminal Block Conversion Adapter	-	PFXZCBADTM1	Connects output from a serial interface (D-sub 9 pin plug) directly to an RS-422 terminal block.	NEW
Terminal Block Conversion Adapter	CA3-ADPTRM-01	CA3-ADPTRM-01	Connects output from a serial interface (D-sub 9 pin socket) directly to an RS-422 terminal block.	~
RS-232C Isolation Unit *1	CA3-ISO232-01	CA3-ISO232-01	Connects a host controller to this product and provides isolation (RS-232C and RS-422 are switchable).	V

\*1: You can use RS-232C isolation unit (CA3-ISO232-01) for GP4000 series instead. In this case, select "VCC" from [System Settings] -> [Device/PLC] in the [Project] menu on GP-Pro EX.

RI / VCC O RI VCC In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.



## 2-4. Option compatibility – USB Interface

Product Name	GP-3200T/A	ST-6200WA (GP-Pro EX)	Description	Compatibility
USB Transfer Cable (2m)	CA3-USBCB-01	-	Cable for transferring screen data between a PC (USB Type A) and this product (USB Type A)	A to A screen transfer is not available.
USB Transfer Cable	-	PFXZUSCBMB2	Cable for transferring screen data from a PC (USB Type A) to this product (USB micro-B)	NEW
USB Cable (5m)	FP-US00	FP-US00	Connects a USB printer (Type B)	<b>v</b>
USB Front Cable (1m)	CA5-USBEXT-01	CA5-USBEXT-01	Extension cable that attaches USB interface (Type A) to front panel	~
USB (micro-B) Front Cable	-	PFXZCIEXMB2	Extension cable that attaches USB interface (micro-B) to front panel	NEW
USB Clamp Type A (1 port)	-	PFXZCBCLUSA1	Clamp to prevent disconnection of USB cable (USB/A, 1 port, 5 clamps/set)	NEW
USB-Serial (RS-232C) Conversion Cable (0.5m)	CA6-USB232-01	CA6-USB232-01	Cable for converting a USB interface into a serial interface (RS-232C)	~
USB/RS-422/485 Conversion Adapter	-	PFXZCBCBCVUSR41	Adapter for connecting this product (USB Type A) to an external device (RS-422/RS-485)	NEW
EZ Tower Light tube mounting fixing plate	-	PFXZCETWHA1	USB Connection Type Monolithic EZ Tower Light tube mounting with fixing plate 3 tiers, Ø60, lighting and flashing with a buzzer	NEW
EZ Tower Light with base mounting	-	PFXZCETWW1	USB Connection Type Monolithic EZ Tower with base mounting 3 tiers, Ø60, lighting and flashing with a buzzer	NEW
EZ Illuminated Switch	-	PFXZCCEUSG1	A unit of 5 illuminated switches with multiple color LED easily connected with this product unit via USB	NEW
EZ Numpad	-	PFXZCCEUKB1 *End of sale	Numpad connected to this product via USB	NEW
EZ Fingerprint Recognition Unit	-	PFXZCCEUSS1 *End of sale	Fingerprint recognition unit connected to this product via USB	NEW

## 2-4. Option compatibility – Other options, Maintenance options

Product Name	GP-3200T/A	ST-6200WA (GP-Pro EX)	Description	Compatibility
Screen Protection Sheet	CA6-DFS4-01	-	Disposable, dirt-resistant sheet for the GP unit screen (5 sheets/set)	NEW
Screen Protection Sheet with UV protected	-	PFXZCIDS42	Disposable, dirt-resistant sheet for the display and ultra-violet protection sheet (1 sheet /set)	Use the option for ST6000 series.
Spring Clip	-	XBTZ3002	Fasteners to attach this product to the mounting surface	NEW!

Produ	ct Name	GP-3200T/A	ST-6200WA (GP-Pro EX)	Description	Compatibility
Installation	GP-3200T/A	CA3-ATFALL-01	-	Installation fastener	<b>NEW</b> Use the option for
Fastener ST-6200WA	ST-6200WA	-	ZC9AF31	nstallation fastener	ST6000 series.
Installation GP-3200T/A		ST400-WP01	-	Provides dust and moisture resistance when this product is installed	<b>NEW</b> Use the option for
Gasket	ST-6200WA	-	PFXZCIWG43	into a solid panel (1 piece).	ST6000 series.
USB Cable Clamp		CA5-USBATL-01	-	USB Cable clamp to prevent disconnection	-
DC Power Supply Connector		CA5-DCCNM-01	CA5-DCCNM-01	Connector to connect DC power supply cables (5 pcs/set)	<b>v</b>
Battery for Data Backup		-	PFXZGEBT1	Primary battery for memory and time data backup (1 piece) For all ST6000 series	NEW

## 2-5. Other Important Notes on Hardware

- About Serial Interface
  - The cable connection of GP-3200T/A can be generally used for ST-6200WA, but before ST-6200WA is connected, please check it with "<u>GP-Pro EX Device/PLC Connection Manual</u>".
  - By using "USB/RS-422/485 Conversion Adapter", you can use the USB interface of ST-6200WA as RS-422/485 Serial Interface. For the details, refer to "<u>USB/RS-422/485 Conversion Adapter Installation Guide</u>".
     As the connectable devices with USB/RS-422/485 Adapter are limited, please also refer to "<u>USB/RS-422/485 Conversion Adapter Connection Guide</u>" to see the list of supported drivers.



## 2-5. Other Important Notes on Hardware


- Do not expose the hardware to direct sunlight. Recommend to use the option item "UV Protection Sheet" to protect the display from ultraviolet light.
- This product is not designed for outdoor use. UL certification obtained is for indoor use only.
- Do not turn on the hardware if condensation has occurred inside the device.
- The panel brightness may decrease when used for a long time in an environment continuously filled with inert gas. Please ventilate the control panel periodically.



## 3. Software Section



### 3-1. Replacement Procedure – Workflow

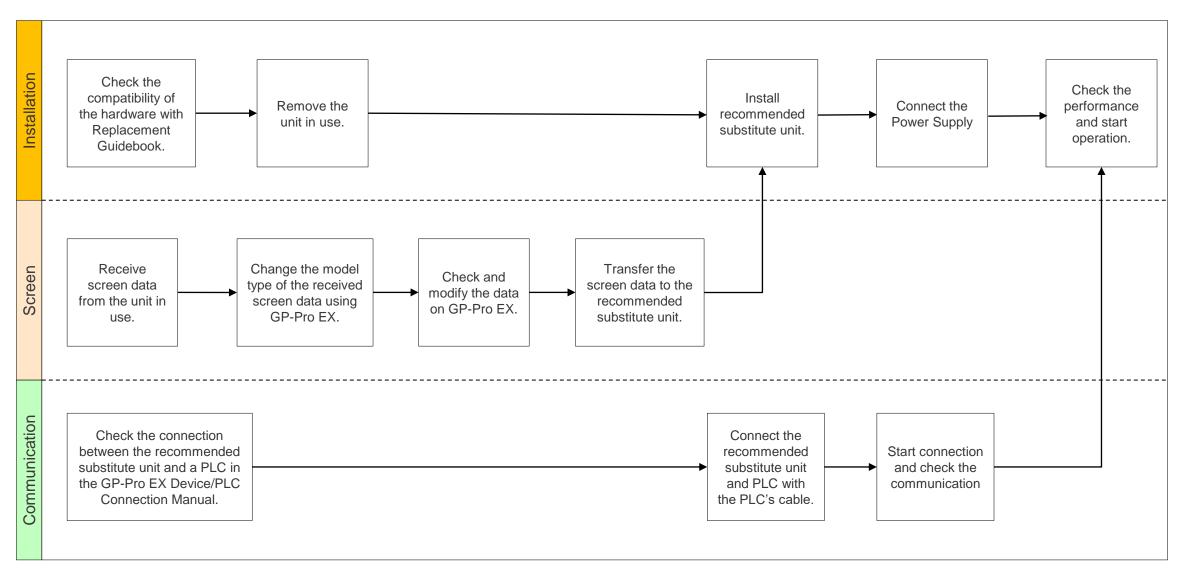

© 2024 Pro-face. All Rights Reserved. | Page 27

Requirements for receiving screen data from the unit in use <b>*1</b>	PC in which GP-Pro EX Transfer Tool is installed. *2
	Transfer Cable (the followings can be used) USB transfer cable: CA3-USBCB-01 (Type A - Type A) *It's also possible to send/receive a screen via USB storage device or Ethernet.
Requirements for converting screen data of the unit in use and transferring the converted data to Recommended	PC with GP-Pro EX installed ST-6200WA supported version: Ver. 4.09.200 or later
substitute unit	Transfer Cable (the followings can be used) USB transfer cable: PFXZUSCBMB2 (Type A – Type micro-B) or commercially available USB micro-B transfer cable *It's also possible to send/receive a screen via USB storage device or Ethernet.

\*1: This step is required if screen data is saved only in the HMI unit, not in any other device. If you already have the screen data backup, please go to "<u>3-1. Replacement Procedure – Change model to recommended substitute unit (GP-Pro EX)</u>".

\*2: Please use the same or later version of the software used when creating screens on the old model. If you don't know the software version, we recommend that you use the latest one. You can download the latest transfer tool from our website. https://www.pro-face.com/otasuke/

## 3-1. Replacement Procedure – Receive Screen data from the model in use (GP-Pro EX)

In this section, we will introduce how to receive screen data with a USB transfer cable as an example. If you have the backup of screen data, this step is not necessary. Please go to the next section.

<ol> <li>Connect your PC and the model in use with a USB transfer cable. If the driver of the cable has not been installed on your PC yet, a dialog box will appear. Please follow the instructions.</li> </ol>		5. Click [Receive Project], and the following dialog box will appear. Specify a place to save the received data in and a project file name, and then click [Save] to start transfer.	Save jn: 🔁 🔶 🕅 🗸
2. Start the Transfer Tool of GP-Pro EX.	Image: Section (1)     Section (2)     Height (1)       Image: Section (2)     Height (1)     Height (1)       Image: Section (2)     H		File name:     Save       Save as type:     PRX Files (".prx)         Cancel
<ol> <li>Make sure that the [Device] in the "Transfer Settings Information" is set to [USB]. If not, click the [Transfer Setting] button to open the "Transfer Setting" dialog box. Select [USB] in the Communication Port Settings field and click [OK].</li> </ol>	Transfer Settings Transfer Settings Site Tran Communication Port Settin USB C LAN Modem C COM	<ol> <li>The following dialog box appears during transfer, and you can check the communication status. (The display unit enters the Transferring mode and communication with the device such as a PLC is terminated.)</li> </ol>	Indexemble     I
<ol> <li>Start GP-Pro EX Transfer Tool and click the [Receive Project] button.</li> </ol>	Name for the formation     Name of the formation       Image: A constrained of the date       Image: A constrained of the constrained of the date       Image: A constrained of the constrain	<ol> <li>When transfer is completed, the status displayed in the dialog box will change from [Transferring] to [Complete Transfer]. Click [Close] to close the dialog box.</li> </ol>	*70/219/5421         CE         CE           101         101         101         101           101         101         101         101         101           101         101         101         101         101         101           101         101         101         101         101         101         101
	Prome Secury Date  Transfer solar  Toruge solar  Toru	8. Close the Transfer Tool.	

### **NOTES**


1. The "Hardware Installation" dialog box as shown on the right may appear during installing the USB driver depending on the security level of Windows®. Click [Continue Anyway] to start installing the driver. When installation is completed, click [Finish].

2. When the file already exists, a window will appear asking if you want to overwrite the file.

3. When receiving a project file that uses SD card/USB memory data such as Recipe Function (CSV data), the following dialog box will appear during the transfer. Please specify where to save the data. Click [OK] to return to the [Receive Project] dialog box and complete the transfer.











## 3-1. Replacement Procedure – Change model to recommended substitute unit (GP-Pro EX)

불 Change Disp	play Unit X
Current Display	
Series	GP4000 Series
	GP-45** Series
Model	GP-4501TW
Orientation	Landscape
Touch Panel	Analog
	<u> </u>
New Display	
Series	ST6000 Series V
	ST-65** Series
Model	ST-6500TA SVGA (800*600) ~
Orientation	Landscape $\checkmark$
Touch Panel	Analog
Convert Re	esolution
	Change Cancel
	Change Cancel

Change the Display unit from GP3000 Series to ST6000 Series. The display can be changed from the menu bar "Project"  $\rightarrow$  "System Settings"  $\rightarrow$  "Display"  $\rightarrow$  "Change Display" in GP-Pro EX.

If you check on [Convert Resolution] when changing the Display Unit type (as shown below), you can adjust both size and location of the part and the text relative to the display resolution automatically. But still, you may need to adjust them manually. Please pay attention to the following points.

Orientation	Landscape		$\checkmark$
Touch Panel	Analog		
Convert Re	esolution		
		Change	Cancel

- A function that requires absolute coordinates. Please adjust the settings manually.
  - Global window
  - Position Animation
- Due to font size and resolution restrictions, manual changes may be required. Please resize them if needed
  - **Font:** In the case of using Standard font, the size will be smaller. You can improve by using Stroke font or Image font.
  - Objects
  - Parts
  - Images
  - Alarm parts
- Position may differ from the original project. Please check the coordinate of the window and adjust if needed.
   Window display

© 2024 Pro-face. All Rights Reserved. | Page 31

## 3-1. Replacement Procedure – Transfer screen data to recommended substitute unit (GP-Pro EX)

In this section, we will introduce how to transfer screen data with a USB transfer cable as an example.

<ol> <li>Connect your PC and the recommended substitute unit with a USB transfer cable. If the driver of the cable has not been installed on you PC, a dialog box will appear. Please follow the instructions.</li> <li>Turn on the power of Recommended substitute unit. The "Welcome" screen will appear on the display unit. After transferring a project file once, this screen will not appear again.</li> </ol>	- معلم معلم معلم معلم معلم معلم معلم معل	<ol> <li>Click [Send Project]. In the dialog box that appears, set the connection key and clock [OK].</li> <li>NOTE: If you forget the connection key, you will not be able to connect to the display unit. For more information about connection key, refer to GP-Pro EX reference manual (34.14.4 How the Connection Key Works).</li> </ol>	Connection key is trajerid to connect to each display unit. A connection key is trajerid to connect to each display unit. Please set a connection key on the display unit in offline mode. Connection key Confirm Confirm Carl the display that transferrings. Additionates connection key when transferrings. Additionates connection key when transferrings. Carl the display that the display unit. Provide the connection key. You cannot connect to the display unit. Provide the connection key. You cannot connect to the display unit. Provide the connection key. We recommend you starts the key in a safe location.
	There's you for purchasing this unit. To initiative, please download the Runtime system Room to estim. Boot Ethernet	<ol> <li>When this dialog box appears, click [Yes]. This dialog box is not displayed when the same project file is sent again.</li> </ol>	USB     Transferring all projects will be executed.     Is that DK?     Yes No
<ol> <li>On the GP-Pro EX's State Toolbar, click the [Transfer Project] icon to open the Transfer Tool. To transfer a different project file, click the [Select Project] button and select a project file.</li> </ol>	A Transfer fiel     Area Table     Area Table	<ol> <li>The transfer begins. The following dialog box appears during transfer, and you can check the communication status. (The display unit changes to Transferring mode and communication with the device/PLC is suspended.)</li> </ol>	Seed Anged     Torget     To
<ol> <li>Make sure that the [Device] in the "Transfer Settings Information" is set to [USB]. If not, click the [Transfer Setting] button to open the "Transfer Setting" dialog box.</li> </ol>	Receive Security Case Transfer Settings Transfer Settings Site Tran	<ol> <li>When transfer is completed, the state of the dialog box changes from [Transferring] to [Transfer Complete]. Click [Close] to close the dialog box.</li> </ol>	Stand Project      Ditride UM     Stant      USB      USB
Select [USB] in the Communication Port Settings field and click [OK].	Communication Port Settin USB C LAN C Modem C COM	<ol> <li>9. Close the Transfer Tool</li> <li>10. Click the [X] mark on top right of the screen or [Project] → [Exit] to close GP-Pro EX.</li> </ol>	Funders game Copies Councerto la degla cel Funder copies Tunter copies 005

GP-Pro EX Fea	ture	AGP-3200T/A	ST-6200WA
	Screen Area (Application memory, unit: byte)	6M	64M
	Portrait Installation	$\checkmark$	$\checkmark$
Display	Function Expansion Memory	-	-
	Installing the USB/RS-422/485 Conversion Adapters	-	$\checkmark$
	MAC Address Display	$\checkmark$	$\checkmark$
	CF Card	-	-
	SD Card	-	-
External Storage	CFast Card	-	-
Clorage	USB storage	$\checkmark$	$\checkmark$
	FTP server	-	$\checkmark$
	Drawing in 256 colors	✓ (AGP-3200T only)	$\checkmark$
	Reverse Display	✓ (AGP-3200A only)	
	Color Blink	✓ (AGP-3200T only)	-
	Synchronize Text Display with Text Table	$\checkmark$	$\checkmark$
System Settings	Time Zone settings	-	-
Octungs	Detect Backlight Burnout	-	-
	Dimmer settings	-	$\checkmark$
	2-point touch / Multitouch	-	-
	Display the SD/USB Removal Icon	-	$\checkmark$

Specification UP in ST6000

NOT supported in ST6000

GP-Pro EX Feature		AGP-3200T/A	ST-6200WA
	Screen Capture	-	$\checkmark$
	SRAM Auto Backup	-	<ul> <li>✓USB storage can be used for the models without SD/CF card slots.</li> <li>*supported by Ver.4.09.450 or later</li> </ul>
System Settings	Image Font	$\checkmark$	$\checkmark$
	Bitmap Font	$\checkmark$	$\checkmark$
	Standard Font	$\checkmark$	$\checkmark$
	Port Control	-	$\checkmark$
	Number of Devices/PLCs that can communicate simultaneously	2	2
	Specify Indirect Device	$\checkmark$	$\checkmark$
Device/PLC Communication	Import Device/PLC tags	-	$\checkmark$
*1	Ethernet Multilink	√*2	$\checkmark$
	Device Monitor	$\checkmark$	$\checkmark$
	Ladder Monitor	-	-
	Network Transfer	$\checkmark$	$\checkmark$
	Modem Transfer	$\checkmark$	-
Transfer	SIO Transfer (COM Connection)	$\checkmark$	-
	Memory loader feature	$\checkmark$	$\checkmark$
	CF/SD Card Connection	-	-
	Connection Key	-	$\checkmark$

\*1: Depends on the type of connected PLC/Device. \*2: If this model is used as a master station, performance may deteriorate.

GP-Pro EX Feature		AGP-3200T/A	ST-6200WA
	Change Backlight Color	✓ (AGP-3200A only)	
	Clock Update Settings	-	$\checkmark$
	Start Screen Settings	-	$\checkmark$
	Date format on CSV file output	$\checkmark$	$\checkmark$
	Divide destination folders by file numbers	$\checkmark$	$\checkmark$
	Increase Alarm Type [Extended] settings and Text Table index numbers	-	-
	Alarm Message Multiple Line Display	$\checkmark$	$\checkmark$
	Attach Data Value to Operation Log	$\checkmark$	$\checkmark$
Common	Changing passwords at run time (CSV file)	$\checkmark$	$\checkmark$
Settings	Changing passwords at run time (password change screen)	-	$\checkmark$
	Append Date/Time to CSV File Name	-	$\checkmark$
	Transfer sampling CSV file to FTP	-	$\checkmark$
	Transferring sampled data to the cloud	-	$\checkmark$
	Indirectly specify Sampling Frequency and Alarm Settings	$\checkmark$	$\checkmark$
	Sampling data/Enhanced recipe data format co-exist	-	$\checkmark$
	Create a recipe (CSV data) index file at runtime	-	$\checkmark$
	Enhanced Recipes	-	$\checkmark$
	Extended Script copy file function	-	$\checkmark$
	Global Trigger	-	$\checkmark$

GP-Pro EX Feature		AGP-3200T/A	ST-6200WA
	Movie record/play feature	-	
	Use Image unit	-	-
Common Settings	Sound Output Feature	-	-
Counigo	AUX	-	-
	Retentive Variables Function	-	$\checkmark$
	Selector List	$\checkmark$	$\checkmark$
	XY Graph (Historical Trend, Data Block Display Graph)	$\checkmark$	-
	Picture Display [CF Image Display] / [SD Image Display] for showing JPEG files	-	<ul> <li>✓USB storage can be used for the models without SD/CF card slots.</li> <li>*supported by Ver.4.09.450 or later</li> </ul>
	Indirectly specify a block of Alarm parts	$\checkmark$	$\checkmark$
	Special Data Display [File Manager] sort function and default path	$\checkmark$	$\checkmark$
Parts	Special Data Display [File Manager] copy file to FTP	$\checkmark$	$\checkmark$
	Message Display's Bulletin Message	$\checkmark$	$\checkmark$
	Image Sensor Display	-	-
	Animation	$\checkmark$	$\checkmark$
	Alarm History Message Flow Display	-	$\checkmark$
	Alarm History / Sampling Data / Enhanced Recipe Data Refine Search / Sort Function	-	-
	Alarm Analysis Function	-	-

GP-Pro EX Feature		AGP-3200T/A	ST-6200WA
	Logic Program Operation	-	$\checkmark$
Logic	I/O Driver	-	-
	Function Block	-	$\checkmark$
	RPA Function (end of support from Ver.4.09.400)	-	-
	GP-Viewer EX	$\checkmark$	$\checkmark$
	Web Server (end of support from Ver.4.09.450)	-	-
	Camera-Viewer EX	-	-
Network	Pro-face Remote HMI	-	$\checkmark$
	E-mail	-	$\checkmark$
	GP Remote Printer Server	-	$\checkmark$
	Pro-face Connect (models you can register as SiteManager)	-	$\checkmark$
	Pro-Server EX	$\checkmark$	$\checkmark$
	USB Keyboard	$\checkmark$	$\checkmark$
Input	EZ Illuminated Switch	-	$\checkmark$
Equipment / Peripheral Equipment (USB Device)	EZ Tower Light	-	$\checkmark$
	EZ Numpad	-	$\checkmark$
	EZ Fingerprint Recognition Unit	-	$\checkmark$
	EZ LAN Adapter	-	-

## 3-2. Software Compatibility – Supported Software Version

Supported Software	AGP-3200T/A	ST-6200WA	Compatibility of Project Data	
GP-Pro EX	$\checkmark$	✓ Ver. 4.09.200 or later		
	https://www.pro-face.com/otasuke/files/manual/gpproex/new/refer/gpproex.htm			
Pro-Server EX	$\checkmark$	✓ Ver. 1.37.200 or later		
	https://www.pro-face.com/otasuke/files/manual/soft/server_ex/v1_37/ref/SRPreface.htm			
Pro-face Remote HMI (iOS/Android)	-	✓ Ver. 1.60 or later	NUTINA	
		https://www.pro-face.com/otasuke/qa/remotehmi/faq.html	NEW	
Pro-face Remote HMI Client for Win	-	✓ Ver. 1.42 or later	NICIAL	
		https://www.proface.com/en/product/soft/remotehmi_client/download	NEW	
Pro-face Connect	-	✓ Ver. 9.6 or later	NEW	
		https://www.proface.com/en/product/soft/proface_connect/download		



## 3-3. Other Important Notes on Software

About Blink function

**GP3000 Series** 

• ST6000 Series do not support Blink function. Therefore, if you use the blink settings in GP3000 Series, the settings will be cancelled after changing the display to ST6000 Series in GP-Pro EX.

🍰 Text					×
	Direct Text	O Text Table	•		
AD (	Display A	tandard Font V	Text Size	40 x 80 Pixels	~
A B C	Language	lorizontal 🗸	Text Attribute	Nomal	~
	Color				
	Text Color	7	Blink	Medium $\checkmark$	
EEE	Background Color	Transparent	✓ Blink	None $\vee$	
Line Spacing 0 🔶 🧱	Shadow Color	1	Blink	None $\vee$	
Text					
<					>
			OK	(O) Car	ncel

#### After converting the project to ST6000 Series

Text						×
	Oirect Text	◯ Text	Table			
	Font					
	Font Type	Standard Font	∼ Te	xt Size	40 x 80 Pixels	~
A B C	Display Language	ASCII	$\sim$			
$\Lambda D \cup$			Te	xt Attribute	Normal	$\sim$
	Direction	Horizontal	$\sim$	Alignment		
	Color		-			
	Text Color	7	~			
EEE	Background Co	olor Transparer	nt 🗸			
	Shadow Color	1				
e Spacing 🛛 🕹 🏢						
e Spacing V v 🗰						_
·						
·						

**NOTE:** We have a workaround to add blink functions to some of the parts/texts on ST6000 display by using the functions of the configuration software, GP-Pro EX. Refer to the following FAQ for the setting procedures. https://www.proface.com/en/support/fag/FAQ000268649



## 3-3. Other Important Notes on Software

- About Display colors (GP-3200A only)
  - The display color of GP-3200A is monochrome. As ST6000 Series do not support monochrome display, if you change the model to ST6000 Series, the display color will be changed to Color display. Therefore, after changing the model, be sure to check the color of the screen data with GP-Pro EX.



## **Pro-face**<sup>™</sup>

by Schneider Electric